

## Lubrication Maintenance

Equipment	Part No.	Equipment Description	Equipment No. (Ellipse)	Oil/Grease	Lubrication Type	Quantity	Quantity Units	Frequency	Frequency Units (days, weeks...etc.)	Comments
Borger pump	Gear Unit Intermediate Chamber	Gear Box Unit	0420-PMP-1001	oil	Mineral Lubricants	370 mL		12 months		Ensure to check the intermediate chamber to determine if any foreign matter is seen lubricant is to be replaced and pump to be cleaned internally. Mechanical Seals to be replaced as noted in Manual. If not replace lubricant in degsignated time.
Borger pump		Intermediate Chamber	0420-PMP-1001	oil	Mineral Lubricants	270 mL		12 months		
Compressor 1		Oil tank used to lubricate necessary parts	1011-CPR-0001	Oil	Synthetic	3000 mL		12 months		Ensure first change over is the CompAir 4000 Lubricant and then afterwards the DIN-VDL-ISO VG46 can be used as an option Ensure first change over is the CompAir 4000 Lubricant and then afterwards the DIN-VDL-ISO VG46 can be used as an option
Compressor 2		Oil tank used to lubricate necessary parts	1011-CPR-0002	Oil	Synthetic	3000 mL		12 months		