JOB PLANS



DESCRIPTION:	Settling Tank Services	FREQUENCY:	
LOCATION:	Various Locations	STANDARD JOB No.:	

Tools & Equipment
Spare Parts/Materials List
Castrol EPL2 Grease
Castrol SP220 oil
Maintenance Group
Settling Tank
Procedural Steps
Before isolating any equipment where possible observe in running condition. Check for correct operation.
Settling Tank Minor Service
Run bridge and check:
Drive gearbox for leaks / noise / vibration
Drive Wheel and idle wheels for bearing noise / de-lamination
Centre Column Bearing for noise / vibration
Scum Scraper for damage
Scraper support chains, shackles and mounting points for defects
Run launder spray pump and check spray operation
Apply EPL2 grease to centre column, drive and idle wheel bearings.
Check all grease lines and grease nipples for defects.
Isolate bridge and perform lube maintenance:
Check drive primary /secondary gearbox for oil leaks & level. Top up if required with SP220.
Jack up bridge and check drive and idle wheel bearings for play in housing and/or shaft.
Check drive and idle wheels are secure on shaft.
Check chain and sprockets for wear and tear.
Drive Wheel and idle wheels for de-lamination.
Return to operational status.

Doc Id:FOR439Active Date:01/09/2021Revision 1OwnerSylvester HennessyPrinted:Page 1 of 2

Note: Printed copies of this document should be verified for currency against the published electronic copy.

JOB PLANS



DESCRIPTION:	Settling Tank Services	FREQUENCY:	
LOCATION:	Various Locations	STANDARD JOB No.:	

Run hrida	je and check:
	box for leaks / noise / vibration
	el and idle wheel for bearing noise / de-lamination
	lumn Bearing for noise / vibration
	aper for damage
Scraper su	upport chains, shackles and mounting points for defects
Run launde	er spray pump and check spray operation
Apply EPL	.2 grease to centre column, drive and idle wheel bearings.
Check all g	grease lines and grease nipples for defects.
solate bri	idge and perform lube maintenance:
Check driv	e primary/secondary gearbox for oil leaks. Carry out oil change with SP220.
lack up br	ridge and check drive and idle wheel bearings for play in housing and/or shaft.
Check driv	ve and idle wheels are secure on shaft.
Check cha	ain and sprockets for wear and tear.
Orive Whe	el and idle wheels for de-lamination.
	operational status.
	<u>, p </u>

Doc Id:FOR439Active Date:01/09/2021Revision 1OwnerSylvester HennessyPrinted:Page 2 of 2

Note: Printed copies of this document should be verified for currency against the published electronic copy.