



DESCRIPTION:	Mechanical - Service Heat Exchanger Air Cooler Water Chiller	FREQUENCY:	
LOCATION:	Various Locations	STANDARD JOB No.:	

Reference Material
Parker Hiross Hyperchill O&M Manual
Procedural Steps
Before isolating any equipment where possible observe in running condition. Check for correct operation.
Minor Service
Isolate unit.
Remove covers.
Remove prefilters and wash out with water.
Clean coolers.
Clean condenser fins.
Clean other section of unit where access is possible.
Visual check of overall condition of unit.
Check that compressor electrical absorption is within the data plate values.
Re-assemble and return to service.
Check for correct operation.

Doc Id:FOR451Active Date:01/12/2021Revision 1OwnerSylvester HennessyPrinted:Page 1 of 1

Note: Printed copies of this document should be verified for currency against the published electronic copy.