

DESCRIPTION:	Mechanical - Elmo L-BL2 Series Vacuum Pump	FREQUENCY:	
LOCATION:		STANDARD JOB No.:	

Reference Material		
Elmo Rietschle - Operating Instructions L-BL2		
Procedural Steps		
Before isolating any equipment where possible observe in running condition. Check for correct operation.		
Minor Service		
Check the hoses and hose connections for any leaks and for firm seating.		
Clean cooling fins of water cooler with compressed air.		
Drain and purge separator with clean water.		
Replace Water filter.		
Replace Air filter.		
Intermediate Service		
Check the hoses and hose connections for any leaks and for firm seating.		
Clean cooling fins of water cooler with compressed air.		
Drain and purge separator with clean water.		
Replace Operating Liquid		
Replace Water filter.		
Replace Air filter.		
Clean Unit		
Remove cover plate and protective grille.		
Have a catch container ready under the system.		
Open drain hole of installed unit.		
Operating liquid is discharged downward via the opening in the bottom of the separator.		
 WARNING Danger from rotating external fan of unit. To ensure safety, remount the cover plate and protective grille on the separator. 		
Briefly switch on system. Dirt will be flushed out of installed unit along with Operating Liquid and will be discharged downward through opening in bottom of separator.		
Shut down system again, secure and open as described above.		
Close drain hole of unit.		
Completely reassemble system.		
Replace Operating Liquid.		

Doc Id: FOR488 Active Date: 7/03/2023 Revision 1 Tyson Craig Printed: **Printed copies of this document should be verified for currency against the published electronic copy.** Owner Page 1 of 1

Note: