

DESCRIPTION:	6 Monthly Zone 1 Lubrication Maintenance	FREQUENCY:	6 Monthly
LOCATION:	ST18 Luggage Point WRP	STD JOB ID:	LTS024

Grease and Oils Required	Maintenance Group
Castrol AP3 Grease	Grit Dredger 1
Castrol EPL2 Grease	Grit Dredger 2
Castrol Mollub Alloy 936SF Open Gear Grease	PST Bridges 1A, 1B, 2A, 2B, 5 & 6
Castrol EPX 80W-90 (Spirax 80W 90)	Formic Acid Dosing Pump
Castrol Hyspin AWS68 (Tellus 68)	Effluent Water Pumps
Castrol Alpha SP320 (Omala 320)	
Castrol Alpha SP680 (Omala 680)	
Dry Lube Spray	
Castrol Hyspin AWH100	
Procedural Steps	
Grit Dredger 1	
Grit Dredger Bridge Assembly	
Grease all wheel bearings on drive shaft (2 each side) with EPL2 Grease	
Grease all bogey wheel bearings with EPL2 Grease	
Pump	
Grease motor bearing with 2 shots of AP3 grease.	
Check belt tension and condition. Tension if needed.	
Check condition of pump and motor pulleys.	
Check oil level and top up in needed with Castrol Hyspin AWH100 checking for contaminants.	
Travel Drive	
Check gearbox oil level and top up with SP320 if required.	
Grit Hopper	
Grease Hopper Valve shaft spindle with Mollub Alloy 936SF grease.	
Grit Dredger 2	
Grit Dredger Bridge Assembly	
Grease all wheel bearings on drive shaft (2 each side) with EPL2 Grease	
Grease all bogey wheel bearings with EPL2 Grease	
Pump	
Grease motor bearing with 2 shots of AP3 grease.	
Check belt tension and condition. Tension if needed.	
Check condition of pump and motor pulleys.	
Check oil level and top up in needed with Castrol Hyspin AWH100 checking for contaminants.	

DESCRIPTION:	6 Monthly Zone 1 Lubrication Maintenance	FREQUENCY:	6 Monthly
LOCATION:	ST18 Luggage Point WRP	STD JOB ID:	LTS024

	Travel Drive
	Check gearbox oil level and top up with SP320 if required.
	Grit Hopper
	Grease Hopper Valve shaft spindle with Mollub Alloy 936SF grease.
	PST Bridges 1A, 1B.
	Check grease level in auto greaser canister and top up with EPL2 grease if required.
	Check grease lines for leaks and defects
	Remove Main Support Wheels bearing covers and check grease is being injected by auto greaser. If necessary remove grease lines and check flow of grease and for hardening of grease in the lines. Clean and recharge lines if necessary. ***Note - Boat or pontoon may be required for inside wheels.***
	Check oil in Main Drive Gearbox top up if required with Alpha SP320
	Remove guard and check condition of Motor to Main Drive Gearbox couplings.
	Check Cable Reeler gearbox oil top up if required with EPX 80W-90
	Check condition of Cable Reeler couplings.
	Lubricate Draw Off valves spindle with Mollub Alloy Open Gear Grease. 1A (2 of)
	Lubricate Draw Off valves spindle with Mollub Alloy Open Gear Grease. 1B (2 of)
	Inlet Penstock 1A
	Fill Auto Lube with AP2 grease
	Inlet Penstock 1B
	Fill Auto Lube with AP2 grease
	Outlet Penstock 1A
	Fill Auto Lube with AP2 grease
	Outlet Penstock 1B
	Fill Auto Lube with AP2 grease
	Scraper Hoist 1A
	Check oil in Scraper Hoist Gearbox top up if required with Alpha SP320
	Remove guard and check condition of Motor to Gearbox couplings.
	Lubricate drive sprockets and drive chain with Mollub Alloy open gear grease
	Visual inspect lifter shaft bearings and blocks for defects.
	Lubricate adjusting arm pivot points with Dry Lube Spray

DESCRIPTION:	6 Monthly Zone 1 Lubrication Maintenance	FREQUENCY:	6 Monthly
LOCATION:	ST18 Luggage Point WRP	STD JOB ID:	LTS024

Scraper Hoist 1B
Check oil in Scraper Hoist Gearbox top up if required with Alpha SP320
Remove guard and check condition of Motor to Gearbox couplings.
Lubricate drive sprockets and drive chain with Mollub Alloy open gear grease
Visual inspect lifter shaft bearings and blocks for defects.
Lubricate adjusting arm pivot points with Dry Lube Spray
Side Scrapers 1A
Check oil in Scraper Drive Gearbox top up if required with Alpha SP320
Remove coupling cover and check condition of couplings and rubbers
Lubricate chains and adjusting screws Mollub Alloy open gear grease
Grease idler sprocket bearings with EPL2 Grease
Grease chain tensioner bearings with EPL2 Grease
Lubricate adjusting arm pivot points with Dry Lube Spray
Check guide and support wheels for operation and condition.
Side Scrapers 1B
Check oil in Scraper Drive Gearbox top up if required with Alpha SP320
Remove coupling cover and check condition of couplings and rubbers
Lubricate chains and adjusting screws Mollub Alloy open gear grease
Grease idler sprocket bearings with EPL2 Grease
Grease chain tensioner bearings with EPL2 Grease
Lubricate adjusting arm pivot points with Dry Lube Spray
Check guide and support wheels for operation and condition.
PST Bridges 2A, 2B.
Check grease level in auto greaser canister and top up with EPL2 grease if required.
Check grease lines for leaks and defects
Remove Main Support Wheels bearing covers and check grease is being injected by auto greaser. If necessary remove grease lines and check flow of grease and for hardening of grease in the lines. Clean and recharge lines if necessary. ***Note - Boat or pontoon may be required for inside wheels.***
Check oil in Main Drive Gearbox top up if required with Alpha SP320
Remove guard and check condition of Motor to Main Drive Gearbox couplings.
Check Cable Reeler gearbox oil top up if required with EPX 80W-90
Check condition of Cable Reeler couplings.
Lubricate Draw Off valves spindle with Mollub Alloy Open Gear Grease. 1A (3 of)
Lubricate Draw Off valves spindle with Mollub Alloy Open Gear Grease. 1B (3 of)

DESCRIPTION:	6 Monthly Zone 1 Lubrication Maintenance	FREQUENCY:	6 Monthly
LOCATION:	ST18 Luggage Point WRP	STD JOB ID:	LTS024

Inlet Penstock 2A
Fill Auto Lube with AP2 grease
Inlet Penstock 2B
Fill Auto Lube with AP2 grease
Outlet Penstock 2A
Fill Auto Lube with AP2 grease
Outlet Penstock 2B
Fill Auto Lube with AP2 grease
Scraper Hoist 2A
Check oil in Scraper Hoist Gearbox top up if required with Alpha SP320
Remove guard and check condition of Motor to Gearbox couplings.
Lubricate drive sprockets and drive chain with Mollub Alloy open gear grease
Visual inspect lifter shaft bearings and blocks for defects.
Lubricate adjusting arm pivot points with Dry Lube Spray
Scraper Hoist 2B
Check oil in Scraper Hoist Gearbox top up if required with Alpha SP320
Remove guard and check condition of Motor to Gearbox couplings.
Lubricate drive sprockets and drive chain with Mollub Alloy open gear grease
Visual inspect lifter shaft bearings and blocks for defects.
Lubricate adjusting arm pivot points with Dry Lube Spray
Side Scrapers 2A
Check oil in Scraper Drive Gearbox top up if required with Alpha SP320
Remove coupling cover and check condition of couplings and rubbers
Lubricate chains and adjusting screws Mollub Alloy open gear grease
Grease idler sprocket bearings with EPL2 Grease
Grease chain tensioner bearings with EPL2 Grease
Lubricate adjusting arm pivot points with Dry Lube Spray
Check guide and support wheels for operation and condition.

DESCRIPTION:	6 Monthly Zone 1 Lubrication Maintenance	FREQUENCY:	6 Monthly
LOCATION:	ST18 Luggage Point WRP	STD JOB ID:	LTS024

Side Scrapers 2B
Check oil in Scraper Drive Gearbox top up if required with Alpha SP320
Remove coupling cover and check condition of couplings and rubbers
Lubricate chains and adjusting screws Mollub Alloy open gear grease
Grease idler sprocket bearings with EPL2 Grease
Grease chain tensioner bearings with EPL2 Grease
Lubricate adjusting arm pivot points with Dry Lube Spray
Check guide and support wheels for operation and condition.
PST Bridge 5
Remove Main Support Wheel bearing covers. Check grease for contamination and repack if required with EPL2 grease
Grease drive sprocket bearings using with EPL2
Grease main drive shaft bearings using with EPL2
Check oil in Main Drive Gearbox with Alpha SP220
Grease drive shaft bearings with EPL2 Grease.
Check cable reeler gearbox oil with EPX 80W-90
Check condition of cable reeler couplings.
Lubricate Draw Off valve spindles with Mollub Alloy Open Gear Grease. (3 of)
Inlet Penstock
Fill Auto Lube with AP2 grease
Outlet Penstock
Fill Auto Lube with AP2 grease
Scraper Hoist
Check oil in Scraper Hoist Gearbox with Alpha SP320.
Inspect lifter shaft bearings and grease with EPL2 grease.
Side Scrapers
Check oil in Scraper Drive Gearbox with Alpha SP320
Remove coupling cover and check condition of couplings and rubbers.
Lubricate chains and adjusting screws Mollub Alloy open gear grease
Grease idler sprocket bearings with EPL2 Grease
Grease chain tensioner bearings with EPL2 Grease
Grease scraper lift ramp rollers with EPL2 grease
Grease main drive sprocket bearings with EPL2 grease.
Grease main support wheel bearings with EPL2 grease.

DESCRIPTION:	6 Monthly Zone 1 Lubrication Maintenance	FREQUENCY:	6 Monthly
LOCATION:	ST18 Luggage Point WRP	STD JOB ID:	LTS024

PST Bridge 6
Remove Main Support Wheel bearing covers. Check grease for contamination and repack if required with EPL2 grease
Grease drive sprocket bearings using with EPL2
Grease main drive shaft bearings using with EPL2
Check oil in Main Drive Gearbox with Alpha SP220
Grease drive shaft bearings with EPL2 Grease.
Check cable reeler gearbox oil with EPX 80W-90
Check condition of cable reeler couplings.
Lubricate Draw Off valve spindles with Mollub Alloy Open Gear Grease. (3 of)
Inlet Penstock
Fill Auto Lube with AP2 grease
Outlet Penstock
Fill Auto Lube with AP2 grease
Scraper Hoist
Check oil in Scraper Hoist Gearbox with Alpha SP320.
Inspect lifter shaft bearings and grease with EPL2 grease.
Side Scrapers
Check oil in Scraper Drive Gearbox with Alpha SP320
Remove coupling cover and check condition of couplings and rubbers.
Lubricate chains and adjusting screws Mollub Alloy open gear grease
Grease idler sprocket bearings with EPL2 Grease
Grease chain tensioner bearings with EPL2 Grease
Grease scraper lift ramp rollers with EPL2 grease
Grease main drive sprocket bearings with EPL2 grease.
Grease main support wheel bearings with EPL2 grease.
Effluent Water Pump Unit 1
Grease Pumps and Motors 6 –8 shots of AP3 grease
Remove coupling guard and check condition of couplings and rubbers.

DESCRIPTION:	6 Monthly Zone 1 Lubrication Maintenance	FREQUENCY:	6 Monthly
LOCATION:	ST18 Luggage Point WRP	STD JOB ID:	LTS024

	Effluent Water Pump Unit 2
	Grease Pumps and Motors 6 –8 shots of AP3 grease
	Remove coupling guard and check condition of couplings and rubbers.
	Formic Acid Dosing Pump
	Check oil top up if required with EPX 80W-90
	Raw Sludge Pump 1
	Remove coupling guard and check condition of couplings and rubbers.
	Check oil top up if required with Castrol Hyspin AWH100 checking for contaminants.
	Raw Sludge Pump 2
	Remove coupling guard and check condition of couplings and rubbers.
	Check oil top up if required with Castrol Hyspin AWH100 checking for contaminants.
	Raw Sludge Pump 3
	Remove coupling guard and check condition of couplings and rubbers.
	Check oil top up if required with Castrol Hyspin AWH100 checking for contaminants.
	Raw Sludge Pump 4
	Remove coupling guard and check condition of couplings and rubbers.
	Check oil top up if required with Castrol Hyspin AWH100 checking for contaminants.
	Raw Sludge Pump 5
	Remove coupling guard and check condition of couplings and rubbers.
	Check oil top up if required with Castrol Hyspin AWH100 checking for contaminants.
	Raw Sludge Pump 6
	Remove coupling guard and check condition of couplings and rubbers.
	Check oil top up if required with Castrol Hyspin AWH100 checking for contaminants.