

DESCRIPTION:	6 Monthly Zone 4 Lubrication and Service	FREQUENCY:	6 Months
LOCATION:	Bundamba Sewerage Treatment Plant	STANDARD JOB No.:	LTS306

S	Spare Parts/Materials List
C	Castrol LMX Grease
C	Castrol EPL2 Grease
C	Castrol SP220 oil
_	Deference
<u> </u>	Reference
Ν	Maintenance Group
S	Secondary Settling Tank 3
Е	BFP / GDD
Ν	Macerator (Mono Muncher)
S	Sludge feed Pumps
F	Poly Dosing Pumps
V	VAS Storage Tank Mixer
_	Procedural Steps
E	Before isolating any equipment where possible observe in running condition. Check for correct operation
S	Secondary Settling Tank 3
F	Run bridge and check:
	Orive gearbox for leaks / noise / vibration
	Orive Wheel and idle wheel for bearing noise / de-lamination
C	Centre Column Bearing for noise / vibration
S	Scum Scraper for damage
S	Scraper support chains , shackles and mounting points for defects
A	Apply EPL2 grease to centre column, drive and idle wheel bearings.
C	Check all grease lines and grease nipples for defects.
ļ	solate bridge and perform lube maintenance:
C	Check bridge drive primary /secondary gearbox oil levels and for contamination. Top up as required with SP220
J	ack up bridge and check drive and idle wheel bearings for play in housing and/or shaft.
	Check drive and idle wheels are secure on shaft.

Doc Id:FOR832Active Date:01/07/2017Revision: 2OwnerMatthew DellawayPrinted:Page 1 of 2

Note: Printed copies of this document should be verified for currency against the published electronic copy.



DESCRIPTION:	6 Monthly Zone 4 Lubrication and Service	FREQUENCY:	6 Months
LOCATION:	Bundamba Sewerage Treatment Plant	STANDARD JOB No.:	LTS306

BFP/GDD1&2	2				
Check BFP drive	e gearbox oil levels and for contamination. Top up as required with SP220.				
Check Variator c	drive belt for wear and tear				
Check GDD drive gearbox oil levels and for contamination. Top up as required with SP220.					
Check all auto lu	ube canisters and top up with EPL2 grease.				
Check condition	of all belts				
Check condition	of all rollers				
Check all roller b	pearings for noise and/or overheating.				
<u> </u>					
Macerator					
Check Macerato	or drive gearbox oil level and for contamination. Top up as required with SP220.				
Grease macerate	tor. Apply Castrol AP3 grease to grease nipple below drive gearbox.				
Sludge Feed Pu	umps (3 of)				
Check Sludge Fe	eed Pump drive gearbox oil levels and for contamination. Top up as required with SP220.				
Poly Dosing Pu	imps (3 of)				
Check Poly Dosi	ing Pump drive gearbox oil levels and for contamination. Top up as required with SP220.				
WAS Storage T	ank Mixer				
Check mixer for	noise and vibration				
Check davit and	winch for defects				
i i					

Doc Id:FOR832Active Date:01/07/2017Revision: 2OwnerMatthew DellawayPrinted:Page 2 of 2

Note: Printed copies of this document should be verified for currency against the published electronic copy.