

<b>DESCRIPTION:</b>	Intermediate Zone 1 Lubrication & Service Maintenance	<b>FREQUENCY:</b>	6 Months
<b>LOCATION:</b>	Gatton Sewerage Treatment Plant	<b>STANDARD JOB No.:</b>	LTS501

	<b>Tools &amp; Equipment</b>
	<b>Spare Parts/Materials List</b>
	Castrol LMX Grease
	Castrol SP220 Oil
	<b>Reference</b>
	<b>Maintenance Group</b>
	Septage Receival Pump Station
	Screening Rake
	Primary Tank Scum Pump Station
	Primary Settling Tank
	Sludge Recirculation Pumps
	<b>Procedural Steps</b>
	<b>Before isolating any equipment, where possible observe in running condition. Check for correct operation.</b>
	<b>Septage Receival Pump Station</b>
	Check oil in Septage Receival Pump element. Top up with SP220 if required.
	Apply 2 shots of LMX grease to each of the 6 grease points on the Rake Screen pivot mechanism.
	<b>Screening Rake</b>
	Check for water in Rake Screen gearbox and check level. Top up with SP220 if required.
	<b>Primary Tank Scum Pump Station</b>
	Check oil in Primary Tank Scum Pump element. Top up with SP220 if required.

<b>DESCRIPTION:</b>	Intermediate Zone 1 Lubrication & Service Maintenance	<b>FREQUENCY:</b>	6 Months
<b>LOCATION:</b>	Gatton Sewerage Treatment Plant	<b>STANDARD JOB No.:</b>	LTS501

	<b>Primary Settling Tank</b>
	Jack up bridge and check condition of wheels and bearings.
	Apply 2 shots of LMX grease to Primary Tank Bridge wheels. (4 grease points)
	Apply 2 shots of LMX grease to Primary Tank Bridge pivot assembly. (3 grease points)
	Check oil in Primary Tank Bridge gearbox and check level. Top up with SP220 if required.
	<b>Sludge Recirculation Pumps</b>
	Check oil in Sludge Recirculation Pumps bearing housings and check level. Top up with SP220 if required.