

DESCRIPTION:	Major Service & Lubrication Maintenance	FREQUENCY :	12 Monthly
LOCATION :	ST051 Helidon Sewerage Treatment Plant	STANDARD JOB No. :	LTS510

	Tools & Equipment
	Spare Parts/Materials List
	Oil - Castrol Whitemor WOM 14
	Reference
	Maintenance Group
	Wetlands Pump Station
	Reed Beds Pump Station
	Safety Shower Pump
	Service Water Pump
	Submersible Pump In Polishing Lagoon
	Wet Weather Pump - Polishing Lagoon to Dam
	Contact Tank Pump
	Sodium Hypochlorite Dosing Pump - On Ground
	Procedural Steps
	Before isolating any equipment, where possible observe in running condition. Check for correct operation.
	Wetlands Pump Station
	Pump No.1
	Run pump checking for noise, vibration and leaks at sealing points.
	Remove pump checking ease of removal, jamming on guide rail, pipe work, etc.
	Inspect chains, shackles and eye bolts.
	Check locking plate for cracks, wear and deterioration.
	Remove pump from volute and inspect pump casing for cracks, cavitation and deterioration.
	If fitted, inspect pump wear rings gap.
	Check Impeller condition. If Macerator or Rag Cutter type fitted, adjust gap as required.
	Drain and replace oil, check for contaminants in oil.
	Replace pump and run checking sealing points
	Pump No.2
	Carry out same tasks as for pump 1.

DESCRIPTION:	Major Service & Lubrication Maintenance	FREQUENCY :	12 Monthly
LOCATION :	ST051 Helidon STP	JOB PLAN ID :	LTS510

Reed Beds Pump Station
Run pump checking for noise, vibration and leaks at sealing points.
Inspect chains, shackles and eye bolts.
Check Impeller condition. If Macerator or Rag Cutter type fitted, adjust gap as required.
Drain and replace oil, check for contaminants in oil.
Replace pump and run checking sealing points
Safety Shower Pump
Check pump while running for noise, leaks and/or vibration.
Service Water Pump
Check pump while running for noise, leaks and/or vibration.
Submersible Pump In Polishing Lagoon
Run pump checking for noise, vibration and leaks at sealing points.
Inspect chains, shackles and eye bolts.
Check Impeller condition. If Macerator or Rag Cutter type fitted, adjust gap as required.
Drain and replace oil, check for contaminants in oil.
Replace pump and run checking sealing points
Wet Weather Pump - Polishing Lagoon to Dam
Check pump while running for noise, leaks and/or vibration.
Remove coupling guard and check coupling alignment.
Check condition of coupling rubbers, elements, bolts, etc.
Check condition of couplings and rubbers.
If grease nipples fitted, grease pump and motor.
If pump has oil chamber, replace oil and check for contaminants.
Check tightness on all fasteners and for corrosion.
Contact Tank Pump
Check pump while running for noise, leaks and/or vibration.
Sodium Hypochlorite Dosing Pump (On Ground)
Check pump while running for noise, leaks and/or vibration.
Dosing pump on bund will be service under separate work order.