



# BRISBANE WATER

**Project STTX- generator Connection Boxes** 

# GENERATOR CONNECTION O & M Manual SP 239 Witton Rd



Issue:

Book 1 of 1


Date of Issue:

**JUNE 2004** 

Author:

**Brisbane Water Projects** 

Page 2 of 139

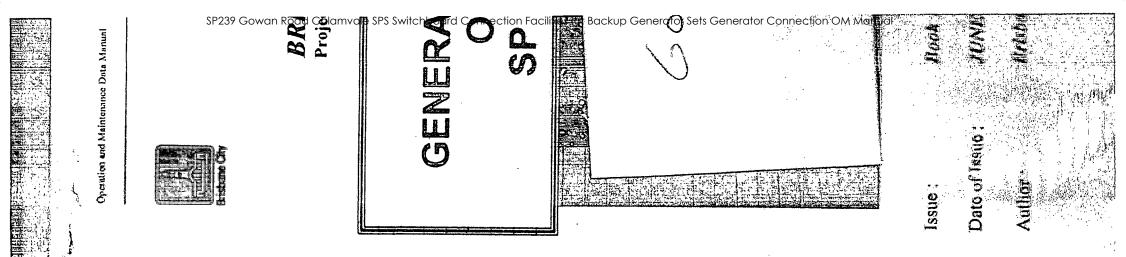

Client:

BRISBANE WATER

Brisbane Water

**Document Title:** 

SP 239 GOWAN

**GENERATOR CONNECTION** 

**OPERATION and MAINTENANCE MANUAL** 

Book 1 of 1





Q-Pulse Id TMS863 Active 10/12/2014 Page 4 of 139

# COMMON LOGIC PTY LTD

ACN. 011 029 262

### **Electrical Contractors**

# Contract BW.30178-02/03 Switchboard Connection Facilities for Backup Generator Sets at Sewerage PS

# Electrical Manual - WB239 Gowan Road

ISSUE NO 1 AS BUILT 21/06/2004

Unit 9/58 Wecker Road, Mansfield, Queensland 4122 Telephone (07) 3849 7449 Fax (07) 3343 5210 JH05





### **BRISBANE WATER**

# GENERATOR CONNECTION O & M Manual

# Section 1

- Generator Connection Description
- ATS Connection Diagram

# Section 2

Parts List

# Section 3

- Asbuilt Drawings
- Construction Markups

# Section 4

- Site Testing
- Site Testing Functional description
- Site Testing NCS alarms
- Site Testing Generator
- Electrical Test Certificate

# Section 5

· Parts information

Operation and Maintenance Data Manual





### **BRISBANE WATER**

# GENERATOR CONNECTION O & M Manual

# Section 1

**Generator Connection Description** 

COMMON LOGIC Pty Ltd Specialist Electrical Contractors		Electrical N	⁄anual
Subject: Semi Permanent Generator Change Over	r Switchgear	Sheet: 1 Of: 10	Section 1
Page Revision No: Date: 21/06/04	Manual Issue No:	1 Date: 21/06	/04
1.0 GENERAL			2
2.0 OPERATIONAL DESCRIPTION			3
2.1 GENERATOR 2.2 RTU			3 3
2.3 PUMP STARTER MCC 2.3.1. MCC MAIN SWITCH			3
2.3.1. MCC MAIN SWITCH 2.3.2. MAINS AVAILABLE INDICATOR			3 4
2.3.3. Mains Fail in MCC			4
2.3.4. Generator running.			4
2.4 ATS CUBICLE			4
2.4.1. GENERATOR INTERFACE			4
2.4.2. RTU INTERFACE 2.4.3. ATS AND CONTROL			5 5
2.4.3. ATS AND CONTROL			J
3.0 DRAWINGS			7
4.0 PART LIST			8
5.0 TEST SHEETS			9
6.0 TECHNICAL INFORMATION			10

JH05MC01

SP239 Gowan Road Calamyale SPS Switchboard Connection Facilities for Backup Generator Sets Generator Connection OM Manual

### **COMMON LOGIC Pty Ltd Specialist Electrical Contractors**

Electrical Manual

Subject: Semi Permanent Generator Change Over Switchgear

Sheet: 2 Of: 10 Section

Page Revision No:

Date: 21/06/04

Manual Issue No: 1 Date: 21/06/04

#### 1.0 **GENERAL**

The following document describes the operation of the switchgear and relays installed into the change over switchgear cubicle.

The document does NOT describe the detailed operation of the generator PLC or the operation of the pump starters on the site.

The generator is a plug in device and can be removed from site by BW at their discretion.

All sites are identical with respect to the control mechanism with only the size of the circuit breakers and associated switchgear changing.

SP232 Gowan Road Calamyale SPS Switchboard Connection Facilities for Backup Generator Sets Generator Connection OM Manual

### COMMON LOGIC Ptv Ltd **Specialist Electrical Contractors**

### Electrical Manual

Subject: Semi Permanent Generator Change Over Switchgear

Sheet: 3 Of: 10 Section 2

Page Revision No:

Date: 21/06/04

Manual Issue No: 1 Date: 21/06/04

#### 2.0 OPERATIONAL DESCRIPTION

There are four components to the system. These are the Generator, RTU, Pump MCC, and the Generator change over switchgear. The last component will be described within this document in detail. The remaining devices will be described in the BW manual.

#### 2.1 **GENERATOR**

The generator and associated PLC control all automatic aspects of the change over switchgear, in affect making the basic transfer switch into an Automatic Transfer switch (ATS). The ATS will only operate if the generator PLC is fully operational.

The operation of the ATS is NOT fail safe and will NOT return to a predetermined condition on failure of the generator PLC or associated wiring.

Mains fail timing and return to mains timing is all controlled within the generator PLC.

#### 2.2 RTU

The RTU monitors several generator alarm conditions and will report these conditions to the system as required.

The RTU can remotely start and stop the generator. The remote start will initiate a change over of the station to the generator. Stopping the generator will initiate a return to mains if available.

#### PUMP STARTER MCC 2.3

The pump starter MCC automatically starts and stops the pumps on demand determined by the wet well levels.

The starter has not been modified in any way to accommodate the generator ATS with the exception of the re-routing of the sub-mains cabling.

#### 2.3.1. MCC MAIN SWITCH

The Main Switch in all cases refers to the Energex supply point of isolation.

The existing main switch in the pump starter MCC, when labelled as the "Main Switch", will isolate the incoming Energex Mains Supply.

For complete isolation of the switchboards where an automatic generator system is supplied the generator must also be isolated.

This must be carried out at the generator CB in the generator canopy as well as switching the control to the "OFF" position.

Where a separate main switchboard has been installed the MCC Main Switch will

### **COMMON LOGIC Pty Ltd Specialist Electrical Contractors**

Electrical Manual

Subject: Semi Permanent Generator Change Over Switchgear

Sheet: 4 Of: 10 Section 2

Page Revision No:

Date: 21/06/04

Manual Issue No: 1 Date: 21/06/04

become the MCC Main Isolator. This isolator will isolate all incoming power to the MCC regardless of the generator condition.

#### 2.3.2. MAINS AVAILABLE INDICATOR

The mains available indicator mounted on the common control escutcheon is supplied by a 24VDC signal originating from the RTU control supply. The polarity of the signal on the unit is dependent on the type of RTU on the site.

The signal will be "ON" when the mains are healthy.

This relay does not monitor the level or the rotation of the generator supply and has no bearing on the running of the pumps.

#### 2.3.3. MAINS FAIL IN MCC

The mains fail relay in the MCC is the only device that assures the system has the correct rotation and supply available for the pumps to operate.

When re-connecting the generator to a site it is necessary to check the rotation is also correct.

#### 2.3.4. GENERATOR RUNNING.

The generator running indicator is supplied by a 24VDC signal from the generator battery system.

The indicator will be "ON" when the generator is running as determined by the generator PLC.

#### ATS CUBICLE 2.4

The ATS cubicle comprises 3 sections as described below. The control function of all sites is identical including all relays and components with the exception of the size of the transfer switch and associated connection hardware.

#### 2.4.1. GENERATOR INTERFACE

The generator interface is via a Clipsal 27 Pin plug and socket.

The multicore cable is connected core 1 to pin 1 and 2-2 etc.

The Multicore cable is labelled wire No. 601 for core 1 to pin 1 and No.602 - Core2-Pin2 etc.

This enables simple and quick reference to all wiring between the plug and the hardware within the ATS cubicle.

All signals received from the generator are arranged to switch a relay powered from the generator 24VDC system.

The exceptio to this is the "Generator Not On Site" signal, which wires directly to the RTU via the interface terminals.

All control signals to the Generator are via clean contacts. Both sides of the contact are issued to the generator. These contacts switch relays in the generator panel and are powered via the generator 24VDC system.

### COMMON LOGIC Pty Ltd **Specialist Electrical Contractors**

**Electrical Manual** 

Subject: Semi Permanent Generator Change Over Switchgear

Sheet: 5 Of: 10 Section 2

Page Revision No:

Date: 21/06/04

Manual Issue No: 1 Date: 21/06/04

#### 2.4.2. RTU INTERFACE

The RTU interface is via a hard wired loom or multicore cable and terminals. The Loom cable is specially numbered with the terminal numbers within the ATS cubicle. IE Core 23 is connected to terminal 23 and is labelled wire 623. If a Multicore cable is utilised then core 1 is connected to Terminal 23 the labelled wire No. 623 for core 2 to terminal 24 and No.624 etc.

This enables simple and quick reference to all wiring between the RTU and the hardware within the ATS cubicle.

The RTU connections are different for each site and may also have different polarities for each site according to the site hardware.

All signals received from the RTU are arranged to switch a relay powered from the RTU 24VDC system. IE Remote Start and Remote Stop only.

All signals to the RTU are via clean contacts. Both sides of the contact are issued to the RTU system. These contacts switch directly into the RTU Input cards. The voltage on these signal cables is 24VDC supplied from the RTU power supply.

#### 2.4.3. ATS AND CONTROL

The transfer switch is a Terasaki Basic Transfer switch.

The control of this switch is only achieved from the generator PLC. The PLC controls the relays GTSM and GTSG within the ATS panel.

Energising GTSM if the Mains Volts are available will open the Generator CB and Close the Mains CB.

Energising GTSG if the Generator Volts are available will open the Mains CB and Close the Generator CB.

If volts are not available the motors in the BTS will not operate. (IE stay in the last condition.

If the BTS does not operate the PLC will remove the transfer signal and assume a fault condition. This condition required manual operator intervention.

#### Manual Operation:

If manual operation is desired then the following steps must be carried out.

Please note that it is not necessary to remove any covers when manually operating the CB's.

If the PLC is issuing an undesirable status then the operation of the CB motors must first be isolated. This is best achieved by switching the CB's QM2 and QG1 to the off position. This removes the motor charge and open close commands to the operators.

### COMMON LOGIC Pty Ltd **Specialist Electrical Contractors**

Electrical Manual

Subject: Semi Permanent Generator Change Over Switchgear

Sheet: 6 Of: 10 Section 2

Page Revision No:

Date: 21/06/04

Manual Issue No: 1 Date: 21/06/04

If the PLC is not affecting the transfer switch these CB's may be left in the ON state.

#### Manual Open:

To open a CB press the trip button on the motor operator "OR" toggle the spring wind mechanism until the CB opens and the open state shows in the window.

#### Manual Close:

To close a CB wind the motor spring wind mechanism until the CB closes and the Closed state shows in the window.

#### Mains Fail detection:

The mains fail relay detects the condition of the mains and issues a mains fail start signal to the PLC.

The mains fail relay also operates the mains available indicator on the MCC common control panel.

The mains fail signal also issues a condition to the RTU to indicate mains failed when the relay is de-energised.

Operation and Maintenance Data Manual






### **BRISBANE WATER**

# GENERATOR CONNECTION O & M Manual


# Section 1A

**ATS Connection Diagram** 

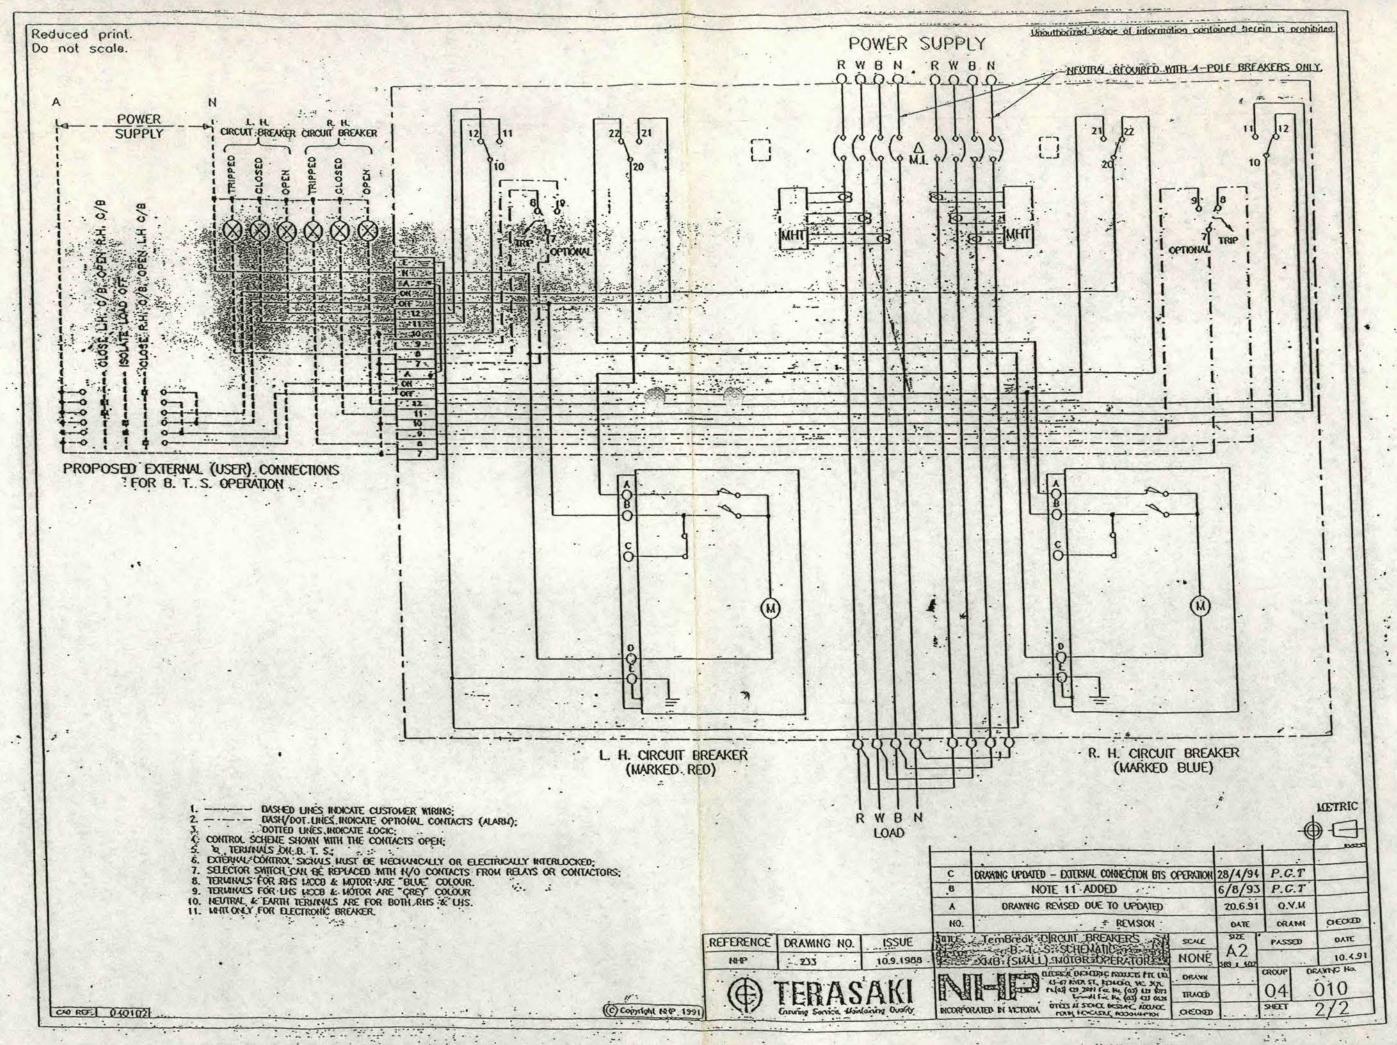

CONTROL OF THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF THE PARTY OF THE PROPERTY OF THE PARTY OF THE PART

Page 18 of 139

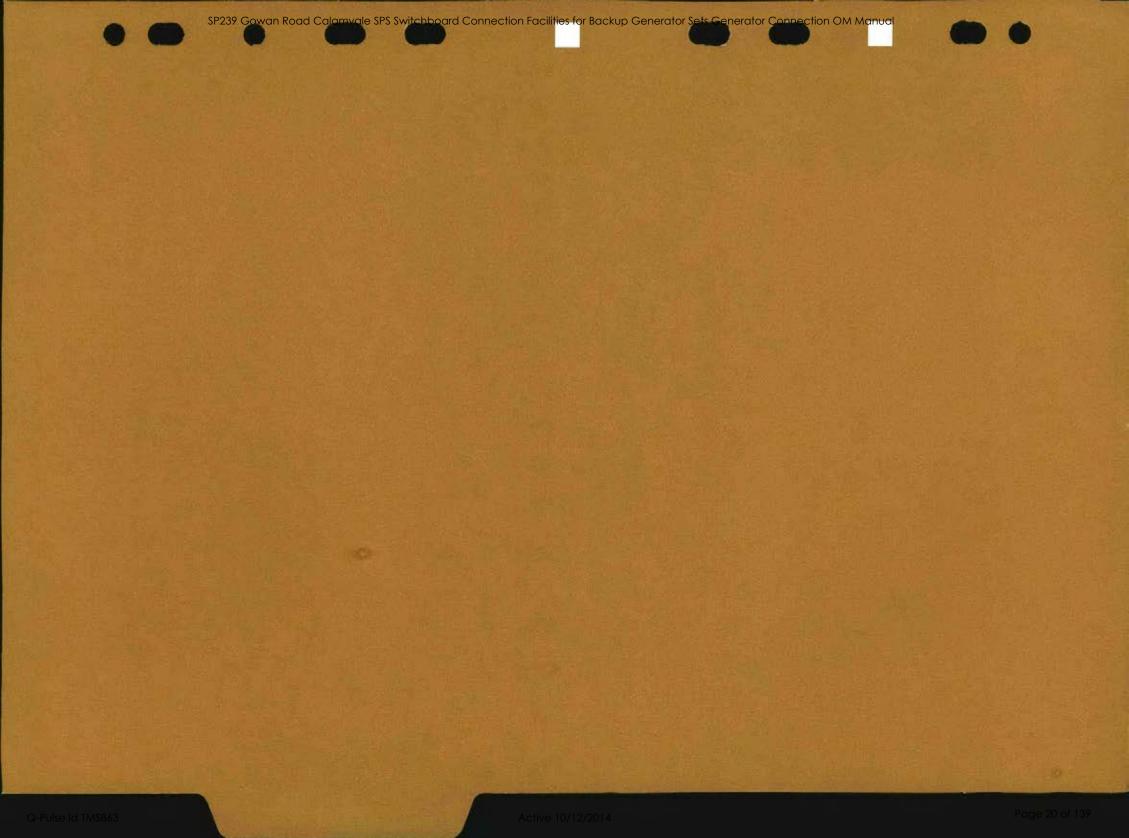

Operation and Maintenance Data Manual





### **BRISBANE WATER**

# GENERATOR CONNECTION O & M Manual

# Section 2

**Parts list** 

Q-Pulse Id TMS863

Supplier				
Name	Part No	Item Description	Manual Incert	
ABK	CLI56AI310	APPLIANCE INLET	Clipsal Web Page	
ABK	CLI56CSC310	EXTENSION SOCKETS	Clipsal Web Page	
ABK	CLIWIPM27	27 CONTROL PIN W/P INSUL PLUG HI-IMPACT	Clipsal Web Page	
Dore	BBLV50E	51MM INSULATOR STAND OFF	Dore Electrics Catalogue	
Dore	BBLV50H	600V STAND OFF INSULATOR	Dore Electrics Catalogue	
Dore	BBLV75S	600V STAND OFF INSULATOR TYPE C M10	Dore Electrics Catalogue	
NHP	93.2	JUMPER LINK 20WAY SUITS 38.5	NHP Catalogue F1	
NHP	96.72	2P 12AMP RELAY BASE FOR 56.32 RLY	NHP Catalogue F1	
NHP	96.74	4P 12AMP RELAY BASE FOR 56.34 RLY	NHP Catalogue F1	
NHP	38.51 24VDC	24V DC RELAY 1CO 6A	NHP Catalogue F1	
NHP	56.32 0074 24VDC	RELAY FPIN 2CO 12A 24VDC	NHP Catalogue F1	
NHP	56.34 24VDC	RELAY FPIN 4CO 12A 24VDC	NHP Catalogue F1	
NHP	99.013-024	LED & DIODE MODULE PLUG-IN	NHP Catalogue F1	
NHP	CS4-22Z-240VAC	2N/O 2N/C 240VAC RELAY	NHP Catalogue CA4	
NHP	BS8N833(AUTO)	TRANSFER SW BTSS800NJ80033 AUTO	NHP Catalogue Page	
NHP	CLSBB63033	630A BUSBAR LOAD SIDE 3P X63		
		LED LAMP BLOCK C/W COUPLER AMBER 24V		
NHP	D5-3NL3A	AC/DC	NHP Flyer D5-3NF	
		LED LAMP BLOCK C/W COUPLER AMBER 24V		
NHP	D5-3NL3A	AC/DC	NHP Flyer D5-3NF	
NHP	D5P-P5	YELLOW PILOT LIGHT STANDARD	NHP Web Page	
NHP	DPA-01-D-M48	PHASE FAIL/SEQ	NHP Flyer CGM	
NHP	DSRCB1030P	10A 2P DIN SAFE MCB WITH PIGTAIL	NHP Catalogue Page	
NHP	DSRCB1030P	10A 2P DIN SAFE MCB WITH PIGTAIL	NHP Catalogue Page	
NHP	DSRCBH1030A	DINT MCB/RCD 1P 10A 30MA 10KA	NHP Catalogue Page	
NHP	DSRCBH1030A	MCB/RCD 1P 10A 30MA 10KA DIN-T	NHP Catalogue Page	
NHP	DSRCBH3230A	MCB/RCD 1P 32A 10KA	NHP Catalogue Page	
NHP	DTCB10332C	DINT 10KA 3P 32A CB	NHP Catalogue Page	
NHP	DTCB6106C	DINT 6KA 1P 6A CB	NHP Catalogue Page	
NHP	DTCB6306C	DINT 6KA 3P 6A CB	NHP Catalogue Page	
NHP	NV20FW	FITTING FUSE HOLDER 20A CLIPIN F/W	NHP Flyer NCF-F	
<del></del>		L/BREAK SWITCH 3P 800A C/W STD HANDLE		
NHP	OETL800K3	& SHAFT	NHP Web Page	
NHP	OETLZX128	SHROUDS	NHP Web Page	
NHP	OXP12X325	EXTENDED SHAFT 12/325MM	NHP Web Page	
Pheonix	441504	EARTH TERMINALS	Pheonix Web Page	
Pheonix	800886	E/NS35N END CLAMP DIN RAIL	Pheonix Web Page	
Pheonix	3004362	UK5N 4MM FEEDTHRU TERMINAL GREY	Pheonix Web Page	





### **BRISBANE WATER**

# GENERATOR CONNECTION O & M Manual

# Section 3

**Asbuilt Drawings** 






# BRISBANE WATER

# GENERATOR CONNECTION O & M Manual


# Section 3A

**Construction Markups** 

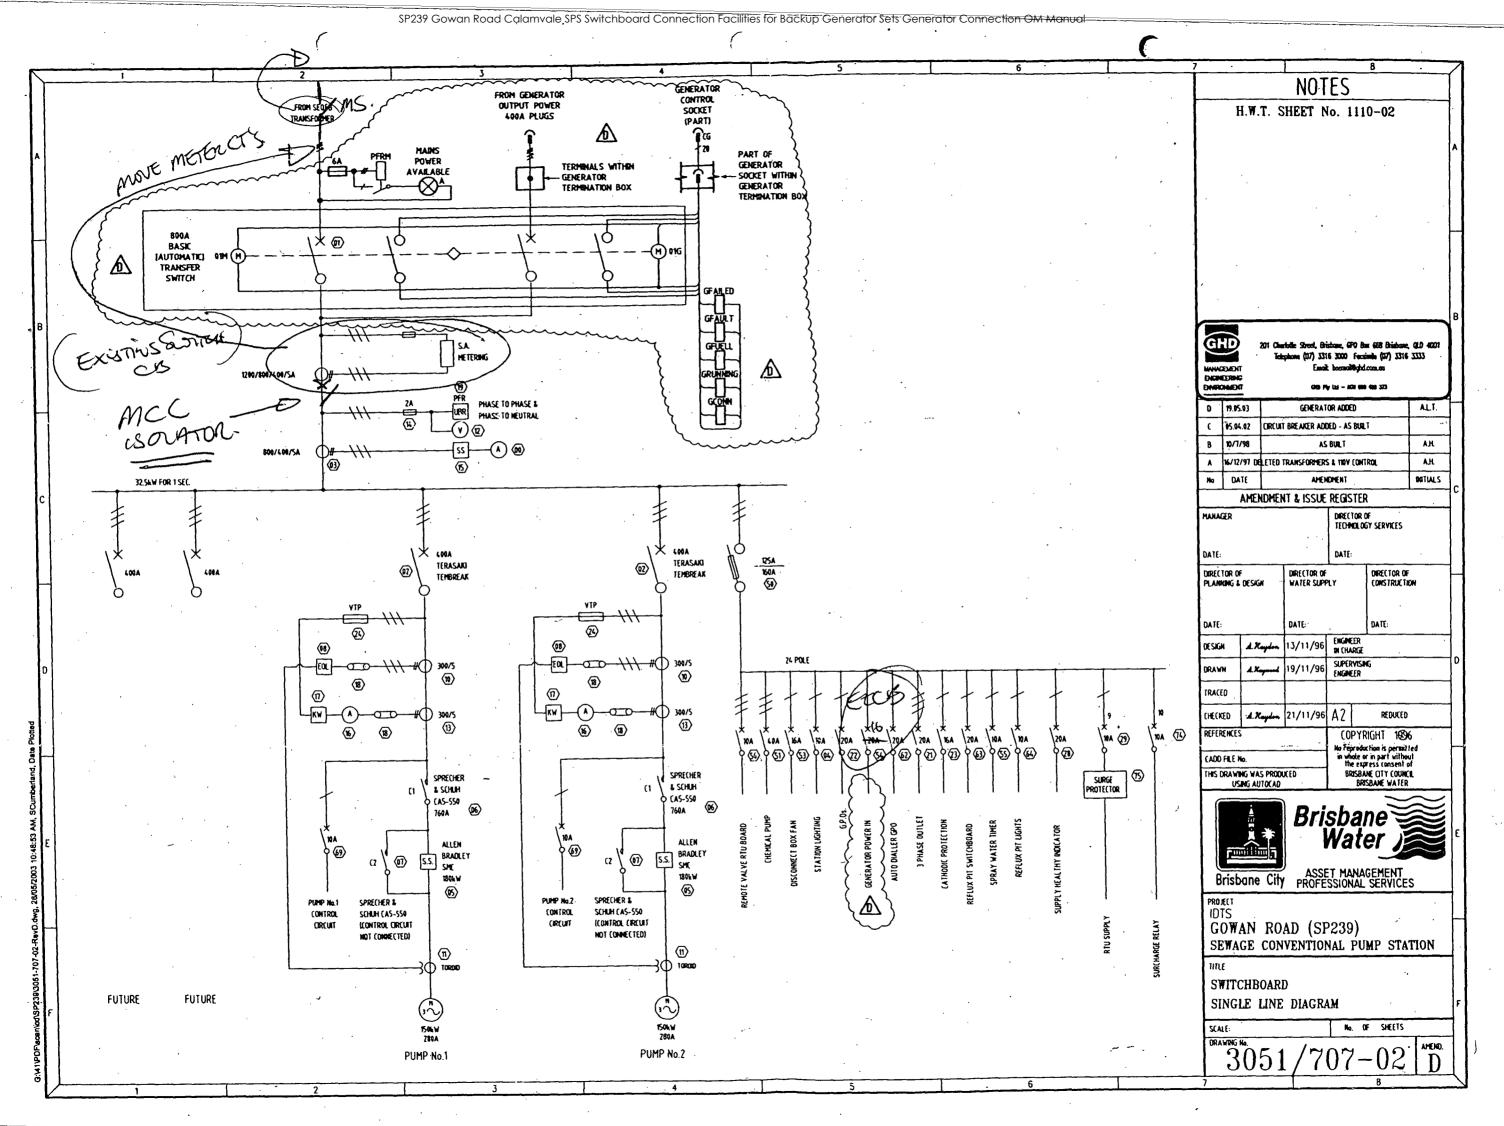


Page 26 of 139

G:W1\PDF\can\cd\SP239\3051-707-10-RevD.dwg, 26/05/2003 10:49:07 AM, SCumberland, Date Plotted

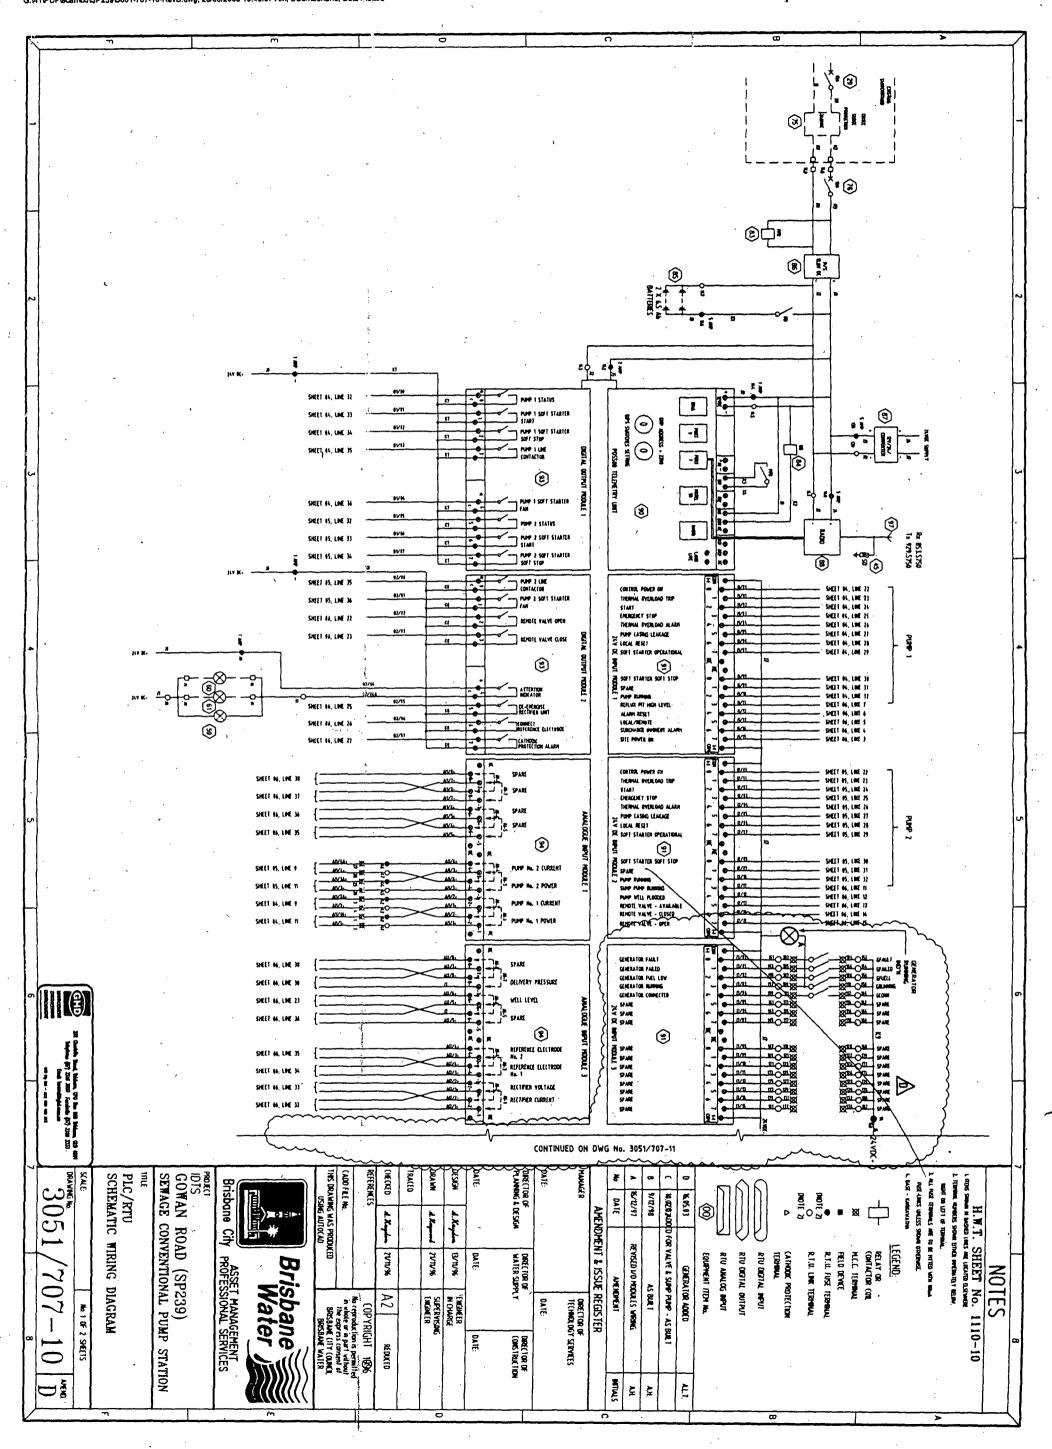


Page 28 of 139

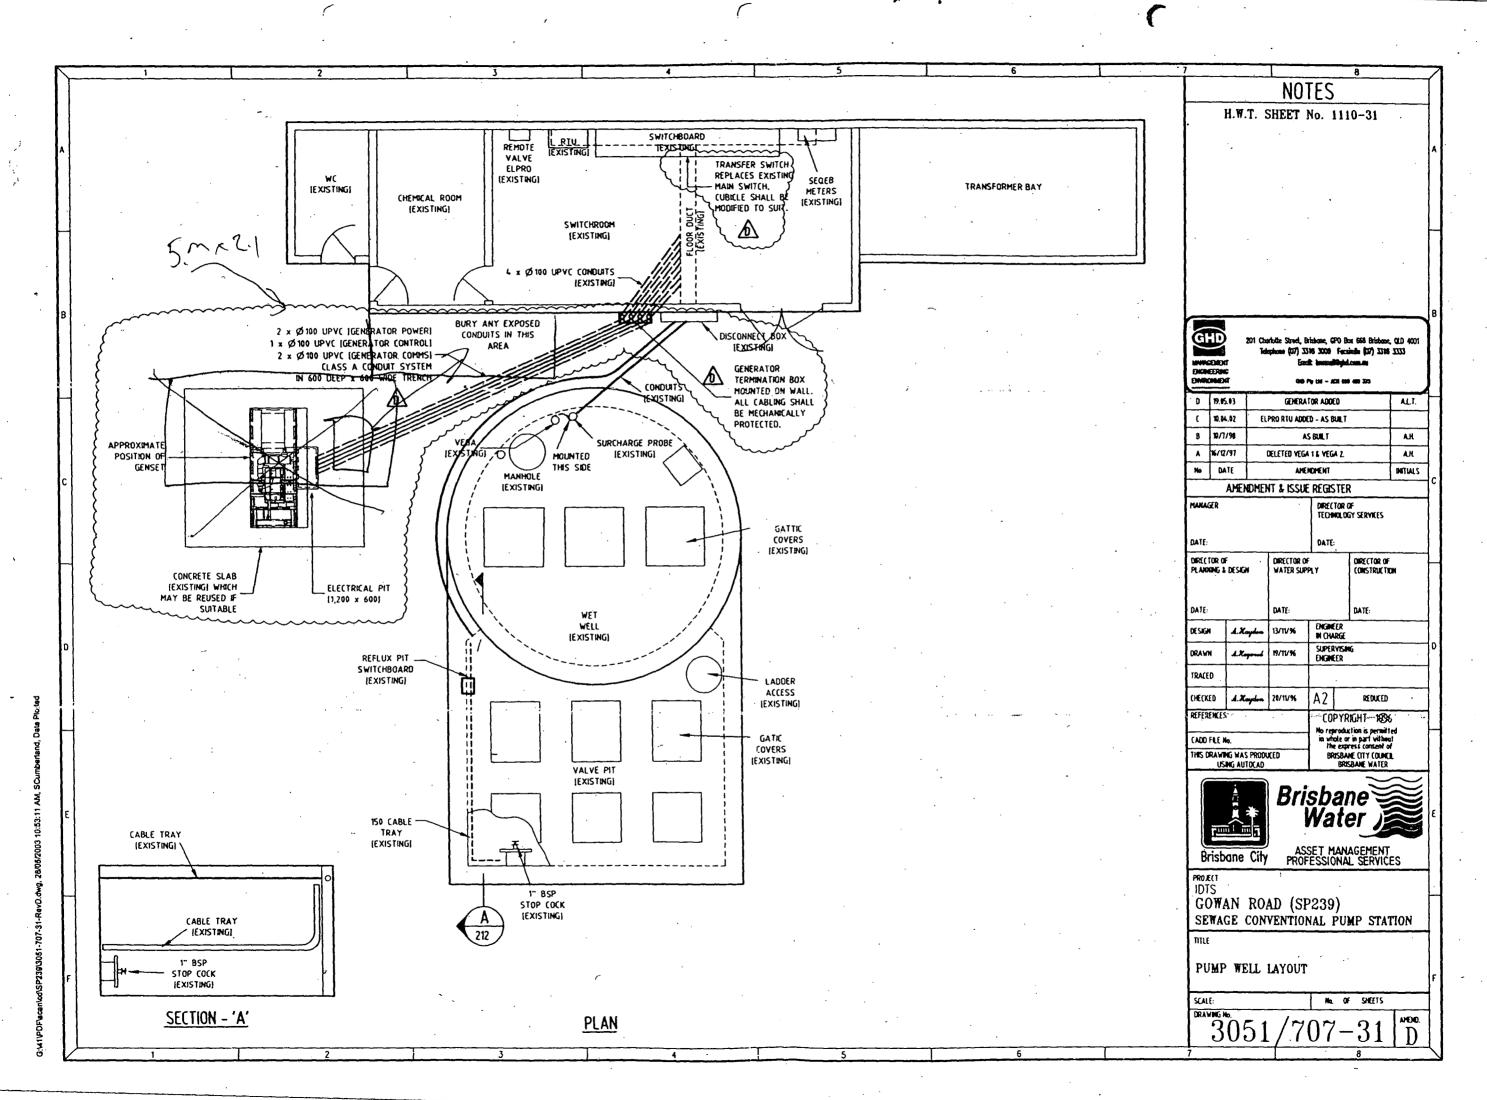


Page 30 of 139

Page 32 of 139

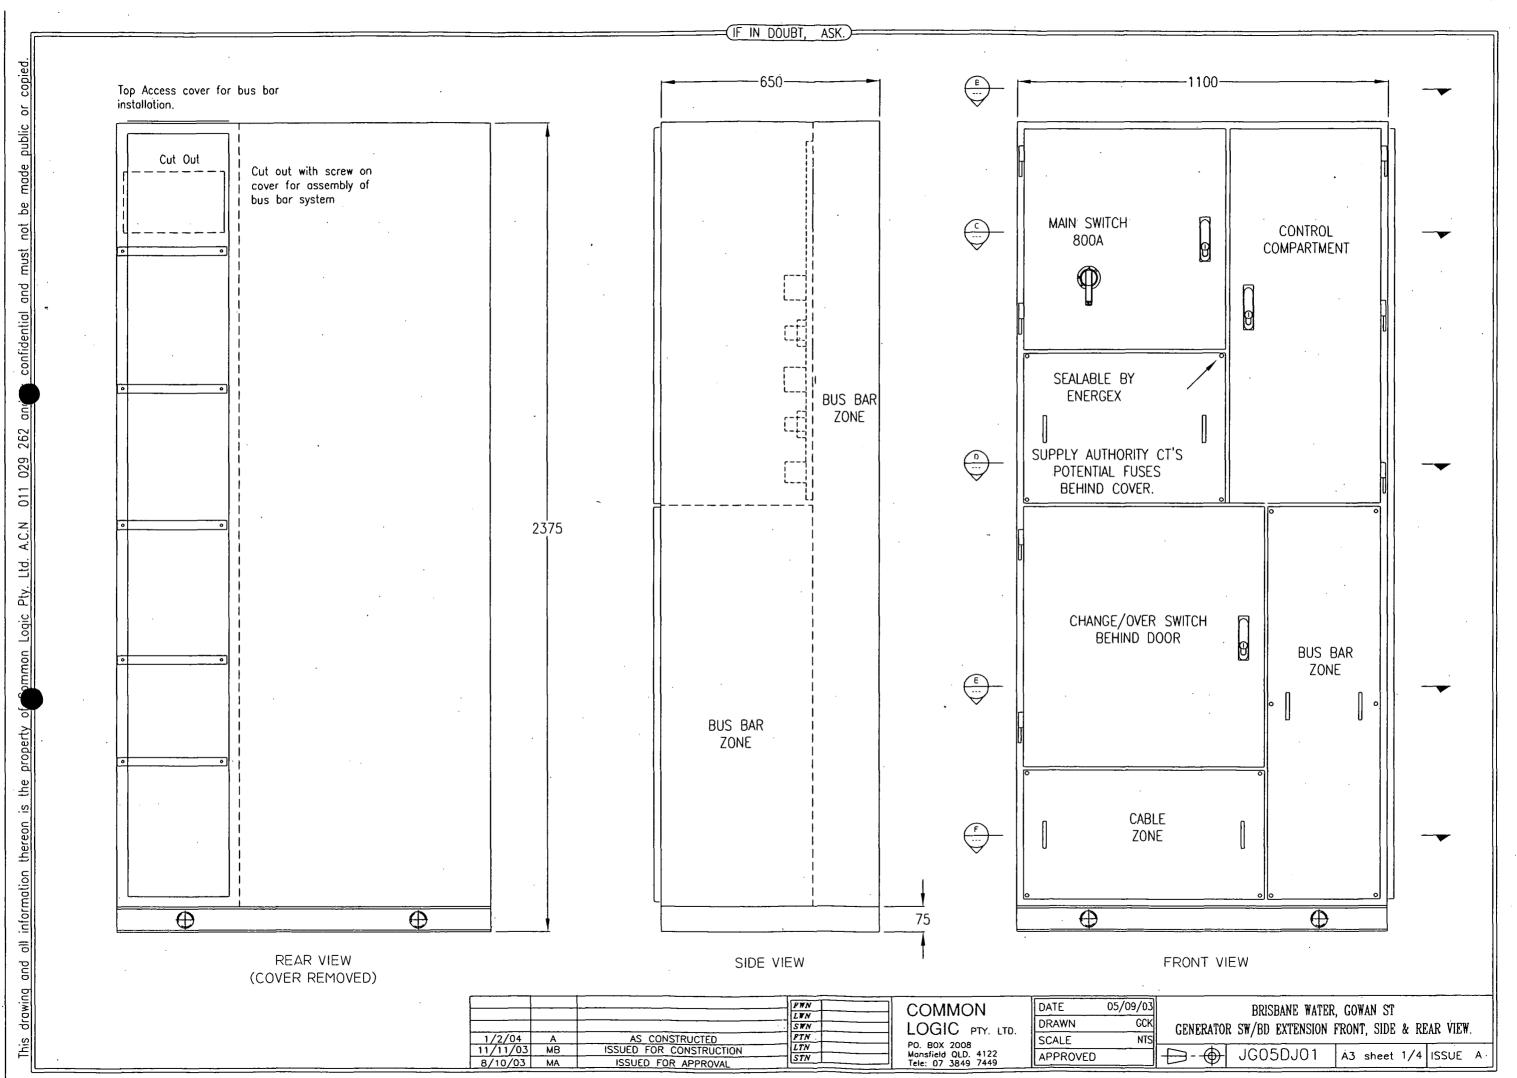


Page 34 of 139

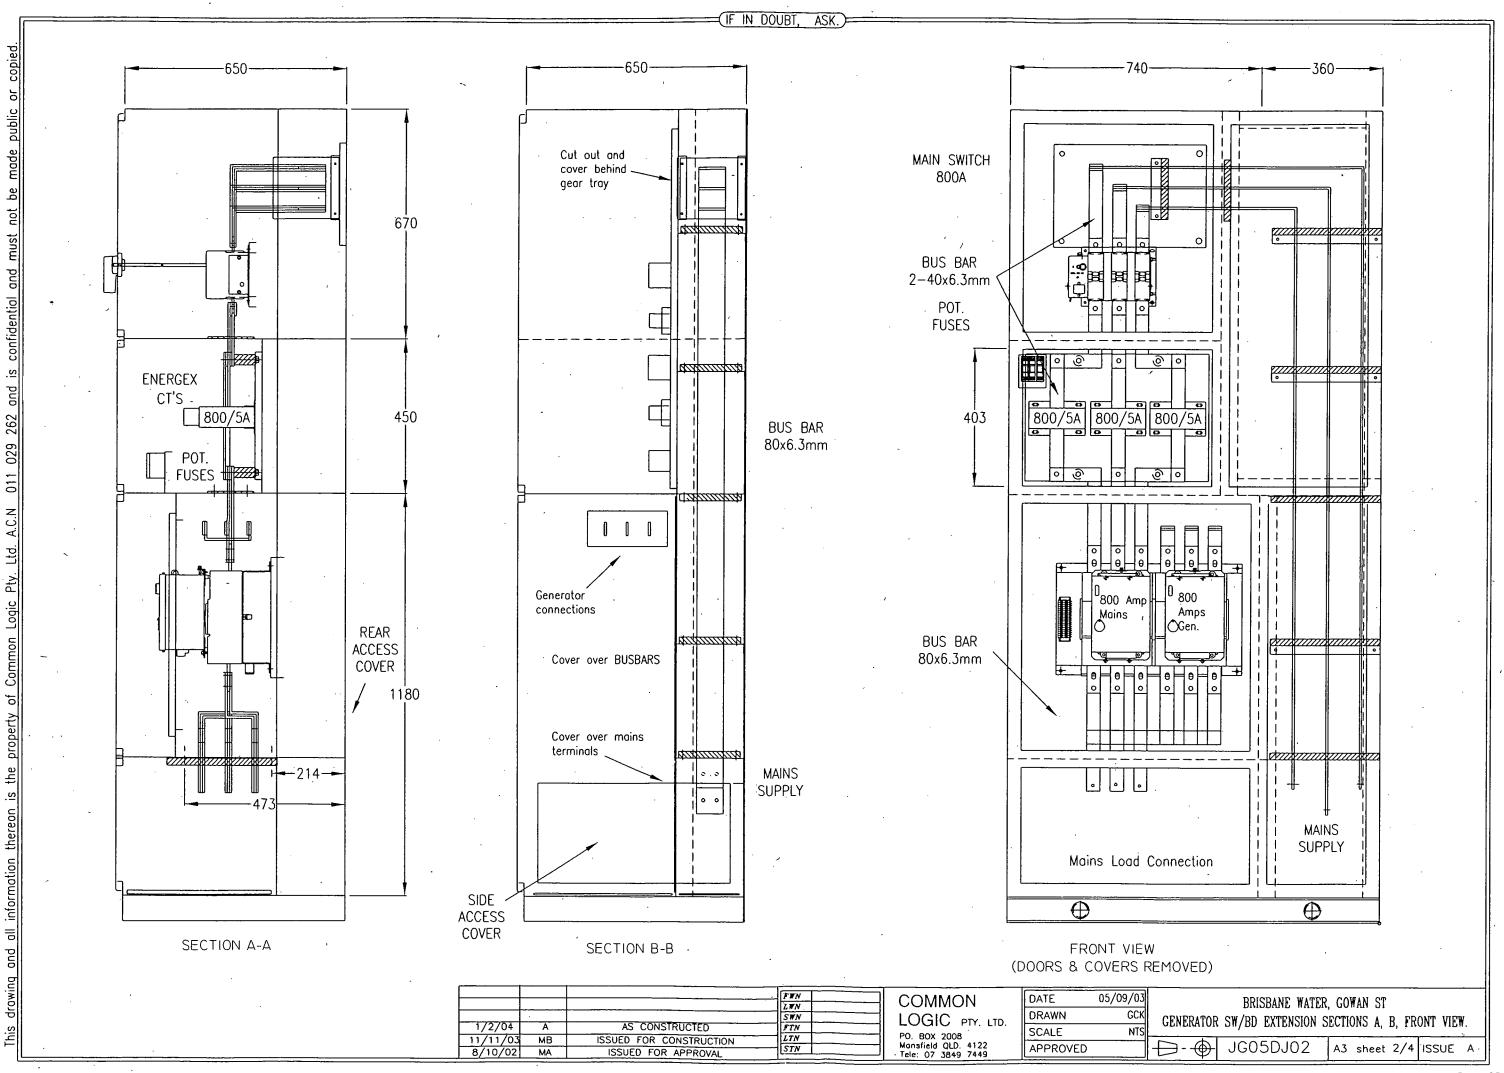

Page 36 of 139

Q-Pulse Id TMS863

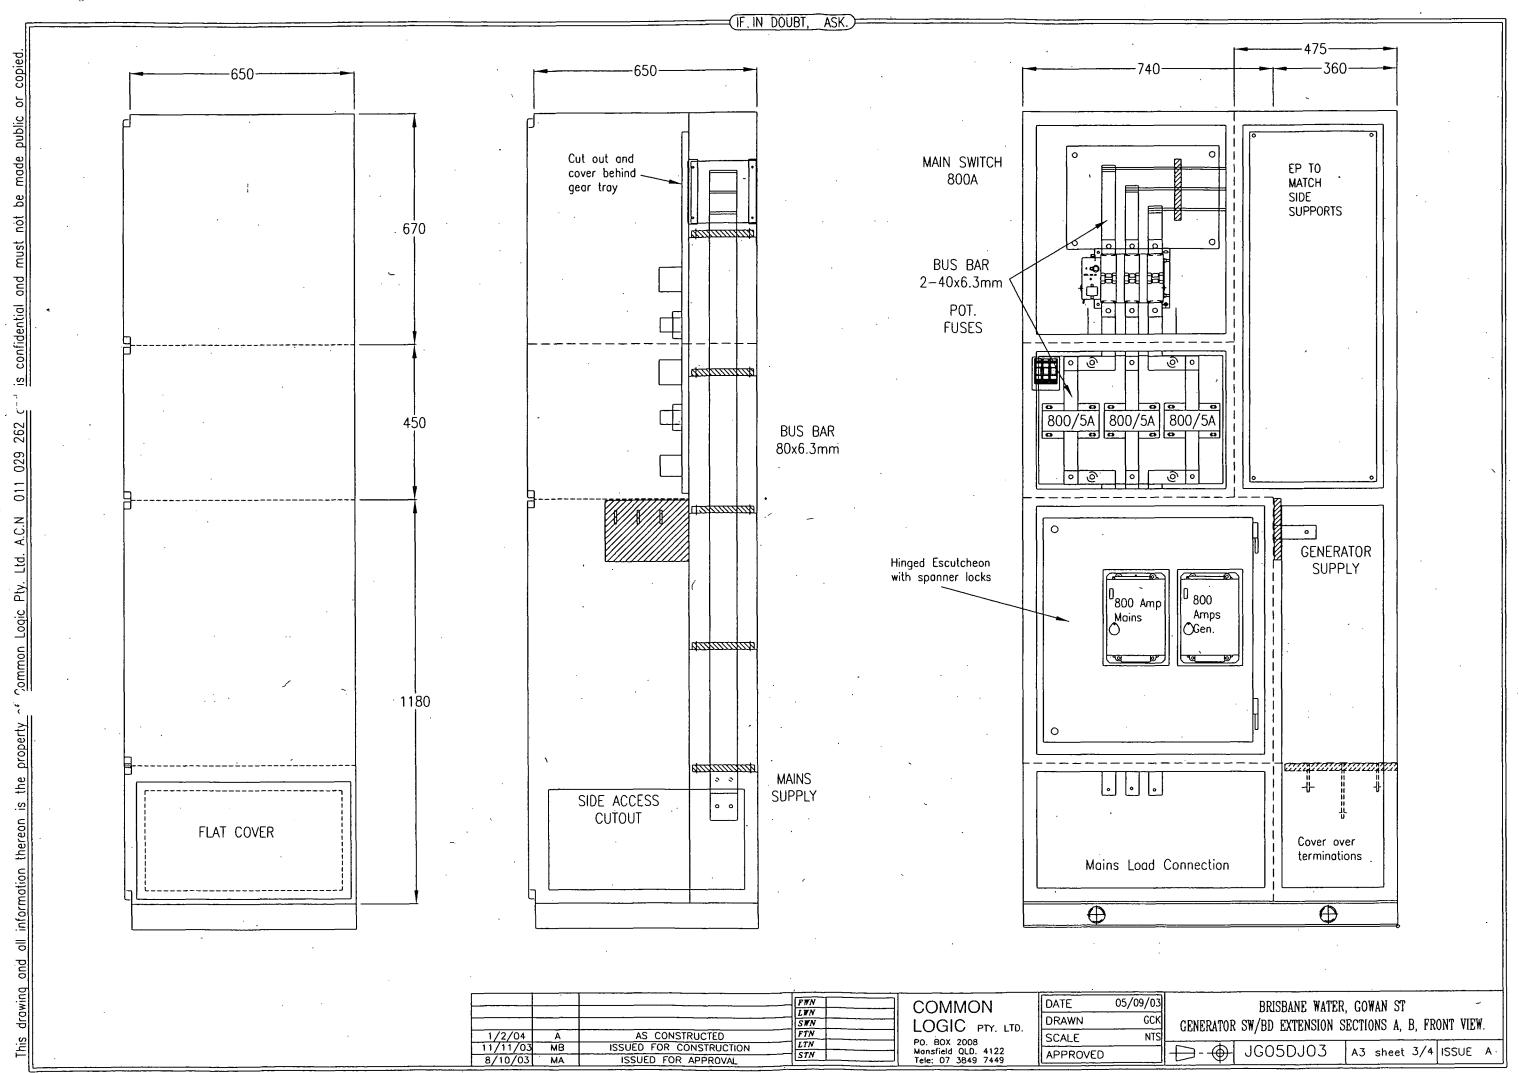

Page 38 of 139

SP239 Gowan Road Calamyale SPS Switchboard Connection Facilities for Backup Generator Sets Generator Connection OM Manual

Q-Pulse Id TMS863 Active 10/12/2014 Page 4

Operation and Maintenance Data Manual





#### **BRISBANE WATER**

# GENERATOR CONNECTION O & M Manual

# Section 4

**Site Testing** 

Q-Pulse Id TMS863 Active 10/12/2014 Page 41 of 139

#### COMMON LOGIC Pty Ltd **Specialist Electrical Contractors**

## Site Acceptance Tests

SAT for BW Generator Change Over Panels

Sheet: Of: 7 Section

Page Revision No: 0 Date: 07/05/04

Manual Issue No: 0 Date: 07/05/04

	OVER A CORDE AND THE STATE OF T	_
1.0	SITE ACCEPTANCE TEST	2
1.1	Introduction	2
1.2	Production Unit Information	2
1.3	SAFETY PRECAUTIONS	2
2.0	ELECTRICAL EARTHING SYSTEM	3
2.1	ELECTRICAL CONTINUITY AND RESISTANCE OF EARTHING SYSTEM	3
2.2	CONTINUITY TEST SHEET	
3.0	INSULATION RESISTANCE/ HIGH POT TEST	3
3.1	Insulation Resistance Test	3
3.2	LOW VOLTAGE SWITCHBOARDS INSULATION TEST	
4.0	GENERAL WIRING AND VISUAL INSPECTION	4
4.1	GENERAL WIRING AND VISUAL INSPECTION	4
4.2	SWITCHGEAR VISUAL CHECKLIST	
4.3	TERMINAL VISUAL CHECKLIST	4
4.4	RELAY VISUAL CHECKLIST	5
5.0	CONTINUITY & PRE-COMMISSIONING TEST	6
5.1	CONTINUITY TEST	6
6.0	COMPONENT OPERATIONAL TEST	7
6.1	Component Operation Test	7
6.2	AC CONTROL SYSTEMS	

Test Carried out by.....

Signed...

Date...

Test witnessed by......

Signed...

Date...

Authorised By:

JH05OT02

Page 42 of 139

pecialist Electrical Con	ty Ltd tractors		Site A	ccep	tance 7	<b>Tests</b>
Subject: SAT for BW	Generator Ch	nange Over Pan	els		Sheet: 2 Of: 7	Section
Page Revision No:	0 Date: 07/0	)5/04	Manual Issue	No: 0	Date: 07/05/0	)4
Complete EVERY box be completed at the end of the Aim: This Commissioning the switchboard in question Scope: This Commission.	e checklist. g list is to be con on. The commissi ing list is designe	apleted by the persioning list is designed to test the opera	on/s who are under ned to check the fu	taking the o	commissioning an	nd testing o
Legend of Symbols  Check Box,  1.2 Production	⊗ Setting to	be recorded,	→ and A	ction to ta		
Legend of Symbols  Check Box,	Setting to Unit Informa	be recorded,	ion (		ke	
Legend of Symbols Check Box,  1.2 Production	⊗ Setting to l	be recorded,	· · · · · · · · · · · · · · · · · · ·			

Q-Pulse Id

- Never test live boards alone. Always inform others of your actions and intentions.
- 2) Isolate mains or REMOVE TEST PLUG and locate close to testing area under your control.
- 3) Isolate the switchboard main switch and all circuitbreakers and fuses to completely remove all possibility of switching a live conductor when not deliberately required.
- Tag all Distribution as DO NOT OPERATE removing only after tested and safe.
- 5) Insure NO LIVE WIRES are exposed at any time and a CLEAR TESTING AREA and escape route at all times.
- 6) PROTECTIVE CLOTHING and eyewear should be worn at all times when working within Live board or when appropriate.

Active 10/12/2014		Page 43 of 139
	· ".	
Signed	Date	
Signed	Date	
		Signed Date

	Electrical Contractors		e Accep	
ubject:	SAT for BW Generator Change Ov	ver Panels		Sheet: 3 Sec Of: 7
age Rev	vision No: 0 Date: 07/05/04	Manual	Issue No: 0 l	Date: 07/05/04
2.1 E	ELECTRICAL EARTHING S Electrical continuity and resistate Maximum resistance of the Earthing	ance of earthin		s 0.5 ohms (AS/N79
3000:20	000)			
⊗ 1	Test resistance of the Earthing system	m< <u>\$5</u>	ohmsohms	1
2.2	Continuity Test Sheet			
ITEM	DETAIL	COMPARTM		ION AND TEST RESU
	Test resistance of Earthing system to compartment Answer in Ohms	Extension	Main Eth Bar	Generator
1	All Earth's wired and continuous	45 6-	2.50	1 7 2 2
3	All metal work earthed where required Isolate Individual Earth Systems and	<u>'</u>		+
	check continuity.		/	Diva w
Insulati (AS/NZ	Insulation Resistance Test ion resistance of whole or part of an ZS 3000:2000) Insulation test conducted on all inte All Selector Switches, Isolators and All electronic equipment susceptible	n installation must ernal circuits I CB's are in the o	off position	
Insulati (AS/NZ → → 3.2	ion resistance of whole or part of an 2S 3000:2000) Insulation test conducted on all inte All Selector Switches, Isolators and All electronic equipment susceptible Low Voltage Switchboards Insulations and Switchboards I	installation must ernal circuits I CB's are in the o le to high voltage of	be a minimum	
Insulati (AS/NZ → → 3.2 I MEGG	ion resistance of whole or part of an ZS 3000:2000) Insulation test conducted on all inte All Selector Switches, Isolators and All electronic equipment susceptible	installation must crnal circuits I CB's are in the offer to high voltage contacts  Sulation Test  VOLTS	be a minimum	
Insulation (AS/NZ  →  →  3.2  MEGG INSTR	ion resistance of whole or part of an 2S 3000:2000) Insulation test conducted on all interpretation All Selector Switches, Isolators and All electronic equipment susceptible  Low Voltage Switchboards Instant VOLTAGE  UMENT DETAILS  SCOOT  OSS	ernal circuits I CB's are in the offet to high voltage of the colors  Sulation Test  VOLTS  RESULT	be a minimum  off position damage to be is	solated.
Insulati (AS/NZ → → 3.2 I MEGG INSTR	ion resistance of whole or part of an 2S 3000:2000) Insulation test conducted on all interpretable All Selector Switches, Isolators and All electronic equipment susceptible Low Voltage Switchboards Insulation DETAILS 1000000000000000000000000000000000000	installation must  a installation must  a CB's are in the off the to high voltage of the sulation Test  VOLTS  RESULT  (M.OHM)	be a minimum  off position damage to be is	solated.
Insulati (AS/NZ → → 3.2 I MEGG INSTR ACRO Join Reversely	ion resistance of whole or part of an ZS 3000:2000) Insulation test conducted on all inter All Selector Switches, Isolators and All electronic equipment susceptible  Low Voltage Switchboards Instant VOLTAGE  UMENT DETAILS  OSS  ed, White & Blue Phases and I, Test to Earth	rinstallation must  rmal circuits I CB's are in the or the to high voltage of the sulation Test  VOLTS  RESULT  (M.OHM)	be a minimum  off position damage to be is	solated.
Insulati (AS/NZ → → 3.2 MEGG INSTR ACRO Join Re Neutral Red Ph	ion resistance of whole or part of an 2S 3000:2000) Insulation test conducted on all interpretation All Selector Switches, Isolators and All electronic equipment susceptible  Low Voltage Switchboards Insulation DETAILS  UMENT DETAILS  ed, White & Blue Phases and I, Test to Earth hase to White, Blue & N	rmal circuits I CB's are in the offer to high voltage of the sulation Test VOLTS RESULT (M.OHM)	be a minimum off position damage to be is	solated.
Insulation (AS/NZ  (AS/NZ  →  →  3.2  MEGG INSTR  ACRO  Join Red Neutral Red Ph White	ion resistance of whole or part of an ZS 3000:2000) Insulation test conducted on all inter All Selector Switches, Isolators and All electronic equipment susceptible.  Low Voltage Switchboards Instant VOLTAGE VOLTAGE VOLTAGE VOLTAGE VOLTAGE VOLTAGE VOLTAILS VOLTAGE VOLTA	rinstallation must  crnal circuits I CB's are in the or le to high voltage  sulation Test  VOLTS  RESULT  (M.OHM)	be a minimum off position damage to be is	solated.
Insulation (AS/NZ  → →  3.2  MEGG INSTR  ACRO  Join Re Neutral Red Ph White I Blue Pl	ion resistance of whole or part of an 2S 3000:2000) Insulation test conducted on all interpretation All Selector Switches, Isolators and All electronic equipment susceptible  Low Voltage Switchboards Insulation DETAILS  OSS  ed, White & Blue Phases and I, Test to Earth hase to White, Blue & N  Phase to Red, Blue and N  hase to Red, White & N	rmal circuits I CB's are in the offer to high voltage of the sulation Test VOLTS RESULT (M.OHM)	be a minimum off position damage to be is	solated.
Insulation  (AS/NZ  →  →  3.2  MEGGINSTR  ACRO  Join Rein Neutral  Red Ph  White I  Blue Pl	ion resistance of whole or part of an ZS 3000:2000) Insulation test conducted on all inter All Selector Switches, Isolators and All electronic equipment susceptible.  Low Voltage Switchboards Instant VOLTAGE VOLTAGE VOLTAGE VOLTAGE VOLTAGE VOLTAGE VOLTAILS VOLTAGE VOLTA	rinstallation must  crnal circuits I CB's are in the or le to high voltage  sulation Test  VOLTS  RESULT  (M.OHM)	be a minimum off position damage to be is	solated.
Insulation  (AS/NZ  AS/NZ  AS/NZ  MEGG INSTR  ACRO  Join Ref Neutral  Red Ph White I Blue Pl N to Ref	ion resistance of whole or part of an 2S 3000:2000) Insulation test conducted on all interpretation All Selector Switches, Isolators and All electronic equipment susceptible  Low Voltage Switchboards Insulation DETAILS  OSS  ed, White & Blue Phases and I, Test to Earth hase to White, Blue & N  Phase to Red, Blue and N  hase to Red, White & N	rmal circuits I CB's are in the offer to high voltage of the sulation Test VOLTS RESULT (M.OHM)	be a minimum off position damage to be is	solated.

	ON LOGIC Pty Ltd Electrical Contractors	Site A	cceptand	
ubject:	SAT for BW Generator Change (	Over Panels	Sheet: Of:	4 Section
age Rev	vision No: 0 Date: 07/05/04	Manual Issue I	No: 0 Date: 0	7/05/04
<b>4.1 (</b>	GENERAL WIRING AND V General Wiring and Visual Ins Electrical Construction Coversheet Switchgear Visual Checklist	pection	<b>N</b>	·
	Carry out visual and mechanical cl	necks to Switchgear		
ITEM	DETAIL	Switchb	oard compartmer	its
NO:		Transfer switch compartment	Main switch ares	Generator in general
1	Main Switch totally isolates SWBD  Mains transfer switch device isolate	1 20th 5x6	V	See Com
2	mains from load. (IE switchboard) Generator transfer switch operates and isolates generator from the load And mechanical interlock works	Bethold constant		_
3	Cables tight and correct phase rotation. Colour match.	/	/	/
4	Main Switch Correct Rating/Label	/	/	V
5	Neutral cable connected and continuous and tight.	/		Plug
ITEM	DETAIL	COMPARTMENT DESIGN Switchboard extension	NATION AND TES Existing Switch Where modifie	board.
1	All CBs operate correctly		vviiere illodine	<u>.                                    </u>
. 2	All incoming terminal numbers as per drawings	ar sur		
3	Check wire numbers to core numbers, Random selection.			
4	All wires numbered as per drawings (random inspection)			
5	Cables loomed and bushed correctly to all compartments.			
<u>6</u> 7.				
<b>4.3</b> →	Terminal Visual Checklist Carry out visual and mechanical	checks on Site terminals		
Test (	Carried out by	Signed	Date	
Test v	witnessed by	Signed	Date	

Q-Pulse Id TMS863 JH05QT02

Active 10/12/2014

7.1496 43 01 13

#### COMMON LOGIC Pty Ltd **Specialist Electrical Contractors**

## Site Acceptance Tests

Subject: SAT for BW Generator Change Over Panels

Sheet: Of:

Section

Page Revision No:

0 Date: 07/05/04

Manual Issue No: 0 Date: 07/05/04

ITEM	DETAIL	COMPARTMENT AND TEST RESULT		
		Switchboard extension	Existing Board	
1	All Terminals tight ( Randomly check )	/		
2	Secure by End Clamps (Check All)		/	
3	Labelled correctly			
4				

#### **Relay Visual Checklist** 4.4

Carry out visual and mechanical checks on Relays

ITEM	DETAIL	COMPARTMENT AND TEST RESULT
1	Relays labelled correctly as per Drns	
2	All relay coils correct voltage	
3	Does relay require Diode fitted?	
4	Common Bus Link on relays fitted	
5	All numbering correct	

Test Carried out by	Signed	Date
Test witnessed by	Signed	Date
Authorised By:		

SP239 Gowan Road Calamvale SPS Switchboard Connection Facilities for Backup Generator Sets Generator Connection Manual 12, COMMON LOGIC Pty Ltd Site Acceptance Tests Specialist Electrical Contractors Section Sheet: SAT for BW Generator Change Over Panels Subject: Of: Manual Issue No: 0 Date: 11/05/04 Page Revision No: 0 Date: 11/05/04 CONTINUITY & PRE-COMMISSIONING TEST 5.0 5.1 **Continuity Test** Wiring of circuits and connections are correct to constructed wiring schematics. Random Continuity Test using Buzzer. Visual Check of all wiring. Open all Circuit breakers and remove all fuse links Install Test plug in generator end. Install RTU terminal Plugs into terminals By pressing the relevant buttons and observing the relevant feedback LED all circuits will be checked. Test each circuit in turn with corresponding drawings ITE Test description М Result of NO Observation Action test Transfer to Mains Press Button 1 Observe Relay GTSM Observe Relay GTSG 2 Transfer to Gen Press Button 2 Generator Failed Press Button 3 Observe Relay GF Observe Relay GFR Generator Fault Press Button 4 Observe Relay GRUN Gen Running Press Button & 😓 Check Door Indicator is on when relay is ON Generator Connected Press Button 6 Observe Relay GCONN Doors Opened Press Button 🐧 🞖 Observe Relay GOPEN Observe Relay GCBT **CB** Tripped Press Button & 9 Observe Relay GNAUTO 9 Not in Auto Press Button 🛊 🐞 10 Generator Not On Site Press Button 10 iv Observe Indicator 11 Spare 15 Remote Start Observe Relay GSTART Press Button 15 16 Remote Stop Observe Relay GSTOP Press Button 16 Indicator ON when PFR is ON Mains Failed √ 1 Close QM1 Check Door Indicator is ON when PFR

Missing LEDS Mains Indicator ON when TSX in GEN was a ATS To Gen Manual change to Indicator is on when PB is ON Gen Remote Start Press PB 15 Remote Stop Press PB 16 Indicator is on When PB is ON Generator is missing Press PB 10 Indicator is on when PB is ON 410W 2 nature samp

Manual Change to

Test Carried out by .. Rob McLerra

Signed.

Date. 115:04

Test witnessed by ... Don McLarra

Signed D

Indicator ON when TXS in Mains

Date !!. 5 .04

2

ATS to Mains

	MON LOGIC Pty Ltd  . t Electrical Contractors	Site Accep	otance T	Cests
Subject:	SAT for BW Generator Change Over Pa	nels	Sheet: 7 Of: 7	Section
Page Revision No: 0 Date: 07/05/04 Manual Issue No: 0 Date: 07/05/04				
6.0	COMPONENT OPERATIONAL 1	EST		
6.1	<b>Component Operation Test</b>			
	Correct Operation and Voltages			
	All set points and parameters set to test va	lues if required.		
_	•	•		
6.2	AC Control Systems			
$\rightarrow$	Open all circuit breakers and remove all for			
$\rightarrow$	Test each circuit individually, replacing for	uses and closing circuit bre	akers in turn.	
<u>AFTE</u>	R VOLTAGE APPLIED			
$\rightarrow$	Apply mains supply			
$\rightarrow$	Carry out voltage and operational checks			
$\rightarrow$	Bridge control points to check operation a	•	Sheet	
$\rightarrow$	Apply generator voltage and check operat	ion		
$\rightarrow$	Return to normal and fail the mains			·
$\rightarrow$	Return the mains		•	
$\rightarrow$	Carry out a manual transfer			
TTEM.	DETAIL	Now Extono	ion	<del></del>
ITEM NO:	DETAIL	New Extens Test Resu		
1	Mains Incoming Voltage Measured OK	7.000		
2	All CB's are turned off and isolate Crts			
3	Phase Fail operates correctly		•	1

Test Carried out by	Signed	Date	
Test witnessed by	Signed	Date	
Authorised By:	٠.		
			D 40 - f 100





#### **BRISBANE WATER**

# GENERATOR CONNECTION O & M Manual

# Section 4A

Site Testing Functional Description





#### **PROJECTS – ENGINEERING**

## **Sewerage System Performance Improvements Backup Diesel Generators for Pump Stations**

## FUNCTIONAL SITE TESTS FOR GENERATOR, AUTOMATIC TRANSFER SWITCH, AND RTU

Prepared by

Alan Mooney

Telephone - 07 3403 3356 Facsimile - 07 3403 0205

Document ID

Genset Functional Tests

Date of Issue

June 2003

Revision

Rev 1

Actions are shown in RED

#### MANUAL MODE FUNCTIONAL TESTS

#### 1.1 Manual Mode Start

Turn the AUTO – TEST – MAN- OFF selector switch to the MANUAL position.

Press the MANUAL START push button to start the generator.

The generator set is allowed 3 attempts to start.

If it fails to start on the third attempt, the generator is locked out on FAIL TO START Alarm. Once the generator has started, there is a 10 second time delay for the oil pressure to stabilise. Once the generator is running there is a 30 second warm up time before it is ready to accept load.

RESULTS: PASS/FAIL NOTES \_\_\_\_

#### 1.2 Stopping the generator in the Manual Mode.

Press the MANUAL STOP push button.

If the generator is still GEN ATS operation. The MANUAL TRANSFER TO MAINS is initiated.

When the GEN ATS is Open, the generator will enter the cool down time of 1 second.

After the cool down time, the generator will shut down.

RESULTS: PASS/FAIL\_\_\_\_NOTES\_\_\_\_

#### 2 TEST MODE FUNCTIONAL TESTS

#### 2.1 Test Mode Start – and test of Manual Mode interruption

Select this operation by turning the AUTO-TEST-MAN-OFF selector switch to the TEST position.

The generator shall begin to crank.

Change the selector MAN while the generator is operating on TEST: to test that the system shall change to MANUAL TRANSFER TO GEN.

Press the MANUAL STOP push button.

RESULTS: PASS/FAIL\_\_\_\_NOTES\_\_\_\_

#### 2.2 Continue Test

Select TEST operation again by turning the AUTO – TEST – MAN- OFF selector switch to the TEST position.

The generator shall begin to crank.

Once the generator has started, there is a 10 second time delay for the oil pressure to stabilise.

Once the generator is running there is a 30 second warm up time before it is ready to accept load.

After the warm up time has expired, the MAINS ATS shall Open and the GEN ATS shall Close

RESULTS: PASS/FAIL\_\_\_\_NOTES\_\_\_\_

Page 51 of 139

## 2.3 Stopping Generator In The Test Mode - To Test Mains Failure /Genset Restart During Shutdown

Select this operation by turning the AUTO – TEST – MAN- OFF selector switch to the AUTO or OFF position.

The GEN ATS shall Open and the MAINS ATS shall Close

When the GEN ATS is Open, the generator will enter the cool down time of 5 minutes.

During this time turn off the Mains to the site
When Mains Failure occurs during the cool down period the generator shall transfer back to
the GENERATOR ATS without shutting down.
RESULTS: PASS/FAILNOTES
2.4 Stopping generator in the Test Mode.
Select this operation by turning the AUTO – TEST – MAN- OFF selector switch to the
AUTO or OFF position.
The GEN ATS shall Open and the MAINS ATS shall Close
After the cool down time of 5 minutes, the generator will shut down.
RESULTS: PASS/FAILNOTES
Trad Made Calendad (Alexandra Calendad (Alexan
2.5 Test Mode Selected with genset unavailable (fault or GEN CB off).  Make GENSET unavailable
Select this operation by turning the AUTO – TEST – MAN- OFF selector switch to the TES
position.
Observe results – Genset discussion of preferred results (unit should not start?)
RESULTS: PASS/FAILNOTES
•
3 AUTOMATIC MODE FUNCTIONAL TESTS
3.1 Automotic Claud
3.1 Automatic Start Select this operation by turning the AUTO – TEST – MAN- OFF selector switch to the
AUTO position.
Turn off the Mains to the switchboard.
The Phase Failure Relay from the clients switch board shall give a Start Signal for the
generators to run.
Once the generator has started, there is a 10 second time delay for the oil pressure to stabilise
Once the generator is running there is a 30 second warm up time before it is ready to accept
load.
After the warm up time has expired, the MAINS ATS shall Open and the GEN ATS shall Close.
RESULTS: PASS/FAIL NOTES

## 3.2 Stopping the generator in the Auto Mode –and testing genset restart for mains failure during cool-down.

Turn on the Mains to the switchboard

The Phase Failure Relay from the clients switch board shall give a Stop Signal for the generator

There is a 2 minute proving time for the Phase Failure Relay.

After the 2 minute proving time the GEN ATS shall Open and the MAINS ATS shall Close When the GEN ATS is Open, the generator will enter the cool down time of 5 minutes.

#### During this time turn off the Mains to the site

When Mains Failure occurs during the cool down period the generator shall transfer back to the GENERATOR ATS without shutting down.

RESULTS: PASS/FAIL\_\_\_\_NOTES\_\_\_\_

#### 3.3 Stopping the generator in the Auto Mode - continued.

Turn on the Mains to the switchboard

The Phase Failure Relay from the clients switch board shall give a Stop Signal for the generator

There is a 2 minute proving time for the Phase Failure Relay.

After the 2 minute proving time the GEN ATS shall Open and the MAINS ATS shall Close When the GEN ATS is Open, the generator will enter the cool down time of 5 minutes.

After the cool down time, the generator will shut down.

RESULTS: PASS/FAIL\_\_\_\_NOTES\_\_\_\_

#### 3.4 Automatic ATS Transfer To Genset-Mains ATS Failure

Disable MAINS ATS CB

Restart the generator in Auto by turning off the Mains

The MAINS ATS will fail to Open: After a 5 second delay an Alarm shall be generated and the MAINS CONNECTED indicator shall flash to indicate the Alarm.

The system shall then return back to MAINS ATS operation.

Stop the generator using the Stop button

RESULTS: PASS/FAIL NOTES

#### 3.5 Automatic ATS Transfer - Gen ATS Failure

Re-enable the MAINS ATS CB

Disable GEN ATS CB

Restart the generator in Auto by turning off the Mains

The GEN ATS will fail to Close: After a 5 second delay an Alarm shall be generated and the GENERATOR CONNECTED indicator shall flash to indicate the Alarm.

The system shall return back to MAINS ATS operation.

Stop the generator using the Stop button

RESULTS: PASS/FAIL\_\_\_\_\_NOTES\_\_\_\_

Page 53 of 139

3.6	Automatic	ATS Transf	er To Mains -	Gen A	TS Failure

Disable GEN ATS CB

Restart the generator in Auto by turning off the Mains

The GEN ATS will fail to Open.

After a 5 second delay an Alarm shall be generated and the GENERATOR CONNECTED indicator shall flash to indicate the Alarm.

The system shall return back to GEN ATS operation.

Stop the generator using the Stop button

RESULTS: PASS/FAIL	NOTES	

#### 3.7 Automatic ATS Transfer To Mains - Mains ATS Failure

Re-enable the GEN ATS CB

Disable MAINS ATS CB

Restart the generator in Auto by turning off the Mains

The MAINS ATS will fail to Close.

After a 5 second delay an Alarm shall be generated and the MAINS CONNECTED indicator shall flash to indicate the Alarm.

The system shall return back to GEN ATS operation.

RESULTS: PASS/FAIL	NOTES	

#### 3.8 Running in Auto and umbilical looses connection.

Select this operation by turning the AUTO - TEST - MAN- OFF selector switch to the AUTO position.

Turn off the Mains to the switchboard.

The Phase Failure Relay from the clients switch board shall give a Start Signal for the generators to run.

Once the generator has started, there is a 10 second time delay for the oil pressure to stabilise.

Once the generator is running there is a 30 second warm up time before it is ready to accept

Once the generator is running there is a 30 second warm up time before it is ready to accept load.

After the warm up time has expired, the MAINS ATS shall Open and the GEN ATS shall Close.

Remove umbilical plug

Observe results – Genset discussion of preferred results (ATS returns to MAINS?)

RESULTS: PASS/FAIL	, NOT	ES	•

#### 3.9 Running in Auto and genset trips or faults.

Select this operation by turning the AUTO – TEST – MAN- OFF selector switch to the AUTO position.

Turn off the Mains to the switchboard.

The Phase Failure Relay from the clients switch board shall give a Start Signal for the generators to run.

Once the generator has started, there is a 10 second time delay for the oil pressure to stabilise.

Once the generator is running there is a 30 second warm up time before it is ready to accept load

After the warm up time has expired, the MAINS ATS shall Open and the GEN ATS shall Close.

Cause Genset trip or fault

Observe results – Genset discussion of preferred results (ATS returns to MAINS?)

RESULTS: PASS/FAIL\_\_\_\_NOTES\_\_\_\_

-

#### REMOTE START/STOP TESTS

#### 4.1 Remote start command.

Select this operation by turning the AUTO – TEST – MAN- OFF selector switch to the AUTO position.

Initiate a Remote Start Command from the BW Control Room

Once the generator has started, there is a 10 second time delay for the oil pressure to stabilise. Once the generator is running there is a 30 second warm up time before it is ready to accept

Once the generator is running there is a 30 second warm up time before it is ready to accept load.

After the warm up time has expired, the MAINS ATS shall Open and the GEN ATS shall Close.

RESULTS: PASS/FAIL	NOTES	

#### 4.2 Remote stop command.

Initiate a Remote Start Command from the BW Control Room

The GEN ATS shall Open and the MAINS ATS shall Close

When the GEN ATS is Open, the generator will enter the cool down time of 5 minutes.

After the cool down time, the generator will shut down.

RESULTS: PASS/FAIL	NOTES	
10000010.17100/17110	110120	

#### 4.3 Remote Start with genset unavailable.

Make GENSET unavailable

Initiate a Remote Start Command from the BW Control Room

Observe results – Genset discussion of preferred results (unit should not transfer to MAINS?)

RESULTS: PASS/FAIL	NOTES

#### 4.4 Remote Stop with when running with MAINS not available unavailable.

Select this operation by turning the AUTO – TEST – MAN- OFF selector switch to the AUTO position.

Turn off the Mains to the switchboard.

The Phase Failure Relay from the clients switch board shall give a Start Signal for the generators to run.

Once the generator has started, there is a 10 second time delay for the oil pressure to stabilise.

Once the generator is running there is a 30 second warm up time before it is ready to accept load.

After the warm up time has expired, the MAINS ATS shall Open and the GEN ATS shall Close.

Initiate a Remote Start Command from the BW Control Room

Observe results - Genset discussion of preferred results (unit should not transfer to MAINS?)

RESULTS: PASS/FAIL\_\_\_\_NOTES\_\_\_\_

#### 5 SPECIFIC PROBLEM CHECKS (Variations to Functional Spec)

#### 5.1 RTU IO and IDTS Alarms

The assumption is that all RTU IO and alarms have been proven by NCS.

Page 55 of 139

#### 5.2 From discussions on Indooroopilly Rd:

If the Genset ATS trips when genset is running - will ATS switch back to Mains? If the Genset ATS trips when genset is running (medium alarm) - will ATS switch back to Mains?

If the Genset on-board CB trips when genset is running - will ATS switch back to Mains?

If the Mains ATS trips when genset is not running - will the genset start? Eg Monitor the Mains ATS and allow the Gen ATS to take load when the Mains ATS is tripped. The problem is that genset start is initiated by PFR above the ATS.

If Mains trips amd no genset start is initiated (?) and then Remote Start signal is sent will unit start and then transfer to GENSET

Does a Remote start "reset" the tripped ATS CB or provide a "work-around"?

#### 5.3 From M&E:

The remote start (from control room) was sent with the Generator C/B in the off / tripped position.

The generator started and the ATS Switched to generator supply.

The generator continued to run with out supplying the site ( C/B was off) and failed to transfer back to the available Energex supply with out a remote stop signal.

#### 5.4 From Contract:

Performance guarantee of not less than 0.8pu at alternator terminals during startup - measure volts drop on start-up of load.

#### 6 FAULTS - TO BE TESTED WHERE REQUIRED

#### 6.1 HIGH HIGH Alarm Operation.

The Generator CB is Opened immediately. The generator is shut down immediately.

The following alarms will initiate a HIGH HIGH Alarm condition:
Emergency Stop Fault
MEN Fault
Low Oil Pressure Shutdown Fault, 10 Seconds Startup Delay
High Engine Temperature Shutdown Fault, 30 second Startup Delay
Low Radiator Level Fault, 5 Second Delay
Over Speed Fault

#### 6.2 HIGH Alarm Operation

The Generator CB is Opened immediately. Once the generator circuit breaker is opened, the generator will run through its normal cool down time and shut down.

The following alarms will initiate a HIGH Alarm condition:-Generator Under Speed Fault, 5 Second Delay Alternator Under Voltage Fault, 5 Second Delay Alternator Over Voltage Fault, 5 Second Delay Generator CB Tripped Fault Alternator High Temperature Fault, 30 Second Startup Delay

#### 6.3 MEDIUM Alarm Operation.

A Normal Shutdown shall be Initiated.

If the GEN ATS does not Open then the Generator CB is Opened.

The following alarms will initiate a MEDIUM Alarm condition: Fuel Empty Level Fault, 5 Second Delay Fail To Start Fault, 3 Attempts

#### 6.4 LOW Alarm Operation.

A Warning has occurred on the generator. The generator will not shut down for this level of alarm.

The following alarms will initiate a LOW Alarm condition:-Low Oil Pressure Warning Alarm, 10 Seconds Startup Delay High Engine Temperature Warning Alarm, 30 Second Startup Delay Fuel Low Level Alarm, 5 Second Delay Battery Charger AC Supply Failed Alarm, 60 Second Delay Control Battery Low Volts Alarm, 30 Second Delay Start Battery Low Volts Alarm, 60 Second Delay

#### AT A LATER DATE??

#### 3. NON-PERMANENT SITE, MANUAL MODE

- 3.1. To operate G1 in a Non-Permanent Site Location in MANUAL Mode.
- 3.2. Connect the generator cables to the site generator CB ensuring the site generator CB is OFF. See BCC procedures.
- 3.3. A plug with shorting links is required to be installed. It is required to be plugged into the 27 Pin Station Plug.
- 3.3.1. Pins 11 and 12 are required to be connected. This is to indicate that the Mains ATS is Closed. If they are not connected a MAINS ATS Alarm shall be indicated.
- 3.4. Select from the AUTO TEST MAN- OFF selector switch to the MANUAL position.
- 3.5. Press the MANUAL START push button to start the generator.
- 3.6. The generator will begin to crank.
- 3.6.1. If it fails to start within the 10 seconds, the starter motor is stopped and a delay of 10 seconds before it will attempt to restart.
- 3.6.2. The generator set is allowed 3 attempts to start.
- 3.6.3. If it fails to start on the third attempt, the generator is locked out on FAIL TO START Alarm.
- 3.6.4. When the generator starts, the starter motor is stopped by a stop cranking input which measures the speed of the generator.
- 3.6.5. Once the generator has started, there is a 10 second time delay for the oil pressure to stabilise.
- 3.6.6. If the oil pressure is not up to pressure after the 10 second time delay, the generator shall shut down on LOW OIL PRESS Alarm.
- 3.6.7. Once the generator is running there is a 5 second warm up time before it is ready to accept load.
- 3.7. To connect the generator to the site load.
- 3.7.1. Manually switch over to the generator supply via the site CB's. See BCC procedures.
- 3.7.2. Do not use the MANUAL TRANSFER TO GEN or the MAN TRANSFER TO MAINS push buttons.
- 3.8. To disconnect the generator from the site load.
- 3.8.1. Manually switch over to the mains supply via the site CB's. See BCC procedures.
- 3.8.2. Do not use the MANUAL TRANSFER TO GEN or the MAN TRANSFER TO MAINS push buttons.
- 3.9. To stop the generator in the MANUAL Mode.
- 3.9.1. When the generator is running, it may be stopped by pressing the MANUAL STOP push button.
- 3.9.2. The generator will enter the cool down time of 1 second.
- 3.9.3. After the cool down time, the generator will shut down.
- 3.9.4. Once the generator has shut down there is a 15 second delay before it may be restarted. This is to ensure the engine has mechanically stopped.





#### BRISBANE WATER

# GENERATOR CONNECTION O & M Manual

# Section 4B

Site Testing NCS Alarms





### **BRISBANE WATER**

**Network Control Systems** 

# IDTS POINT COMMISSIONING SHEET AND GENERATOR SUPPLY OPERATIONAL CHECKS

Pump Station Generator Connection Project (STTX- 1910)

DATE:

10/5/04

Site Name:

SP239 Witton

BURGAR, KULAMANASA KARANGARANGAN SAMBURAN TAMUKANASA

NOTE: Some (or all) of the Generator associated IDTS points may be Scan Inhibited in the IDTS system. Remove the Scan Inhibit from these points before proceeding with these tests

#### IDTS Point: Generator Offsite

Action	Observation	Result
Connect the Control interface lead to the station	Confirm that GENERATOR OFFSITE alarm return to normal is received by IDTS	√ Yes
Disconnect the Control interface lead to the station	Confirm that GENERATOR OFFSITE alarm is received by IDTS	√ Yes
Reconnect the Control interface lead to the station		√ Yes

#### IDTS Point : Security Door\_limit\_switch

Action	Observation	Result
Open a canopy door on the Generator	Confirm that SECURITY DOOR_LIMIT_SWITCH alarm is received by IDTS	√ Yes
Close the canopy door	Confirm that SECURITY DOOR_LIMIT_SWITCH alarm return to normal is received by IDTS	√Yes

#### IDTS Point : Generator Low\_fuel

Action	Observation	Result
Make the Generator low fuel warning alarm active	Confirm that GENERATOR LOW_FUEL alarm is received by IDTS	√ Yes
Deactivate the Generator low fuel warning alarm	Confirm that GENERATOR LOW_FUEL alarm return to normal is received by IDTS	√ Yes

#### IDTS Point: Generator Warning

Action	Observation	Result
Make the Generator warning alarm active (except by low fuel)	Confirm that GENERATOR WARNING alarm is received by IDTS	√Yes
Deactivate the Generator warning alarm	Confirm that GENERATOR WARNING alarm return to normal is received by IDTS	√ Yes

#### IDTS Point: Generator Common fault

Action	Observation	Result
Make the Generator common fault alarm active	Confirm that GENERATOR COMMON_FAULT alarm is received by IDTS	√ Yes
Deactivate the Generator common fault alarm	Confirm that GENERATOR COMMON_FAULT alarm return to normal is received by IDTS	√ Yes

Page 63 of 139

#### IDTS Point: Generator Automatic

Action	Observation	Result
Turn the generator to local mode	Confirm that GENERATOR AUTOMATIC alarm is received by IDTS	√ Yes
Return the generator to automatic mode	Confirm that GENERATOR AUTOMATIC alarm return to normal is received by IDTS	√ Yes.

#### IDTS Point: Generator CB\_tripped

Action	Observation	Result	
Trip the Generator circuit breaker	Confirm that GENERATOR CB TRIPPED alarm is received by IDTS	√ Yes	
Reset the Generator circuit breaker	Confirm that GENERATOR CB_TRIPPED alarm return to normal is received by IDTS	√ Yes	

#### IDTS Point: Generator Running

Action	Observation	Result	
Start the Generator (off line only)	Confirm that GENERATOR RUNNING alarm is received by IDTS	√ Yes	
Stop the Generator	Confirm that GENERATOR RUNNING alarm return to normal is received by IDTS	√ Yes	

#### IDTS Control Points: Generator Remote\_run\_request

#### & Generator Remote\_stop\_request

Action	Observation	Result
Confirm the Generator is available to run, but not running		√ Yes
Set the IDTS control point GENERATOR REMOTE_RUN_REQUEST and send to	Confirm that the Generator starts and runs off-line	√ Yes
the site	Confirm that GENERATOR RUNNING alarm is received by IDTS	√ Yes
Set the IDTS control point GENERATOR REMOTE STOP REQUEST and send to	Confirm that the Generator stops	√ Yes
the site	Confirm that GENERATOR RUNNING alarm return to normal is received by IDTS	√ Yes

#### IDTS Point: Power\_supply Energex\_power

Action	Observation	Result	
Turn the generator to local mode		√Yes	
Fail the Energex power	Confirm that POWER_SUPPLY ENERGEX POWER alarm is received by IDTS	√ Yes	
Restore the Energex power	Confirm that POWER_SUPPLY ENERGEX POWER alarm return to normal is received by IDTS	√ Yes	

Q-Pulse Id TMS863 . Active 10/12/2014 Page 65 of 139

#### IDTS Point: Generator Connected, and Generator supply operational checks

NOTE: The purpose of these operational checks is;

- to confirm Generator is capable of starting all available pumps on site "simultaneously" (each pump start separated only by the RTU/PLC minimum pump start separation time), and running all pumps continuously for at least one minute.
- to confirm the pumps are interlocked under Generator supply (where required)
- to confirm the code changes have not interfered with the operation of the Surcharge Imminent probe.

Action	Observation	Result	
Ensure the Generator is in Automatic mode		√ Yes	
Ensure the pumps are selected for local mode		√ Yes	
Ensure there is enough sewage in the well for the pumps to run continuously for one minute		√ Yes	
Fail the Energex power to the Generator	Confirm that the Generator starts and supplies power to the station	√ Yes	
	Confirm that GENERATOR CONNECTED alarm is received by IDTS	√ Yes	
Press all pumps local start buttons together	Confirm that all pumps (available under Generator supply) start	√ Yes	
Sites: Billan St, Musgrave Rd, Centenary Hwy / Kooringal Dr, Manet St, Sanananda St and Sinnamon Rd.	Confirm the RTU will run a maximum of one pump under generator supply.	√ Yes	
Site: Creek Rd / Oldfield Rd	Confirm the RTU will run a maximum of two pumps under generator supply.	N/A	
Restore Energex power and record the time taken for the Generator controller to	Time for station power to return to Energex supply	120 Secs	
return the station power to Energex supply	Confirm that GENERATOR CONNECTED alarm return to normal is received by IDTS	√ Yes	
Record time taken for the Generator to stop after station power to returns to Energex supply	Time for Generator to stop after station power to returns to Energex supply	300 Sees	

#### Pump Automatic operation, and

#### Surcharge Imminent operation under Generator supply

Action	Observation	Result
Fail the Energex power to the Generator	Confirm that the Generator starts and supplies power to the station	√ Yes
Ensure the pumps are selected for remote mode	Fixed speed pump sites: Confirm that the duty pump lowers the well to the Duty A stop level and stops	√ Yes
	Variable speed pump sites: Confirm that the duty pump operates on variable speed control satisfactorily	√ Yes
Ensure the well level is below the Duty A start level using pump local control as required		√ Yes
Ensure the pumps are selected for remote mode and are stopped		√ Yes
Activate the surcharge imminent probe for at least 10 sec	Confirm that WET_WELL SURCHARGE_IMMINENT alarm is received by IDTS	√ Yes
	Confirm that all pumps (available under Generator supply) start	√ Yes
Ensure the well does not fall below the Duty A stop level by selecting local mode for the pumps as required		√ Yes
Return the surcharge imminent probe to normal	Confirm that WET_WELL SURCHARGE_IMMINENT alarm return to normal is received by IDTS	√ Yes
Restore Energex power indication to the Generator and allow the Generator controller to return the station power to Energex supply		√ Yes

#### **Commissioning Notes:**

- 1. Tested and Site Left In On/Auto Position (10-5-04)
- 2. Unable to run pump 1 as generator will not carry load (10-5-04)
- 3. Generator looked at by SE Power 20-5-04
- 4. Pump 1 run on Generator 5 times to prove
- Site left in Auto (20-5-04)

**IDTS Points and Generator Supply** 

Operational Checks commissioned by ... Peter Rennex

Date 10/5/04





#### **BRISBANE WATER**

# GENERATOR CONNECTION O & M Manual

# Section 4C

Site Testing Generator



#### **SE Power Equipment**

47 Proprietary Street, Tingalpa, Qld 4173 Telephone: (07) 3890-1744 PO Box 3306 Tingalpa B.C. Qld 4173

## DIESEL GENERATOR SET CONTROL FUNCTION TEST REPORT

SEP 009/B

CLIENT: BRISBANE WATER SP	DATE: 25/08/03.				
SERIAL NO: 0308006	JOB NO: 14291				
ENGINE TYPE: BP6H1015	ENG. SERIAL NO: 9147641				
ALTERNATOR TYPE: HCI 534F	ALT. SERIAL NO: 26020				
		· · · · · · · · · · · · · · · · · · ·			
GENSET CONTROL FUNCTIONS	FUNCTION	LAMP	REMARKS		
Engine High Temp, Alarm					
Engine High Temp. Shutdown		/	EMR		
Low Water Level Alarm	/				
B Tripped/Alt., Overload		<b>~</b>			
Low Oil Pressure Alarm			EMB		
Low Oil Pressure Shutdown		- m			
Emergency Stop		U"			
Start Fail Alarm					
Genset Running	/				
MEN Fault					
Starter Motor Relay					
Fuel Low					
Fuel Empty	<i></i>	v,			
Engine Gauges		1.			
Status Lamps/Controls					
Underspeed Shutdown					
Overspeed Shutdown					
Remote Start/Stop					
Lamp Test					
Alarm Shudown		المرامة. المرامة			
Alt Undervolts	/	'سمن			
Alt Overvolts					
harger AC Failed			·		
Control Batt. Low Volts		·			
Start Batt. Low volts	· .				
Canopy doors Open		/			
Audible Alarm/Mute					
Remote ATS Controls					
Alternator High Temperature	,/				
			·		
,					
i					
		<u> </u>			

TESTING OFFICER: HAYDEN ROTH.

Page 71 of 139

Q-Pulse Id TMS863

**CUSTOMER TESTING OFFICER:** 



## DIESEL GENERATOR SET LOAD TEST REPORT

SEP 0064/D

47 Proprietary Street Tingalpa Q 4173 BRISBANE AUSTRALIA

CLIENT: Blis WATER SP239						DATE: 25/08/03.				
SERIAL NO: 0308006				JOB NO/CONTRACT NO: 14291						
ENGINE TYPE: BF6M 1015				$Q_{i,j} = f_{i,j}$						
				ALT. SERIAL NO: 26020						
GOVERNOR TYPE: _		EM	R ·					DEUTZ	_	
OVERSPEED TYPE:		11			UNDERSPEED TYPE: EMP					
SHUTDOWN SOLEN	OID:	li .			HIGH WATER:					
LOW OIL PRESSURE	SHUTDO	)WN:	11							
: 255 + 10% KW: 184 + 10%										
TECHNICAN: PAUL HLAVAA.					INSPECTOR:					
TIME	1130	1145	1500	1230	1300	1330	1345	1400		
OIL PRESSURE	500	500	500	500	460	450	450	460		
OIL TEMPERATURE	NA	NA	NĤ	NA	NA	NA	Ne	NA		
JACKET WATER TEMPERATURE	0	60	80	80	85	35	85	80		
( 0 S	0	607	128.6	190.4	255	255	280	0		
VOLTS <u>ناخ</u>	540 540	111	111	11	7	2			-	
AMBIENT TEMPERATURE	20	50	22	22	23	24	24	2.4		
HZ	50	50	50	50	50	50	50	50		
KW	0	42.7	91.8	135.9	184	184	200.4	0		
LOAD%	.0	25%	50%	75%	100%	100%	110%	0		
REMARKS  Generator_Load_Test_Report.4	loc									•



# GENERATOR SET SOUND PRESSURE LEVEL TEST REPORT

SEP 0023/D

47 Proprietary Street Tingalpa Q 4173 BRISBANE AUSTRALIA

ENGINE TYPE: BF6M1015	DATE: 25/08/03 JOB NO: 14291 ENG. SERIAL NO: 9147641 ALT. SERIAL NO: 26020
5 6 7 8 9 ALT 10	Remarks:  Distance: 7 m  Height: / 5 m

Position Layout

ENG

RAD

POSITION	SOUND LEVEL			LOAD 9	6	
	dB(A)	25	50	75	100	110
1	66				U/	
2	66				/	
3						
4 .	68				1	
5	68 68					
6						
7 -					-	
8						
9						
10						
11					<u> </u>	
12	66.					
Average						

QUALITY ASSURANCE OFFICER:	
CUSTOMER TESTING OFFICER:	
TESTING OFFICER:	PAUL HLAVKA
WITNESS TESTING OFFICER:	PAVID COOPER.

Page 73 of 139



47 Proprietary Street Tingalpa Qld 4173 PH: (07) 3890 1744

SEP0084

#### TRANSIENT LOAD RESPONSE TEST SHEET

Transient response for load changes: Load PF 0.8

% Change Electrical kW	0-25	0-50	0-75	0-100	100-0	75-0	50-0	25-0
Change in Electrical kW					·			
% Change HZ	.8	1.5	.6	3.5	1.4	1.5	7	
% Change Volts	0	1	1	3	0	0	0	1
Recovery sees	3	4	5	5	3	3	1	1

CLIENT: BRISBANE WATER SP239

SIN: 030800G

208 No: 14291

47 Proprietary Street Tingalpa Q 4173 BRISBANE AUSTRALIA



SEP 0013

#### FINAL INSPECTION CHECKLIST

This form is to be completely filled out before any generating set leaves the factory.

It is to be signed by the person doing the inspection and by their immediate supervisor. In the case of a non-standard job it must also be signed by the Special Projects Manager or the Engineering Manager.

A copy of this form is to be sent out with the plant concerned.

Please neatly tick in the boxes provided where applicable and note any comments in the space provided.

	: BW SP239 SERIAL NO: 0308006 ENGINE NO: 914764	. ,
	0: 14 291 DATE: 25/08/03 CUSTOMER: B.W.	
BASE		
(1) (2) (3) (4)	All welds continuous, neat and clean. All bolts tightened. Bearers completely secured. No sharp corners.	( वरा
RADIA	TOR	
(1) (2) (3) (4) (5)	Radiator correctly mounted. All pipework included and secure. Drain plug in place. Water removed from radiator. Clamps on hoses tight.	
ENGINE		
(1) (2) (3) (4) (5) (6) (7) (8) (9) (10) (11) (12) (13) (14)	Fan is correctly mounted. All guards in place and secure. Wiring loom is correct to drawing, securely fixed and marked and is terminated in an appropriate terminal box. Battery leads attached and secure and long enough for termination to batte Air cleaner is properly mounted. Magnetic pickup is fitted and set to correct depth. Exhaust pipe and silencer (where required) are fitted correctly. Dip stick in place. Oil removed from engine. All fuel and oil unions completely tightened. All ordered options are fitted and function correctly. All parts secure, no damage. All earths less than O.1 ohms. Cables and hoses secure for transport.	ক্ষা <u>ক্ষ্</u> ৰিক্ষক্ৰিত্ৰ বিজ্
_	OL SYSTEM (where applicable)	!21
(1) (2) (3)	Control functions as ordered.  Control is mounted correctly.  All leads, terminals, fuses, printed circuit boards and switchgear are completely secure and marked correctly.	
(4) (5) (6) (7)	Dust seals are fitted around doors.  Doors hinged correctly.  All earths less than 0.1 ohms.  Red Danger labels in cubicle.	700

Page 75 of 139

FINAL	INSPECTION CHECKLIST PAGE 2	
~~****	or cycleron (cont)	·
	OL SYSTEM (cont)	_
	- Perspex shield secure, clean and no sharp corners.	4
(9) (10)	Cables connect, no damage. Locks and keys satisfactory.	-
•		_
ALTER	NATOR	г-
(1)	Alternator is correctly mounted.	ر.
(2)	Alternator leads are correctly mounted inside terminal box and marked correctly.	
(3)	A.V.R. is mounted, connected properly and set to correct setting.	r
(4)	Coupling and adaptor are properly fastened between engine and alternator	Γ.
	with correct size and tensile grade bolts.	
(5)	All options ordered are fitted and function properly.	Ļ
(6)	Alternator is correctly wired for the appropriate voltage as per either Order or Bills of Material.	]:
(7)	Earth stud fitted.	
FINIS	<u>H</u>	٠
(1.)	Plant is painted to correct colour.	C
(2)	All blemishes in finish, especially paint runs, are completely removed.	[
	N. T. WITTERSAND ON	
SENER	AL INSPECTION	
(1)	Genset is manufactured to correct engine/alternator/radiator/bases	ſ,
	configuration as specified on Bill of Materials.	-
(2)	All documents are in a sealed plastic bag and secured inside alternator	
	terminal box. a) Engine Handbook	į
	b) Alternator Handbook	
	c) Warranty Card	}
	d) Packing List	}
121	e) Test Sheet No Oil/No Water label is attached to positive battery lead.	-
(3) (4)	All labels are straight and in correct location.	
/		
SIGNE	D: PAUL HLAUKS INSPECTOR	
O TOWNER	7	
	QUALITY ASSUFANCE	
COMME	NTS:	
•		
		_
-		
<del>.</del>		

Page 76 of 139

Operation and Maintenance Data Manual





## **BRISBANE WATER**

# GENERATOR CONNECTION O & M Manual

# **Section 4D**

**Electrical Testing Certificate** 

Power Aut Pre-Start Risk Asse	afety Mic	57777 2 P P S 16 1			Represeo	arvet s				4200	48. 3.	
START	FINISH	And the second second	类的主义	7	ione est la Phone	dell	a ki	44		- ≝ Da		
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	ST 72 7 1	DETAILS =						ne l	HO.	TOTAL.	RATE	EHAR
		TRAVEL TO	SILE		2027							
		Chan	geove	i m	ains.	do,						
		oner			- 15 75 G	7						
	٦,				17. A. T.	**************************************						्रिक्षेत्र १ <u>१</u> १४
		Go	741	koaa	( S	239	MS.			. del T		
·	Š				The T			20 P	4			
							64400 2000					
44	<b>***</b>			an en destado. Portambio		ing a general state of the stat						
				The second		· Ag						-
PLEASE ITEM No:	SEE AT	TACHED FO	DRM FOI		FIONAL		ΤΟΊ	AL L No.	ABOI COST ITEM	UR CHA	RGED:	CHAI
ITEM No:		- 14 M			FIONAL		TOT	No.	COST	TOTAL	<del>}</del>	СНА
1. 2.		- 14 M			FIONAL		ΤΟ	No.	COST	TOTAL	<del>}</del>	CHAI
1. 2. 3.		- 14 M			FIONAL		TÕT	No.	COST	TOTAL	<del>}</del>	CHAI
1. 2. 3. 4.		- 14 M	SCRIPTION		FIONAL		ΤΟΊ	No.	COST	TOTAL	<del>}</del>	CHAI
1. 2. 3. 4. 5.		- 14 M			FIONAL		ΤΟΙ	No.	COST	TOTAL	<del>}</del>	СНА
1. 2. 3. 4. 5. 6.		- 14 M	SCRIPTION		FIONAL		ΤΟΊ	No.	COST	TOTAL	<del>}</del>	СНА
1. 2. 3. 4. 5. 6. 7.		- 14 M	SCRIPTION		FIONAL		ΤΟΊ	No.	COST	TOTAL	<del>}</del>	CHAI
1. 2. 3. 4. 5. 6.		- 14 M	SCRIPTION		TIONAL		ΤΟΙ	No.	COST	TOTAL	<del>}</del>	СНАІ
<b>—</b>		- 14 M			FIONAL		τοτ	No.	COST	TOTAL	<del>}</del>	
1. 2. 3.		- 14 M			FIONAL		TÕT	No.	COST	TOTAL	<del>}</del>	СНА
1. 2. 3. 4.		- 14 M	SCRIPTION		FIONAL		ΤΟΊ	No.	COST	TOTAL	<del>}</del>	СНА
1. 2. 3. 4. 5.		- 14 M	SCRIPTION		FIONAL		ΤΟΙ	No.	COST	TOTAL	<del>}</del>	СНАІ
1. 2. 3. 4. 5. 6.		- 14 M	SCRIPTION		FIONAL		ΤΟΊ	No.	COST	TOTAL	<del>}</del>	CHAI
1. 2. 3. 4. 5. 6. 7.		- 14 M	SCRIPTION		FIONAL		ΤΟΊ	No.	COST	TOTAL	<del>}</del>	CHAI
1. 2. 3. 4. 5. 6. 7. 8.		- 14 M	SCRIPTION		FIONAL		ΤΟΊ	No.	COST	TOTAL	<del>}</del>	CHAI

Page 80 of 139

Active 10/12/2014





# **BRISBANE WATER**

# GENERATOR CONNECTION O & M Manual

# Section 5


**Parts Information** 

Q-Pulse Id TMS863 Active 10/12/2014 Page 81 of 139

# ACO CABLEMATE

#### Type 66H Polymer Concrete Pit

667mm x 667mm x 915mm depth

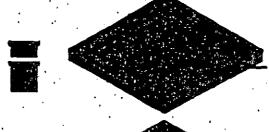

- Granted elect Received Stranger

#### Pit Data

Description	Pert No.	Weight by
Type 66H Folymer Cancrele PR	75224	86.4
Type 66H Polymer Essecute PR for Locking Cover	75211	27.6
Type 44 Polymer Concrete Extension Riser	75126	#1.4
Type 44 Polymer Controls Estention Bleef for Locking Count	75133	26.0
		:

#### Cover Data


Description	Part Ma.	Helphi hg
Type 44 Palyaer Concrete Ltd - Want	. 7116	14.1
Type 44 Polymer Controlle Lid - Communications	78154	24.2
Type 64 Palymer Concrets Lid - Bircuricity	73159	. 142
Type 66 Gelvanised Sted Cover	- 75177	26.9
Type de Lacking Gairenfoed Strei Cover	73165	16.0
Type 66 Milkery Locking Galvenises Seed Cover	21193	22.7

7,1247

75211

Type 44 Light Dely Received Access Cover - Lock & Seel

Type 64 Med Duty Received Access Cover - Lock & Lock

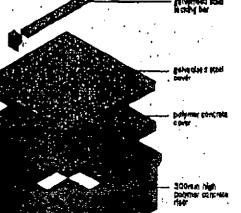


gd gd

LL69191810 010 310130838V

68:11 8007 : 485:6182 of 139

Q-Pulse Id TMS863

# Catalogue No. 56Al310

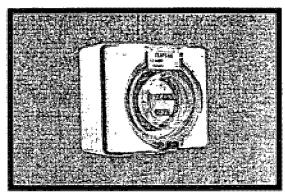

#### **Colour Options**

GY Grey

Resistant Orange

More colour options may be available. Please check with your nearest Clipsal office.

#### Description:

Appliance Inlets, 250V 10A - 3 Flat pins

#### Item Type

02 Industrial Products

#### **Business Area**

40 Industrial Switchgear

#### **Product Group**

400 56 Series Industrial Switchgear

#### Item Group

40001 Appliance Inlets

#### **Brochures Available:**

56AI Series installation instructions

56 Series flyer

56 and 66 Series technical data


56 Series Features

A Specifiers guide to Clipsal Industrial

A Specifiers guide to Clipsal Industrial

A Specifiers guide to Clipsal Industrial

# Catalogue No. WIPM27

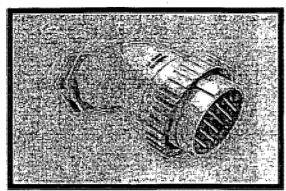

#### **Colour Options**

No colour options

TR Transparent

More colour options may be available. Please check with your nearest Clipsal office.

#### **Description:**

Plugs And Extension Sockets - Wilco, Low Voltage, Multipin - 27 pin maximum

#### Item Type

02 Industrial Products

#### **Business Area**

40 Industrial Switchgear

#### **Product Group**

403 Wilco Hi-Impact Industrial Switchgear

#### Item Group

40303 Plugs & Extension Sockets


#### **Brochures Available:**

A Specifiers guide to Clipsal Industrial

A Specifiers guide to Clipsal Industrial

A Specifiers guide to Clipsal Industrial

# Catalogue No. 56CSC310

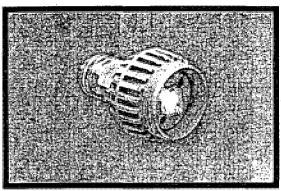

#### **Colour Options**

Electric Orange

Resistant Orange

More colour options may be available. Please check with your nearest Clipsal office.

#### Description:

Plugs And Extension Sockets, 250V 10A - 3 Flat pins

#### Item Type

02 Industrial Products

#### **Business Area**

40 Industrial Switchgear

#### **Product Group**

400 56 Series Industrial Switchgear

#### Item Group

40004 Plugs & Extension Sockets

#### **Brochures Available:**

56CSC and 56PO series wiring instructions

56CSC310, 56CSC315 wiring instructions

56 Series flyer

56 and 66 Series technical data

56 Series Features

A Specifiers guide to Clipsal Industrial

A Specifiers guide to Clipsal Industrial

A Specifiers guide to Clipsal Industrial

#### PRICE BOOK JUNE 2003

#### DORE ELECTRICS

PH: 07 3349 5300 FAX: 07 3349 5344

# **Insulators** (Stand-Off)

Chemical and Oil Resistant

SCHEDULE 1

#### 600Volts Rated - Compression Moulded - Glass Re-Inforced Polyester Material

•	High Dielectric Strength	•	High Mechanical Strength
•	Arc Quenching and Non Tracking	•	Dimensional Stability
•	Non Flammable	•	Moulded In Brass Inserts
•	Wear and Corrosion Resistant	•	Metric and Imperial Thread Sizes

Part No.	Type	Height	Thread	Price
BBLV25	Α	25mm	M6	\$5.50
BBLV25H	Н	25mm	M6	\$5.88
BBLV30H	H	30mm	M8	\$5.88
BBLV35D	D	35mm	M8	\$5.98
BBLV35E	Е	35mm	M8	\$6.00
BBLV35	В	35mm	M8	\$8.00
BBLV35M10	В	35mm	M10	\$8.00
BBLV38	В	38mm	M8	\$8.35
BBLV40H8	Н	40mm	M8	\$6.10
BBLV40H	Н	40mm	M10	\$6.10
BBLV45	В	45mm	M10	\$8.50
BBLV50	В	50mm	M10	\$8.60
BBLV50H	Н	50mm	M10	\$6.20
BBLV50E	E	51mm	M8	\$6.10
BBLV50S	С	50mm	M10	\$7.80
BBLV60H	Н	60mm	M12	\$6.96
BBLV63S	С	63mm	M10	\$8.10
BBLV75D	D	75mm	M10	\$6.96
BBLV75D12	D	75mm	M12	\$7.00
BBLV75S	С	75mm	M10	\$8.35
BBLV75	В	75mm	M10	\$11.50



Quality Finish and Appearance



Type B





Type C

Type E





Type D

Type H

# **Bracket** (Horizontal - Vertical)

Ε

Part No.	Description	Price
ACCP2	For Transformation Horizontal - Vertical	\$5.00

76mm

M10


\$7.56

SCHEDULE 1

# Standoff with foot

BBLV76E

Part No.	Type	Height	Thread	Price
NBB745	F	30mm	M8	\$8.10

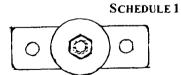

GST - NOT INCLUDED


PRICES SUBJECT TO CHANGE WITHOUT NOTICE

**PAGE 42** 



NHP E-Cat online website Friday, June 18, 2004 4:12:30 PM User: Not logged in



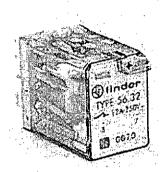

Catalogue Number:

56.32.0070 24VDC

Description:

PLEASE ORDER 5632007424VDC

List Price \$ (Not including GST):

(8)

Unit of Measure:

EΑ

Price Schedule:

**B2** 

# Relays-plug-in type

Flat pin

#### Contact arrangement

2 C/O

Voltage

24V DC

#### Number of pins

#### **Features**

- 2 pole changeover contacts rated at 12 amps (250VAC-AC1).
- LED and press to test as standard.
- 4.8mm x 0.5mm flat pins suitable for plug-in sockets.
- Available in 11 AC/DC coil voltages.
- PCB mounting as option.
- Designed and manufactured to common standards.
- Small dimensions.
- Approved by international standards.
- A large range of bases and sockets including various types of mounting such as Din rail, rear connected panel mounting, plug-in PCB
- Selection of options include manual test button, flange mounting, high temperature versions and hermetically sealed versions.

#### Benefits

- Capable of switching a number of substantial loads.
- Visual indication for coil operation and latching enables simultaneous testing.
- Can fit directly onto printed circuit boards for power switching.
  Reduced panel space required to keep switchboard costs to a minimum.
- This relay can be offered to manufacturers who export equipment that require these compliance approvals.

#### Ordering Information

DC supply version also available without LED - 563224VDC

Copyright NHP Electrical Engineering Products Pty. Ltd.

All prices are exclusive of GST.



# Basic Transfer Switches (BTS) with motor

MCCBs	Ampere	(415	•			ll 3 pole ' sions (m		Cat. No. ') 3 pole	Cat. No. ') 4 pole
used	Range	lcu	lcs	OCR type	W	H ²)	D	BTS	BTS
XS125CJ	40-63	18	9	Therm Mag	305	209	235	BS1C633	BS1C644
XS125CJ	63-100	18	9	Therm Mag	305	209	235	BS1C133	BS1C144
XS125CJ	79-125	18	9	Therm Mag	305	209	235	BS1C233	BS1C244
XS125NJ	40-63	30	15	Therm Mag	305	209	235	BS1N633	BS1N644
XS125NJ	63-100	30	15	Therm Mag	305	209	235	BS1N133	BS1N144
XS125NJ	79-125	30	.15	Therm Mag	305	209	235	BS1N233	BS1N244
XH125NJ	40-63	50	25	Therm Mag	305	209	235	BH1N633	BH1N644
XH125NJ	63-100	50	25	Therm Mag	305	209	235	BH1N133	BH1N144
XH125NJ	79-125	50	25	Therm Mag	305	209	235	BH1N233	BH1N244
XH125PJ	40-63	50	50	Therm Mag	305	209	235	BH1P633	BH1P644
XH125PJ	63-100	50	50	Therm Mag	305	209	235	BH1P133	BH1P144
XH125PJ	79-125	50	50	Therm Mag	305	209	235	BH1P233	BH1P244
XH160PJ	100-160	50	50	Therm Mag	336	237	258	BH2P133	BH2P144
XS250NJ	100-160	35	18	Therm Mag	336	237	241	BS2N133	BS2N144
XS250NJ	163-250	35	18	Therm Mag	336	237	241	BS2N233	BS2N244
XH250NJ	100-160								
		50	25	Therm Mag	336	237	258	BH2N133	BH2N144
XH250NJ	100-250	50	25	Therm Mag	336	237	258	BH2N233	BH2N244
XS400CJ	100-250	35	18	Therm Mag	500	323	325	BS4C233	BS4C244
XS400CJ	250-400	35	18	Therm Mag	500	323	325	BS4C433	BS4C444
XS400NJ	163-250	50	25	Therm Mag	500	323	<b>32</b> 5	BS4N233	BS4N244
XS400NJ	250-400	50	25	Therm Mag	500	323	325	BS4N433	BS4N444
XH400PJ	250-400	65	50	Therm Mag	5 <b>0</b> 0	323	325	BH4P433	BH4P444
XS400SE	125-250	50	25	Electronic	500	323	325	BS4S233	BS4S244
XS400SE	200-400	50	25	Electronic	500	323	325	BS4S433	BS4S444
XH400SE	125-250	65	33	Electronic	500	323	325	BH4S233	BH4S244
XH400SE	200-400	65	33	Electronic	500	323	325	BH4S433	BH4S444
XH400PE	125-250	65	50	Electronic	500	323	325	BH4P233	BH4P244
XH400PE	200-400	65	50	Electronic	500	323	325	BH4P433	BH4P444
XS630CJ	250-400	45	23	Therm Mag	550	433	341	BS6C433	BS6C444
XS630CJ	400-630	45	23	Therm Mag	550	433	341	BS6C633	BS6C644
XS630NJ	250-400	65	33	Therm Mag	550	433	341	BS6N433	BS6N444
XS630NJ	400-630	65	33	Therm Mag	550	433	341	BS6N633	BS6N644
XH630PJ	250-400	85	50	Therm Mag	550	433	341	BH6P433	BH6P444
XH630PJ	400-630	85	50	. Therm Mag	550	433	341	BH6P633	BH6P644
XS630SE	315-630	65	33	Electronic	550	433	341	BS6S633	BS6S644
XH630SE	315-630	65	33	Electronic	550	433	341	BH6S633	BH6S644
XH630PE	315-630	65	50	Electronic	550	433	341	ВН6Р633	BH6P644
XS800NJ	500-800	65	33	Therm Mag	550	433	341	BS8N833	BS8N844
XH800PJ	500-800	85	50	Therm Mag	550	433	341	BH8P833	BH8P844
XS800SE	400-800	50	25	Electronic	550	433	341	BS8\$833	BS8S844
XH800PE	400-800	65	50	Electronic	550	433	341	BH8P833	BH8P844
XS1250SE	500-1000	65	49	Electronic	553	530	300	BS12S1033	BS12S1044
XS1250SE	625-1250	65	49	Electronic	553	530	300	BS12S1233	BS12S1244
XS1600SE	800-1600	85	64	Electronic	553	570	320	BS16S1633	BS16S1644
XS2000SE	1000-2000	100	64	Electronic	774	490	361 ³)	BS20E2033	BS20E2044
XS2500SE	1250-2500	100	64	Electronic	774	490	361 ³)	BS25E2533	BS25E2544
TL100NJ	40-63	85	85	Therm Mag	305	300	235	BT1N633	BT1N644
TL100NJ	63-100	85	<b>8</b> 5	Therm Mag	305	300	235	BT1N133	BT1N144
TL250NJ	163-250	100	100	Therm Mag	500	323	325	BT2N233	BT2N244
TL400NE	200-400	100	100	Electronic	500	323	325	BT4E433	BT4E444
TL630NE	315-630	125	70	Electronic	553	490	320	BT6E633	BT6E644
TL800NE	400-800	125	70	Electronic	<b>5</b> 53	490	320	BT8E833	BT8E844
TL1250NE	625-1250	125	65	Electronic	553	490	320	BT12E1233	BT12E1244
				2,000,01110	333	-700		J., LL, 200	

Note: ') Ordering sheet refer page 9 - 21



Q-Pul**%-7d 6**MS863

Page 88 of

<sup>&</sup>quot;) Height includes attached busbar on sizes 630 A & above.

<sup>3)</sup> Depth does not include rear connect busbars.

<sup>1)</sup> Detailed dimensions 3/4 pole refer following pages.

sprecher+ schuh The ultimate

NHP

# D5-3N

Integrated LED Lamp Blocks

- 5 Colour choices
- Available in voltages up to 240 V AC
  - 11 year lamp life (100,000 hours)
  - Maintenance free
  - Vibration and shock resistant
  - Snap lock fit to existing D5 coupling latch
- Superior illumination qualities
- IP 20 finger protection on live components
- Clear identification of function
- Suitable for use with existing D5 illuminated operators and pilot lights


ELECTRICAL ENGINEERING PRODUCTS PTY LTD




Sprecher + Schuh has once again expanded and improved illumination options for the popular D5 22.5 mm control and signalling products by developing a new range of modular integrated LED lamp

blocks. When used in conjunction with Sprecher + Schuh D5 illuminated operators and pilot lights these lamp blocks catalogued D5-3N, provide

brightness superior to that of traditional illumination methods.

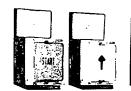




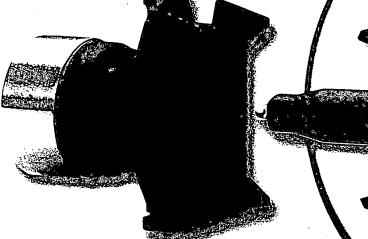

This is particularly the case when used with D5 optically enhanced lenses.

LED lamps are renown for providing optimum true colour and great resistance to shock and vibration. In addition, they have internal circuitry for use with solid state outputs, making them ideal for use with PLC inputs. The new D5-3N series integrated LED lamp blocks offer all

of the above and a tested lamp life of approximately 100,000 hours.

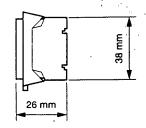

#### **Ordering Information**

Available colours:

Red (R) Green (G)

Amber (A) Blue (B)

White (W)

Insert corresponding letter at the end of part number; eg: D5-3NL3R = RED

Lamp Block Width: 9.5 mm

Voltage	Nominal Current Consumption 1)	Description	Catalogue Number
24 V AC/DC	54 mA	Lamp Block with Operator latch	D5-3NL3_
120 V AC	18 mA	Lamp Block with Operator latch	D5-3NL5_
240 V AC	24 mA	Lamp Block with Operator latch	D5-3NL7_
24 V AC/DC	54 mA	Lamp Block without Operator latch	D5-3N3_
120 V AC	18 mA	Lamp Block without Operator latch	D5-3N5_
240 V AC	24 mA	Lamp Block without Operator latch	D5-3N7_

Approximate permissible leakage current 3 mA.



# ECTRICAL ENGINEERING PRODUCTS PT

vw.nhp.com.au 🏋

Sydney Townsville Newcastle +61 2 4960 2220 +61 7 3891 6008 +61 7 4779 0700

Rockhampton Topwoomba +61 2 4960 2203 +61 7 3891 6139 +61 7 4775 1457 +61 7 4922 2947 +61 7 4833 1796 +61 7 4035 6999 +61 8 8371 0962 +61 8 9277 1700 +61 8 8947 2049 +61 3 6228 9757

Caims


+81,7 4927 2277 +81 7 4634 4799 +61 7 4035 6888 +81 8 8297 9055 +81 8 9277 1777 +61 8 8947 2666 +61 3 6228 9575

D5-3NF 08/02/15490 of 139



NHP E-Cat online website Friday, June 18, 2004 2:59:42 PM User: Not logged in



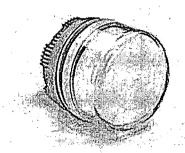

Catalogue Number:

**D5P-P5** 

Description:

PILOT LIGHT ELEMENT YELLOW

List Price \$ (Not including GST):

(8)

Unit of Measure:

FΑ

Price Schedule:

A2

#### **Pushbutton Products**

Pilot Light and Buzer

Mounting Size

22.5mm

Specification

Lamp Body Only

Shape

Round

Style / Frame

Standard

Colour

Yellow

Lamp Block

Operator Only

#### **Features**

- SiPart of the vast D5 range of matching 22.5 mm. control and signalling units providing IP 66 front protection
- Assembled round plastic pilot light front element
- Standard yellow lens cap with diffuser 4 other colours available
- Easy to mount
- Accepts coupling plate with clip-on standard lamp holder
- Wide range of legends availble to complete the assembly
- Individually packaged component

#### **Benefits**

- The D5 range combines aesthetic appeal with robust flexibility to suit heavy-duty industrial control applications
- Readily visible
- Choice of pre-assembled clip-on rear elements
- When fixing pliot light it will hold in place without a notched panel hole,
- Saves time and allows fitting by one person only
- Simplified ordering and spares holding

Copyright NHP Electrical Engineering Products Pty. Ltd.

All prices are exclusive of GST.

# Miniature circuit breakers

#### Din-Safe MCBs (RCBO)

- Standard AS/NZ 61009.
- Approval N17482.
- Mines Department Approval Pending.
- Short circuit, overcurrent and earth leakage protection.
- Handle sealable and padlockable.
- DIN Rail mounting.

#### Din-Safe MCB with pigtail

Poles	Amp rating	Voltage	Short circuit	Phase	Trip *) Sens.	Cat. No
2	6	240	10 kA	1+N ')	30 mA	DSRCB0630P
2	10	240	10 kA	1+N ')	30 mA	DSRCB1030P
2	16	240	10 kA	1+N ')	10 mA	DSRCB1630P
2	20	240	10 kA	1+N ')	30 mA	DSRCB2030P
2	25	240	10 kA	1+N )	30 mA	DSRCB2530P
2	32	240	10 kA	1+N ')	30 mA	DSRCB3230P
2	40	240	10 kA	1+N )	30 mA	DSRCB4030P

#### Din-Safe MCB standard terminal configuration


Pole	Amp s rating	Voltage	Short circuit	Phase	Trip ') Sens.	Cat. No 3)
2	6	240	10 kA	1+N <sup>2</sup> )	10 mA	□DSRCB0610A
2	6	240	10 kA	1+N <sup>-2</sup> )	30 mA	□DSRCB0630
2	10	240	10 kA	1+N <sup>2</sup> )	10 mA	DSRCB1010A
2	10	240	10 kA	1+N-)	30 mA	DSRCB1030
2	10	240	10 kA	1+N-)	100 mA	DSRCB10100
2	16	240	10 kA	1+N <sup>-2</sup> )	10 mA	DSRCB1610A
2	16	240	10 kA	1+N ·)	30 mA	DSRCB1630
2	16	240	10 kA	1÷N <sup>-1</sup> )	100 mA	□DSRCB16100
2	20	240	10 kA	1÷N <sup>-1</sup> )	10 mA	□DSRCB2010A
2	20	240	10 kA	1+N <sup>-2</sup> )	30 mA	DSRCB2030
2	20	240	10 kA	1+N·)	100 mA	□DSRCB20100
2	25	240	10 kA	1+N:)	30 mA	DSRCB2530
2	32	240	10 kA	1+N <sup>-1</sup> )	30 mA	DSRCB3230
2	40	240	10 kA	1+N <sup>-1</sup> )	30 mA	DSRCB4030

#### Application

Din-Safe MCB is a combined MCB/RCD providing thermal overload, short circuit and earth leakage protection in the one integral unit.

Din-Safe MCBs are suitable for use in residential, commercial and light industrial applications.

#### Terminal configuration

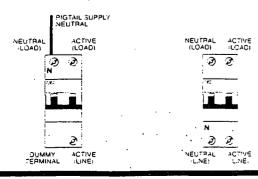



DIN-Safe MCB with neutral pigtail suits standard 3 phase chassis



**DIN-Safe MCB** standard terminal configuration

#### Characteristics

- Width: 2 modules.
- For type AC residual currents.
- Rated voltage: 240 V/50-60 Hz.
- Tripping characteristics of MCB part: IEC 898 - C curve.
- Short circuit capacity: 10 kA.
- Terminal capacity: 25 mm².
- High immunity to transient current.
- Profile as per Din-T MCB.
- Test button for periodic testing.

4ccessories	⇒age
Auxiliary/Alarm	Page 1 - 31
Shunt trip	Page 1 - 29
Padlock bracket	Page 1 - 33
Link bars and terminals	Page 1 - 33. 39
Enclosures	Section 2
Tecnnical data	

Page 3 - 29
Page 3 - 45
Section 3

#### Notes:

- Unprotected neutral, not switched.
- Unprotected neutral, switched.
- Fits Din-T chassis (special configuration) refer page TBA.
- Mines department approval applies to 30 mA only.

Nuisance tripping may be experienced in VFD and motor starting applications refer NHP.

Available on indent only.

# Miniature circuit breakers

#### Din-Safe single pole width residual current circuit breaker (RCBO)

- ☐ Standards AS/NZ 1009.
- Approval N17482.
- Mines department approval Pending.
- One module wide (18 mm).
- ☐ Short circuit, overcurrent and earth leakage protection.
- Short circuit protection 10 kA.
- Sensitivity 10 and 30 mA.
- Din rail mount.
- Suits CD chassis.

Amp rating	Modules (18mm)	Voltage AC	Short circuit	Trip Sensitivity 3) Cat. No 3) 2)
6	1	240	10 kA	30 mA DSRCBH0630A
10	1	240	10 kA	30 mA <b>DSRCBH1030A</b>
6	1	240	10 kA	30 mA <b>DSRCBH1630A</b>
20	1	240	10 kA	30 mA <b>DSRCBH2030A</b>
25	1	240	10 kA	30 mA <b>DSRCBH2530A</b>
32	1	240	10 kA	30 mA <b>DSRCBH3230A</b>
40	1	240	10 kA	30 mA <b>DSRCBH4030A</b>
6	1	240	10 kA	10 mA <b>DSRCBH0610A</b>
10	1	240	10 kA	10 mA <b>DSRCBH1010A</b>
16	1	240	10 kA	10 mA <b>DSRCBH1610A</b>
20	1	240	10 kA	10 mA <b>DSRCBH2010A</b>
25	1	240	10 kA	10 mA <b>DSRCBH2510A</b>
32	1	240	10 kA	10 mA <b>DSRCBH3210A</b>
40	1	240	10 kA	10 mA <b>DSRCBH4010A</b>


- 'Note: ') Neutral not switched
  - Will not accept side mounting accessories
- a) Mines Dept. approval applies to 30 mA units only.

#### Operation

This unit combines the overload and short circuit protection of an MCB ith earth leakage protection of an RCD. The unit occupies one, subcircuit (one pole) of the distribution board and provides single phase protection against overload, short circuit and earth leakage current.

- The MCB element provides thermal and magnetic tripping protection which is rated to 10 kA prospective fault current.
- The RCD element of the device provides core-balance detection of the difference between the active and neutral currents and amplification to provide high sensitivity. The rated residual operating current (Ian) is 10 mA or 30 mA.
- The green/yellow earth reference cable in case of loss of supply neutral ensures the device will continue to provide earth leakage protection and will operate normally upon detection of an earth leakage current.

#### Dimensions (mm)

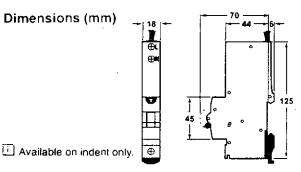




#### Application

The Din-Safe single pole width residual current circuit breaker will fit the standard Din-T chassis for use in NHP panelboards. The design makes it possible to provide an MCB complete with earth leakage protection in an 18 mm wide module which allows a greater number of devices to be fitted into a distribution board.

#### Connection diagram

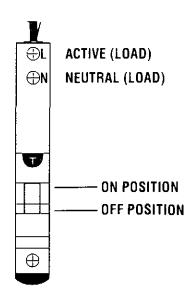

#### Accessories

Padlock bracket	Page 1 - 33
Link bars and terminals	Page 1 - 33, 39
Enclosures	Section 2
Technical data	
Tripping characteristics	Page 3 - 29
Technical data / wiring	Page 3 - 35

Nuisance tripping may be experienced in VFD and motor starting applications refer NHP

## NHE

# Miniature circuit breakers

#### Din-T 6 series 6 kA MCB

- □ Standards AS3111, IEC 898.
- ☐ Approval No. N17481.
- ☐ Current range 2-63 Amps 1, 2 and 3 pole.
- ☐ Sealable and lockable handle.
- Available in curve type C and D.
- (250 A and 355 A).





#### Short circuit capacity 6 kA

In (A)	2 - 63
1P	240 V AC
2P	240 - 415 V AC
3P	240 - 415 V AC

$\Gamma$	1160
DC	use

	1P	2P ')
Short circuit	20 kA	25 kA
Max.voltage (DC)	60 V	125 V

#### Use at DC

When using Din-T6 in a DC application the magnetic tripping current is approximately 40 % higher than in AC 50/60 Hz.

#### Shock resistance (In X. Y. Z directions).

20 g with shock duration 10 ms (minimum 18 shocks). 40 g with shock duration 5 ms (minimum 18 shocks).

#### Vibration resistance (In X, Y, Z directions).

3 g in frequency range 10 to 55 Hz (operating time at least 30 min). According to IEC 60068-2-6.

#### Storage temperature

From -55  $^{\circ}$ C to +55  $^{\circ}$ C, according to IEC 88 part 2 - 1 (duration 96 hours).

#### Operating temperature

From -25 °C to +55 °C, according to VDE 0664 parts 1 and 2.

#### Use at 400 Hz

At 400 Hz the magnetic trip current is approximately 50 % higher than in AC 50/60 Hz.

Accessories	Section
Add on RCD	1 - 21
Auxiliary/alarm	1 - 31
Shunt trip	1 - 29
UVT	1 - 30
Padlockable bracket	1 - 33
Link bars & terminals	1 - 33, 39
Enclosures	2
Busbar chassis	2 - 35

Technical data	Section
Technical data	3
Tripping characteristics	3 - 6, 8
Dimensions	3 - 22

Notes: ') 2 pole MCB connected in series.

The line side is the "OFF" (bottom) side of the MCB.

Available on indent only.

1 pole 1 module	(	,.
•	C – Curve	D – Curve
In (A)	5-10in	10-20in
2	DTCB6102C	DTCB6102D
4	DTCB6104C	DTCB6104D
6	DTCB6106C	DTCB6106D
10	DTCB6110C	DTCB6110D
13	∐ DTCB6113C	U DTCB6113D
<b>;</b>	DTCB6116C	DTCB6116D
20	DTCB6120C	DTCB6120D
25	DTCB6125C	DTCB6125D
32	DTCB6132C	DTCB6132D
40	DTCB6140C	DTCB6140D
50	DTCB6150C	DTCB6150D
63	DTCB6163C	DTCB6163D
2 pole 2 modules		
. 2	DTCB6202C	DTCB6202D
4	DTCB6204C	DTCB6204D
6	DTCB6206C	DTCB6206D
10	DTCB6210C	DTCB6210D
13	DTCB6213C	<u> </u>
16	DTCB6216C	DTCB6216D
22	DTCB6220C	DTCB6220D
	DTCB6225C	DTCB6225D
32	DTCB6232C	DTCB6232D
40	DTCB6240C	DTCB6240D
50	DTCB6250C	DTCB6250D
63	DTCB6263C	DTCB6263D
3 pole 3 modules	·	
2 ,	DTCB6302C	□DTCB6302D
4	DTCB6304C	□DTCB6304D
6	DTCB6306C	□DTCB6306D
10	DTCB6310C	DTCB6310D
13	DTCB6313C	
16	DTCB6316C	DTCB6316D
20	DTCB6320C	DTCB6320D
25	DTCB6325C	DTCB6325D
32	DTCB6332C	DTCB6332D
40	· · · · · · · · · · · · · · · · · · ·	DTCB6340D
50	DTCB6350C	DTCB6350D
63	DTCB6363C	DTCB6363D

Page 94 of 139

# Miniature circuit breakers

## Din-T10 series 10 kA MCB (cont.)

#### 3 pole 3 modules

In (A)	B – Curve 3-5 In	C – Curve 5-10 In	D – Curve 10-20 In
0.5	DTCB10305B	<b>□</b> DTCB10305C	<b>□</b> DTCB10305D
1	DTCB10301B	<b>□ DTCB10301C</b>	<b>□</b> DTCB10301D
2	DTCB10302B	DTCB10302C	<b>□</b> DTCB10302D
4	DTCB10304B	DTCB10304C	<b>□</b> DTCB10304D
6	DTCB10306B	DTCB10306C	<b>■ DTCB10306D</b>
10	DTCB10310B	DTCB10310C	DTCB10310D
13	<b>■ DTCB10313B</b>	<b>□ DTCB10313C</b>	<b>■ DTCB10313D</b>
16	DTCB10316B	DTCB10316C	DTCB10316D
20	DTCB10320B	DTCB10320C	DTCB10320D
25	DTCB10325B	DTCB10325C	DTCB10325D
32	DTCB10332B	DTCB10332C	DTCB10332D
40	DTCB10340B	DTCB10340C	DTCB10340D
50	DTCB10350B	DTCB10350C	DTCB10350D
63	DTCB10363B	DTCB10363C	DTCB10363D

#### 4 pole 4 modules 1)

6	DTCB10406B	DTCB10406C	<b>■ DTCB10406D</b>
10	DTCB10410B	DTCB10410C	<b>□ DTCB10410D</b>
13	<b>■ DTCB10413B</b>	<b>■ DTCB10413C</b>	<b>■ DTCB10413D</b>
16	DTCB10416B	DTCB10416C	<b>□ DTCB10416D</b>
20	DTCB10420B	DTCB10420C	<b>■ DTCB10420D</b>
25	DTCB10425B	DTCB10425C	i DTCB10425D
32	DTCB10432B	DTCB10432C	<b>□ DTCB10432D</b>
40	DTCB10440B	DTCB10440C	DTCB10440D
50	DTCB10450B	DTCB10450C	DTCB10450D
63	DTCB10463B	DTCB10463C	DTCB10463D



DTCB10 1 - 4 pole types

 UVT
 1 - 30

 Padlock bracket
 1 - 33

 Link bars and terminals
 1 - 33, 39

 Enclosures
 2

 Busbar chassis
 2 - 35

**Accessories** 

Add on RCD

Shunt trip

Auxiliary/alarm

Technical dataSectionTechnical data3Tripping characteristics3 - 6, 8Dimensions3 - 22

**Notes:** ') All poles include over-current and short circuit protection.

Available on indent only

Q-Pu**i**se i**l:6**TMS863

Section

1 - 21


1 - 31

1 - 29



NHP E-Cat online website Friday, June 18, 2004 1:50:42 PM User: Not logged in

# Strömberg

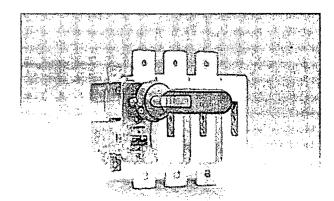

Catalogue Number:

**OETL 800K3** 

Description:

SWITCH LOAD, 3P 800A

List Price \$ (Not including GST):

(33)

Unit of Measure:

EA

Price Schedule:

B2

#### Load-break switches

#### Base mount

**Current AC21** 

**Current AC23** 

720

Power AC23

355

No. of poles

Handle pos.

Outboard

Switch style

Standard

#### **Features**

- Compact modular design to IEC and Aus. Standards
- High short-circuit rating
- Made from track-resistant materials
- Strong black plastic operating handle to IP65
- Door interlocked in ON position
- Positive switch position indication ON-OFF / I-O
- Adjustable shaft length
- Up to 3 padlocks can be fitted in Off position
- Visible contacts through removable windows
- Facility to add multiple positive break aux. switches
- Keyhole mounting holes
- Terminal bolt kits included
- Availability to fit many different accessories, eg. Change-over mechanisms, mechanical and electrical interlocks, parallel operation and motor operation

#### **Benefits**


- Proven reliable performance under the most arduous of operating conditions
- Minimum space requirements
- Dust and hose proof at handle sealing
- Designed for maximum operator safety
- Contacts can be seen to be open and secured with padlocks by up to 3 different trades people for maximum safety.
- Simple and flexible mounting and connecting facilities
- Easily adapted to suit different cubicle depths
- Adequate provision of remote status indication
- Can be adapted for many special applications including remote control

#### Ordering Information



NHP E-Cat online website Tuesday, June 22, 2004 9:52:56 AM User: Not logged in

# Strömberg

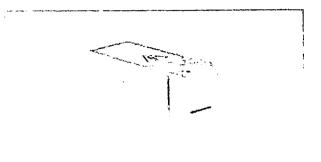

Catalogue Number:

**OETL ZX128** 

Description:

SHROUD TERM,1P OETL200..315

List Price \$ (Not including GST):

(3)

Unit of Measure:

EA

Price Schedule:

**B2** 

#### Load-break switches

#### **Shrouds**

#### Type

Terminal

#### To suit

OETL 200-315

#### Mounting pos.

Lineside or Loadside

#### No. of poles

#### **Features**

- Terminal shroud ZX 128, to suit OETL 200... 315A loadbreak switches.
- The clear, insulated shrouds cover line and/or load side terminals. They are individual or 1 pole shrouds.
- Three pole requires 6 pieces for full protection, four pole requires 8 pieces.

- Terminal shrouds offer touch protection against accidental contact at the point of termination.
- Each shroud carries a brightly coloured warning label.

Copyright NHP Electrical Engineering Products Pty. Ltd.


All prices are exclusive of GST.



NHP E-Cat online website Friday, June 18, 2004 1:53:42 PM

User: Not logged in

# Strömberg

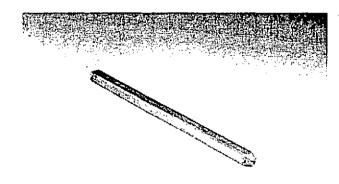

Catalogue Number:

**OXP 12X325** 

Description:

SHAFT, 12/325

List Price \$ (Not including GST):



Unit of Measure:

EA

Price Schedule:

**B2** 

### Load-break switches **Shafts**

#### Type

12mm

#### To suit

OETL 400-1600, OS 200-800

#### Length (mm)

325mm

#### **Features**

- Extended square shaft to suit OETL 400... 1600 loadbreak switches.
- Shaft size: 12mm.
- Shaft length: 325mm
- Accessories available to suit shafts include:
- shaft extension sockets.
- adaptors for extension sockets,
- handle support brackets and
- 90deg angle kits.

#### Benefits

- These high quality metal shafts can be ordered separately or at the time of switch purchase. Naturally they are available as spare or replacement parts.
- The shafts can be cut to length depending on requirements.


#### Ordering Information

Shafts can be cut down to size.

Copyright NHP Electrical Engineering Products Pty. Ltd.

All prices are exclusive of GST.

**UK 5 N** 

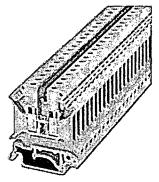

Universal terminal block with screw connection, cross section: 0.2 - 4 mm<sup>2</sup>, AWG: 30 - 10, width: 6.2 mm, color: gray

Accessories Technical data Certificates PDF File

**Q** 

rt

view cart

#### General data

Order number 3004362
Type UK 5 N

Barcode number 4017918090760

Unit pack 50 Pcs.

Customs tariff 85369010000


Max. conductor cross section, flexible 4 mm²

Conductor cross section, rigid max. 6 mm²

Conductor cross section AWG/kcmil max 10

Nominal current I<sub>N</sub> 41 A

#### **E/NS 35 N**

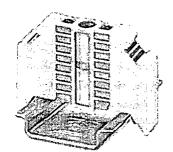

End bracket, width: 9.5 mm, color: gray



<u>@</u>

010

add to cart

view cart

General data

Order number

Type

Barcode number

Unit pack

Customs tariff

Color

0800886

E/NS 35 N


4017918129309

50 Pcs.

85369010000

gray

**USLKG 5** 

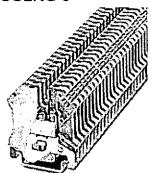

Ground terminal block with screw connection, cross section: 0.2 - 4 mm², AWG: 26 - 10, width: 6.2 mm, color: green-yellow

☐▶ Accessories ☐▶ Technical data ☐▶ PDF File



add to

view cart

General data

Order number

Type

Barcode number

Unit pack

Customs tariff

Max. conductor cross section, flexible

Conductor cross section, rigid max.

Conductor cross section AWG/kcmil max

0441504

**USLKG** 5

4017918002190


50 Pcs.

85369010000

4 mm²

4 mm²

12

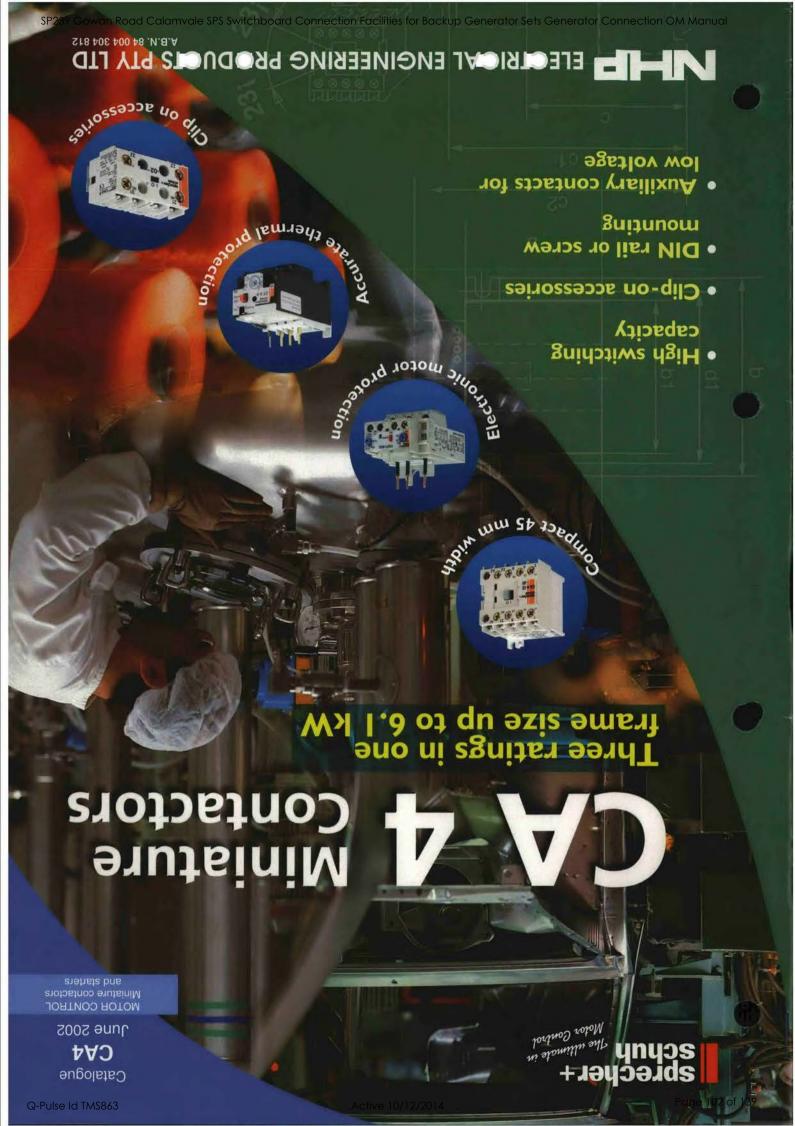

# NHP

NHP was formed in 1968 for the purpose of manufacturing, importing and merchandising a wide range of specialised electrical switchgear, motor control and other technical electrical products for Australian industry; including mining and general industries, electrical contractors and government departments.

NHP is a wholly Australian owned company and exclusively represents a considerable number of overseas companies. These companies manufacture complementary equipment to the NHP programme, which includes products locally manufactured in Melbourne.



NHP Premises, Melbourne

The head office and Melbourne sales organisation is situated at Richmond, with branch offices in Sydney, Brisbane, Adelaide, Perth, Newcastle, Townsville, Rockhampton, Toowoomba, Cairns, Darwin and Hobart. The company also has a number of regional representatives to service country areas. NHP products are stocked and distributed through more than 500 centres, Australia wide.

The company also has an office in Auckland, New Zealand primarily involved in the supply of Terasaki circuit breakers and panelboards. The product range is steadily growing with product brands such as Eldon, Schmersal, Austrol and Elektra already added.

Due to this extensive national sales and service network, the company is able to continue a policy of supplying an extensive range of technical electrical equipment, supported by substantial stocks and competent service on a national basis.



NHP has also built a substantial 5,200 square metre national distribution warehouse, the first stage of a potential three stage development, which ultimately will result in a 15,000 square metre warehouse. The facility is located in the middle of the freight corridor between Melbourne airport and the city's docks area to help ensure effective stock delivery and despatch.

NHP has been consistently committed to providing an outstanding level of customer service and the staff have been trained over many years to provide a customer friendly environment and be seen to be 'easy to deal with'.

It is the continuing policy of the company to improve both the range and quality of products and services available for the Australian market. Experienced engineering and management personnel continually visit world centres to ensure that the organisation keeps pace with technological advances, research and development and modern marketing techniques.



Rockwell Automation

Sprecher + Schuh administrative building at Aarau



Part of the low voltage factory at Aarau

Sprecher + Schuh has been one of the leading manufacturers of high quality electrical equipment in Europe for many years. The company was founded by Carl Sprecher in 1900 in Aarau, Switzerland, but in 1993 the company was acquired by Rockwell International and now operates under the direction of Rockwell Automation.

The Sprecher + Schuh facility in Switzerland will continue to operate and develop products for world markets as a centre of excellence and will continue to produce low voltage control gear products, including the world famous Sprecher + Schuh contactor range.

In 1968 NHP was appointed the exclusive Australian agent for Sprecher + Schuh low voltage motor control gear products which were primarily manufactured at the head office of the company in Aarau, Switzerland.

Since 1966 when Sprecher + Schuh equipment was introduced into the Australian market it has received remarkable acceptance from Australian industry. This has been largely due to the technical superiority of the products produced to traditional Swiss exacting standards of precision engineering. These high standards are the result of strict manufacturing controls and testing, and by the

use of the latest high quality materials available. This high quality has resulted in remarkable reliability ensuring long life and excellent performance.

NHP has welcomed the acquisition of Sprecher + Schuh by Rockwell because international businesses in the electromechanical field requires very substantial volumes to minimise production costs. In manufacture there are ever increasing costs associated with advanced research and development technology, complicated tooling, and sophisticated automated production lines.

Rockwell is committed to providing substantial increases in funds available for R & D and the latest production techniques.

Rockwell/Sprecher + Schuh will be better able to achieve economies of scale and international growth as a result of the union.

The full range of Sprecher + Schuh equipment is freely available throughout Australia from the NHP organisation or NHP representatives and distributors.

The Ultimate in Motor Control

INDEX

# NHP

PRODUCT OVERVIEW		
Mini contactor and relay system		3
AC Contactors CA 4		4
Three ratings in one frame size		5
Undervoltage reliability (AC/DC coils)		6
Advanced motor protection		7
Time under control		8
CS 4 miniature relay system		9
Wide application use		10
World class quality CA 4 miniature contactor		11
PRODUCT SELECTION & TECHNICAL INFORMATI	ON	
Sub index		12
AC and DC contactors		13
CA 4/CS 4 accessories		14
State of the art motor protection		15
Economical thermal overload CT 4		16
Technical information (CS 4)		17
Technical information (CA 4)		18-21
Technical information (CEP 7/CT 4)	3333	22-23
Utilisation category	10 0 D D	24
Electrical life graph (CA 4)	10	25
Dimensions (CA 4/CS 4)	opencher+	26
Dimensions (CT 4)	GA 4-12 -01	27
Dimensions (CEP 7)	17 8 12 13 D 22 D A2	28
Overload graph (CEP 7/CT 4)	2 4	29



## MINI CONTACTOR AND RELAY SYSTEM

# TY V

#### **CA 4 Contactor**

The CA 4 series of miniature contactors provide an extremely compact and reliable method for controlling motors up to 6.1 kW (at 400/415 volts) and is particularly useful in applications where enclosure space is restricted.

CA 4 miniature contactors are available in three (3) power ratings: 2.6 kW, 4.5 kW and 6.1 kW. The physical dimensions are constant throughout the range featuring a width of only 45 mm. In addition, there is also a wide range of clip-on accessories available which do not impact on the contactor width. A four pole version is also available in 4.5 kW.

#### **CT 4 Thermal Overload**

The CT 4 thermal overload relay is a reliable and proven solution for providing economical motor protection. It fits directly to CA 4 contactors and can cater for current ranges from 0.1 to 9 amps.



# **CEP 7 Electronic Overload**

The CEP 7 is a self-powered electronic overload which utilises the supplied voltage, via integrated transformers, to feed the ASIC circuit board electronics for accurate current measurement. The electronics can detect excessive currents or phase loss more rapidly and with greater accuracy than traditional overload relays.

The CEP 7, up to 12 amps, can be directly mounted onto CA 4 contactors and is available with manual or automatic/manual reset. It also provides the choice of two trip classes - class 10 or class 20 version.



## CS 4 Relay

The **CS 4** is a versatile control relay available in several different contact configurations:

4 N/O, 3 N/O 1 N/C, 2 N/O 2 N/C. Clip-on auxiliary contacts allow the CS 4 to have up to eight poles and a complete range of AC and DC coil voltages are offered to meet the relevant control supply requirements.

CS 4 relays are suitable for DIN rail mounting and are the same physical size as the CA 4 contactors. This facilitates a common range of accessories to reduce stockholding.





# AC CONTACTORS CA 4

# NHP

#### **Compact Dimensions**

The examples shown demonstrate the compactness and versatility of the CA 4 contactor.

The CA 4 contactor lends itself perfectly to compact switchboard design. Designs where space saving is a priority without sacrificing performance.

CA 4 is equally effective in simple or complex motor starter applications.



Compact 45 mm wide



CA 4 contactor fitted to a KTA 7 breaker & KA 2 busbar system



CA 4 contactor fitted to CT 4 thermal overload



CA 4 contactor fitted to CEP 7 electronic overload relay





CA 4 contactor fitted with auxiliary contact block



## THREE RATINGS IN ONE FRAME SIZE

#### **Features**

- · Compact dimensions
- Modular design
- Rugged construction
- High switching capacity
- Low power requirements
- · AC or DC coil types
- Four pole 4.5 kW version available

- · High electrical and mechanical life
- · Clip on accessories
- · DIN rail or screw mounting
- Rated at 60 °C
- · Auxiliary contacts for low voltage
- Supplied with open terminals for rapid installation

#### **Three Ratings**

CA 4 contactors consist of three ratings in one frame size the CA 4-5, CA 4-9 and CA 4-12. All three miniature contactors share a common width of only 45 mm, and cover kW ranges of 2.6, 4.5 and 6.1 respectively.

The components of the CA 4 contactor system complement each other to form a flexible and dependable system. It can utilise state of the art motor protection (CEP 7 electronic overload) and the economical CT 4 thermal overload.

It is one system that truly delivers maximum performance in a small, rugged and reliable package.

#### AC Coil

AC 3 kW	AC 2 amps	Aux. C	ontacts max.	Cat. No.
2.6	5.3	1 N/O	5	CA 4-5-10V
2.6	5.3	1 N/C	5	CA 4-5-01V
4.5	9	1 N/O	5	CA 4-9-10V
4.5	9	1 N/C	5	CA 4-9-01V
6.1	12	1 N/O	5	CA 4-12-10V
6.1	12	1 N/C	5	CA 4-12-01V

#### AC Coil 4-pole

AC 3	AC 2		
kW	amps	Contacts	Cat. No.
4.5	9	4 N/O	CA 4-9M-40V

#### DC Coil

AC 3 kW	AC 2 amps	Aux. C	ontacts max.	Cat. No.
2.6	5.3	1 N/O	5	CA 4-5C-10V
2.6	5.3	1 N/C	5	CA 4-5C-01V
4.5	9	1 N/O	5	CA 4-9C-10V
4.5	9	1 N/C	5	CA 4-9C-01V
6.1	12	1 N/O	5	CA 4-12C-10V
6.1	12	1 N/C	5	CA 4-12C-01V


Maximum performance minimum space







# ELECTRICAL LIFE GRAPHS

# CA 4 Contactors

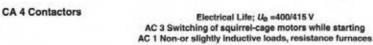

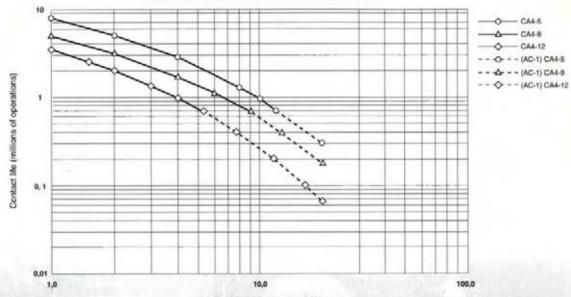

Rated operating current /e [A] (Dashed curves - - - - AC 1 only, open)

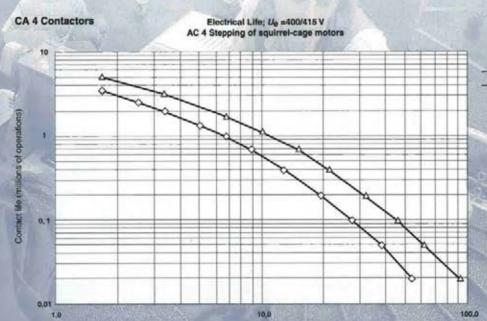

Rated operating current /e [A] (Dashed curves - - - - AC 1 only, open)

CA4-9, CA1-12

#### **UTILISATION CATEGORIES**



Category 1)	Typical applications
AC 1	Non-inductive or slightly inductive loads, resistance furnaces
AC 2	Slip ring motors: Starting, plugging
AC 3	Squirrel cage motors: Starting, switching off motors during run
AC 4	Squirrel cage motors: Starting, plugging *), inching *)
AC 5a	Switching of electric discharge lamp control
AC 5b	Switching of incandescent lamps
AC 6	Switching of power transformers
AC 6b	Switching of 3-phase capacitors, Inductance of leads between capacitors in parallel: min 6uH
AC 7a	Slightly inductive loads in house hold appliances and similar applications
AC 7b	Motor-loads for house hold applications
AC 8a (manual reset) of overload	Switching of Hermetically sealed compressor motors (air tight sealed)
AC 8b (automatic reset) of overload	
AC 12	Control of resistive loads and solid state loads with isolation by optocouplers
AC 13	Control of solid state loads with transformer isolation
AC 14	Control of small electromechanical loads
AC 15	Electromagnets for contactors, valves, solenoid actuators
AC 20	Connecting and disconnecting under no-load condition
AC 21	Switching of resistive loads, including moderate overloads
AC 22	Switching of mixed resistive and inductive loads, including moderate overloads
AC 23	Switching of motor loads or other highly inductive loads
DC 1	Non-inductive or slightly inductive loads, resistance furnaces
DC 3	Shunt motors: Starting , plugging ²), inching ³)
DC 4	Series-motors: Starting, switching off motors during running
DC 5	Series-motors, starting, plugging *), inching *), dynamic breaking of motors
DC 6	Switching of incandescent lamps
DC 12	Control of resistive loads and solid state loads with isolation of optocouplers
DC 13	Control of D.C. electromagnets
DC 14	Control of D.C. electromagnetic loads having economy resistors in circuit
DC 20	Connecting and disconnecting under no-load conditions
DC 21	Switching of resistive loads, including moderate overloads
DC 22	Switching of mixed resistive and inductive loads, including moderate overloads (eg. Shunt motors)
DC 23	Switching of highly inductive loads (eg. series motors)

Notes: ') All category listings according to IEC 947-4 and AS 3497-4

Q-Pulse Id TMS863 Active 10/12/2014 Page 109 of 139<sup>24</sup>

Plugging is understood as stopping or reversing the motor rapidly by reversing the motor primary connections while the motor is running.

Inching is understood as energising a motor once or repeatedly for short periods to obtain small movements of the mechanism.



#### CEP 7/CT 4 Overloads

General data CEP7-A/M-32

Weight [kg] 0.14 CT4-9

X

IEC 947, EN 60 947, DIN VDE 0660 Standards

**Approvals** CE, UL, CSA, PTB

Corrosion resistance 95 % relative humidity without condensation, 30...60 °C

humid/warm, cyclic

humid/warm, constant

-20...+60 °C -25...+50 °C Open -25...+40 °C

-20...+40 °C Enclosed

Temperature compensation Continuous

Shock resistance

Ambient temperature


10 ms sinusidal shock [G] 30

IP2LX Type of protection

In connected state


**Finger protection** safe from touch by fingers and back of hand (VDE 0106, Part 100)


#### **Connection Diagram CEP 7** Single Phase Wiring

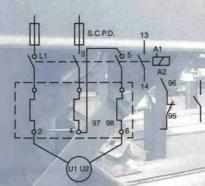


The CEP 7S must be wired as indicated to provide "self-powering" of the overload relay

#### **Connection Diagram CT 4**

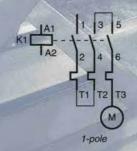

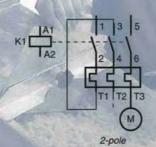

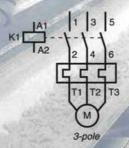

#### NHP

#### CEP 7/CT 4 Overloads

Electrical d		0555 4 445			074.0
A CONTROL OF THE PARTY		CEP7-A/M	1-32		CT4-9
nated insul		ľΛ	600		600
		[V]	690		690
Dated Impu		[V]	6		X
		[kV]			
	CONTRACTOR OF THE CONTRACTOR O	[V]	690		690
			2		₩
ierminai ty	уре				
Torminal co	OVOLUCE.		M4		M4
		[mm2]		4)	
riexible Wi	ui wire ierrule	[mm²]	1 x (1		2 x (14)
Callel and	unton Com	[mare-2]	2 x (1		- Au
	uctor 2 CD	[mm²]	1 x (1.5		X
4.46.50.50.40.40		[mm²]	2 x (1.5	0)	X
	The second secon	[AWG]	148		148
Recommen	ided torque	[Nm]	1.8		1.8
D - 14 1		[lb-in]	16		16
	11 (21/21/17)	[size]	2		2
	N/C 1 TO CO 10 TO CO	[mm]	1 x 6		1 x 6
		[mm]			
212.00			12.22		
		[V]	600		X
		[kV]	6		X
		[V]	600		X
		COST COST	N/O-N/		X
AC-15		[A]	3	2	X
	220240 V	[A]	1.5	1.5	X
	380480 V	[A]	0.75	0.75	X
	500600 V	[A]	0.6	0.6	X
DC-13					
Main Circuits  Rated insulation voltage $U_i$ UL  CSA  Rated Impulse strength $U_{imp}$ Rated operating voltage $U_e$ Terminal Cross-section  Terminal screws  Flexible with wire ferrule  Solid conductor  Stranded  Max.wire size per UL/CSA  Recommended torque  Pozidrive screwdriver  Hexagon socket size  Control circuits  Rated insulation voltage $U_i$ Rated impulse strength $U_{imp}$ Rated operating current $U_e$ AC-15  12120 V  220240 V  380480 V  500600 V		[A]	1.1	1.1	x
		[A]	0.4	0.4	x
	220 V	[A]	0.2	0.2	X
	440 V	[A]	0.08	0.08	X
Convention	nal thermal current	[A]	5		x
Terminal cr	ross section		器		器
Contract to the second of the second	COURSE AND ADDRESS OF THE PARTY		M3.5		M3.5
		[mm <sup>2</sup> ]	2 x (0.7	752.5)	2 x (0.752.5
		[mm <sup>2</sup> ]	2 x (0.7	754)	2 x (0.754)
77 THE R. P. LEWIS CO., LANSING	The state of the s	[AWG]	1812		1814
Recommen	ided torque	[Nm]	1.4		1.2
		[lb-in]	12		11
Pozidrive s	crewdriver	size	2		2
Slotted scr	ewdriver	mm	1 x 6		1 x 6



#### CA 4 Miniature Contactors Auxiliary Contacts

Current Switching			<b>Built-in Auxiliary Contacts</b>	Auxiliary Contact Blocks
AC 1 Ith	at 40 °C	[A]	16	10
	at 60 °C	[A]	12	6
AC 15, switching electro	magnetic loads at:	[V]	230, 240, 400, 415, 500	230, 240, 400, 415, 500
		[A]	6, 5, 2.5, 2, 1.25	2, 2, 1, 1, 0.6
DC 13, switching DC ele	ctromagnets at:	[V]	24, 48, 110, 220, 440	24, 48, 110, 220, 440
		[A]	5, 0.6, 0.45, 0.25, 0.04	2, 0.6, 0.45, 0.1, 0.04
Short-Circuit Protection -	gG Fuse			
Type 2 Coordination		[A]	16	10
Load carrying capacity per	· UL/CSA			
Rated Voltage	AC	[V]	600 max.	600 max.
Continuous Rating	40 °C	[A]	10 general purpose	10 general purpose
Switching Capacity	AC		Heavy pilot duty (A600)	Heavy pilot duty (A600)
Rated Voltage	DC	[V]	600 max.	600 max.
<b>Switching Capacity</b>	AC		Standard pilot duty (Q600)	Standard pilot duty (Q600)
Terminals			92	₩
Terminal Type				
Maximum Wire Size per	IEC 947-1			
Flexible with Wire	1 Conductor	[mm <sup>2</sup> ]	0.752.5	0.752.5
End Ferrule	2 Conductor	[mm <sup>2</sup> ]	0.752.5	0.752.5
Solid/Stranded-	1 Conductor	[mm <sup>2</sup> ]	0.752.5	0.752.5
Conductor	2 Conductor	[mm <sup>2</sup> ]	0.752.5	0.752.5
Recommended Tightening T	The state of the s	[Nm]	11,5	11.5
Max. Wire Size per UL/CSA		[AWG]	1814	1814
Recommended Tightening T	orque	[lb-in]	715	715

#### **CRZE4/CRZY4 Electronic Timers**

200 ms

15 ms

20 ms

Permissible voltage		Repeat accuracy	±5%
CRZE4 (AC or DC) CRZY4 (AC only)	110 V (-23 %) - 250 V (+10 %) 110 V (-23 %) - 120 V (+10 %) 220 V (-20 %) - 250 V (+10 %)	Time interval for start commands CRZE4	1.4 x set time
Voltage drop	5 V max	CRZY4	2 x set time
Load current for reliable operation	10 mA min	Ambient temperature Storage	-40 °C to + 80 °C
Load Current at 220 V		Operation	-20 °C to + 55 °C
20 °C	600 mA	TAX OF LINE AND ADDRESS.	
40 °C	440 mA		
55 °C	320 mA		
Leakage current at 220 V		/ 1 2 3 3 4 4	
CRZE4	5 mA		
CRZY4	"Y" 17 mA, "D" 6 mA		

Reset time

CRZY4

Voltage failure duration having no influence for start commands CRZE4

#### NHP

#### CA 4 Miniature Contactors

#### **Mechanical Data**

Service Life				
Mechanical	AC	[Mil]	10	
	DC	[Mil]	20	
Electrical	AC 3 (4	00 V) [Mil]	0.7	
Shipping Weights	1			
AC-CA 4		[kg]	0.16	
		[Lbs]	0.35	
AC-CAU 4		[kg]	0.35	
		[Lbs]	0.77	
DC-CA 4		[kg]	0.16	
		[Lbs]	0.35	
DC-CAU 4		[kg]	0.35	
		[Lbs]	0.77	

-				
IATI	min	atin	nc.n	ower
1611		alio	IIO-P	CAACI

Terminal Type



5 600		1 Wire	[mm <sup>2</sup> ]	0.752.5	
		2 Wires	[mm <sup>2</sup> ]	0.752.5	
500	5	1 Wire	[mm <sup>2</sup> ]	0.752.5	
	<u></u>	2 Wires	[mm <sup>2</sup> ]	0.752.5	
		1 Wire	[mm <sup>2</sup> ]	1814	
200	<b>E</b>	2 Wires	[mm <sup>2</sup> ]	1814	
Torque R	lequiremen	t	[Nm]	11.5	
			[Lb-in]	715	

#### **Terminations - Control**

Terminal Type



Combina	tion Screw	Head: Cross	, Slotted, Posidrive
Coils	1 or 2	[mm <sup>2</sup> ]	0.752.5
Wires		[AWG	1814
Control Modules	1 or 2	[mm <sup>2</sup> ]	0.752.5
Wires		[AWG]	1814
Torque Requirem	ent	[Nm]	11.5
		[Lb-in]	715

Degree of Protection - contactor IP 2LX per IEC 529 and

DIN 40 050 (with wires installed)

**Protection Against Accidental Contact** 

back-of-hand proof per VDE 0106; Part 100

#### Environmental and General Specifications

Ambient Temperature	
Storage	-55+80 °C (-67176 °F)
Operation	-25+60 °C (-13140 °F)
Conditioned 15 % curre reduction after AC 1 at 7	nt Γ 60 ° -55+70 °C (-13158 °F)
Altitude at installed site	2000 meters above sea level per IEC 947-4
Resistance to corrosion,	/ Damp-alternating climate:
Humidity	cyclic to IEC 68-2, 56 cycles
Dry h	eat: IEC 68-2, +100 °C (212 °F)
	relative humidity < 50 %, 7 days
Damp tro	pical: IEC 68-2, +40 °C (104 °F)
r	elative humidity < 92 %, 56 days
Shock Resistance	IEC 68-2: Half sinusoida
	shock 11 ms, 30 g
	(in all three directions)
Vibration Resistance	IEC 68-2: Static > 2 g, ir
norm	nal position no malfunction < 5 g
Operating Position	Refer to Dimension Pages
Standards	IEC 947-1/4, EN 60947; UL 508;
	CSA 22.2, No. 14, SEV1025
Approvals CE, UL, CSA	, SEV, SUVA, Loyd's Registry of

Shipping, Bureau Veritas, Maritime

Finland

Register of Shipping, Elektrizitats-Inspektorat





#### CA 4 Miniature Contactors

#### **Electrical Data**

Switching power transform Inrush				CA4	
Rated transformer curre	nt =	30	-05	-09	-12
	30 V	[A]	2.9	5.4	5.4
24	10 V	[A]	2.9	5.4	5.4
40	00 V	[A]	2.4	4.1	5.4
4	15 V	[A]	2.4	4.1	5.4
50	00 V	[A]	1.8	3.2	3.2
23	30 V	[kVA]	1.2	2.2	2.2
24	40 V	[kVA]	1.2	2.2	2.2
40	00 V	[kVA]	1.7	2.8	3.7
4	15 V	[kVA]	1.7	2.9	3.9
50	V 00	[kVA]	1.6	2.7	2.7

#### **DC Ratings**

/cw 60 °C

D	C1 Rating at 60 °C			-05	-09	-12
	1 Pole	24 V DC	[A]	9	9	9
		48 V DC	[A]	4	6	6
		110 V DC	[A]	0.6	1	1
		220 V DC	[A]	0.2	0.3	0.3
		440 V DC	[A]	0.08	0.1	0.1
	2 Pole in series	24 V DC	[A]	6	9	9
		48 V DC	[A]	6	8	8
		110 V DC	[A]	4	6	6
		220 V DC	[A]	0.8	1.2	1.2
		440 V DC	[A]	0.2	0.3	0.3
	3 Pole in series	24 V DC	[A]	6	9	9
		48 V DC	[A]	6	9	9
	100	110 V DC	[A]	6	9	9
	A STATE OF	220 V DC	[A]	3	4	4
		440 V DC	[A]	0.4	0.6	0.6
-					_	

Short Time Current Withstand Ratings -05 -09 -12

		SUCCESSION AND	100	. vae
10 8	[A]	60	96	9

Off Time Between Operations	[Min]		3	
Resistance and Watt Loss /e AC 3	-	-05	-09 5.5 1.3	-12
Resistance per power pole	$[m\Omega]$			5.5
Watt Loss - 3 power pole	[W]			2.4
Coil and 3 power poles AC	[W]	1.9	2.7	3.8
DC	[W]	3.0	3.8	4.9

#### Coil Data

Voltage Range			
AC: 50 Hz, 60 Hz, 50/60 Hz	Pickup	$[xU_s]$	0.851.1
	Dropout	$[xU_s]$	0.350.65
DC	Pickup	$[xU_s]$	0.851.1
	Dropout	$[xU_s]$	0.10.25
Coil Consumption			
AC: 50 Hz, 60 Hz, 50/60 Hz	Pickup	[VA/W]	22/20
	Hold-in	VA/W]	4/1.4
DC	Pickup	[W]	2.5
	Hold-in	[W]	2.5
Operating Times			
AC: 50 Hz, 60 Hz, 50/60 Hz	Pickup	[ms]	1540
	Dropout	[ms]	1525
with RC Suppressor	Dropout	[ms]	1525
DC	Pickup	[ms]	1840
	Dropout	[ms]	612
with Integ. Suppression	Dropout	[ms]	812
with Diode Suppression	Dropout	[ms]	3550



CA 4 contactor

#### NHP

#### **CA 4 Miniature Contactors**

Rated Insulation Voltage U <sub>i</sub> to IEC 947-1		[V]		500 V			-		05	CA4	
UL/CSA		[V]		600 V		-	_		-05	-09	-12
Rated Impulse Voltage Uimp		[kV]		8		(Star Delta)	230 V	[A]	11	21	21
and the same of th		[KV]		0	_	50 Hz	240 V	[A]	11	21	21
Rated Voltage U <sub>e</sub>							400 V	[A]	9.2	16	21
-Main Contacts		n.n	000 04	100 4			415 V	[A]	9.2	16	21
AC 50/60 Hz DC		[V]		0, 400, 4			500 V	[A]	6.9	12	12
		[V]	24, 40	110, 220	0, 440		230 V	[kW]	3	5.5	5.5
Operating Frequency for							240 V	[kW]	3	5.5	5.5
AC Loads		[Hz]		50/60 Hz			400 V	[kW]	4	7.5	10
Switching Motor Loads				CA4			415 V	[kW]	4	7.5	11
Standard IEC Ratings			-05	-09	-12	-	500 V	[kW]	4	7.5	7.5
AC 2, AC 3, AC 4	230 V	[A]	6.5	12	12	AC 1 Load,	047	-202		222	20
DOL & Reversing	240 V	[A]	6.5	12	12	3 Ø Switching	/e	[A]	20	20	20
50 Hz/60 °C	400 V	[A]	5.3	9	12	Ambient	230 V	[kW]	8	8	8
	415 V	[A]	5.3	9	12	Temperature 40 °C	240 V	[kW]	8.3	8.3	8.3
	500 V	[A]	4	7	7		400V	[kW]	14	14	14
	230 V	[kW]	1.5	3	3		415 V	[kW]	14	14	14
	240 V	[kW]	1.5	3	3		500 V	[kW]	17	17	17
	400 V	[kW]	2.2	4.5	5.5	Ambient	l <sub>e</sub>	[A]	16	16	16
	415 V	[kW]	2.2	4.5	6.1	Temperature 60 °C	230 V	[kW]	6.4	6.4	6.4
	500 V	[kW]	2.2	4	4		240 V	[kW]	6.7	6.7	6.7
Maximum Operating Rate							400 V	[kW]	11	11	11
At 9 A for AC 3; 20 A for AC 2/4	AC 2	[ops/	hr]	300			415 V	[kW]	12	12	12
Starting time t A= 0.25 s	AC 3	[ops/	hr]	600			500 V	[kW]	14	14	14
AC 4 (200,000 Op. Cycles)	AC 4	[ops/	hr]	300		Lighting Loads					
50 Hz	230 V	[A]		3.9		Elec. Dischrg.	Open	[A]	18	18	18
	240 V	[A]		3.9		Lamps-AC 5a,	Enclosed	[A]	14.5	14.5	14.
	400 V	[A]		3.3		Single compensated	10 kA	[µF]		750	
	415 V	[A]		3.3		Max. capacitance at	20 kA	[µF]		400	
	230 V	[kW]		0.92		prospective short circuit	0.000	16. 3			
	240 V	[kW]		0.96		current available at the				-	
	400 V	[kW]		1.5		contactor					
	415 V	[kW]		1.6		Incandescent					
Max. Operating Rate	1000	[ops/	hr]	250		Lamps-AC 5b, Electrical endurance -100,000 operations		[A]	9.3	9.3	9.3

Q-Pulse Id TMS863 Active 10/12/2014 Page 115 of 139 18



#### CS 4 Control Relay

		CS.	4 Relays				CS	4 Relays
Electrical	200			Mechanical		1905	2000	
Contact Ratings - IEC 94	47			Mechanical Life		(1)	/lil]	10
AC 15 (solenoids, contact at rated voltage IEC 947, EN 60947	tors) 240 V 400 V 500 V	[A] [A]	6 2.5 1.25	Electrical Life AC 15 (240 V, 3 A) AC AC 1 (230 V, 6 A)	Operations	700	Ail]	0.7
AC 1 (Non-inductive, or	40 °C 230500 V	[A]	16	Weight		[9	g]	153
slightly inductive loads, resistance furnace IEC 947, EN 60947	60 °C 230500 V	[A]	12	Terminal Cross-Section Terminal Type	1 Conductor		m²]	0.752.5
AC 2, AC 3, AC 4 (switching 3 Ø motors)	230 V 400 V	[A] [A]	5 3.7		2 Conductor 1 Conductor 2 Conductor	[m	m²] m²] m²]	0.752.5 0.752.5 0.752.5
17 25 70	500 V	[A]	2.8	Max. Wire Size		[AV	NG]	1814
Short Circuit Protection Coordination Type 2	afforded by contac Fuse gG	tor [A]	16	Tightening Torque			im] -in]	11.5 715
acc. IEC 947-4-1	Fuse aM		16	Control Circuit				7
Min. switching capacity DIN 19240 for H-contacts contacts and auxiliary cor		[mA]	5	Operating Voltage AC 50/60 Hz	Pickup Dropout Pickup	[x U <sub>s</sub> ] [x U <sub>s</sub> ] [x U <sub>s</sub> ]		0.851.1 0.350.68 0.81.1
Switching DC	Part I				Dropout	[x U <sub>s</sub> ]		0.10.25
Non-inductive or slightly i				with protection circuit  Coil Consumption	Dropout [U <sub>m</sub>	ax U <sub>min</sub> ]		11.2
1 pole	2448 V 110 V 220 V	[A] [A] [A]	6 / 4 0.6 0.2	AC 50/60 Hz	Inrush Seal Inrush/Seal	[VA/W] [VA/W] [W]		22/20 4/14 2.5
2 poles in series	440 V 2448 V 110 V 220 V 440 V	[A] [A] [A] [A]	0.08 6 4 0.08 0.2	Operating Times AC 50/60 Hz	Pickup Time Dropout Time Pickup Time Dropout Time	[ms] e [ms]		1540 1525 1840 612
3 poles in series	2448 V 110 V 220 V 440 V	[A] [A] [A] [A]	6 6 3 0.4	with protection circuit  General  Rated Voltage Withst IEC  High voltage - 1 minut		500 3) 2500		812
	100		102	Rated Impulse Streng	gth Uimo	8 k	٧	

Q-Pulse Id TMS863

230, 240, 400, 415, 500 V

24, 48, 110, 220, 440 V

50/60 Hz, DC

-55...+80 °C (-67...176 °F)

-55...+60 °C (-58...140 °F)

15 % current reduction against 60 ° value

humid-alternating climate, cyclic, per IEC 68-2-30 and DIN 50 016, 56 cycles

2000 m M.S.L., per IEC 947-4

IP 20

safe from touch by fingers and back of hand per vde 0106, part 100

Rated Voltage U.

**Rated Frequency** 

**Ambient Temperature** 

Corrosion Resistance

Type of Protection

**Finger Protection** 

Operation at normal current

AC

DC

Storage

At > 70 °C

Altitude

#### ECONOMICAL THERMAL OVERLOAD CT 4

- · Consistent and reliable protection
- · Superior class 10 characteristics
- Protection from single phase conditions
- Ambient temperature compensation
- Maximum 660 V
- · Snap-on signal contacts
- Manual reset
- Trip indicator complies with AS 1023



#### CT 4 Thermal Overload Relays for Mounting on CA 4 Contactors

Adjustment range in amps (DOL)	Type T HRC fuse	Approx. kW @ 400/415 V	Cat. No.
0.10-0.15	0.63 A	0.06	CT 4-9-0.15
0.15-0.23	1	0.09	CT 4-9-0.23
0.23-0.35	2	0.12	CT 4-9-0.35
0.35-0.55	2	0.18	CT 4-9-0.55
0.55-0.80	2	0.25	CT 4-9-0.8
0.80-1.20	4	0.5	CT 4-9-1.2
1.20-1.80	4	0.55	CT 4-9-1.8
1.80-2.70	6	0.75	CT 4-9-2.7
2.70-4.00	10	1.5	CT 4-9-4
4.00-6.00	16	2.2	CT 4-9-6
6.00-7.70	20	3	CT 4-9-7.7
7.50-9.00	20	4	CT 4-9-9
Auxiliary signal con - clip on to thermal		)	CT 3K-P-10

Electrical connection for direct attachment to CA 4 -Built in wire connection to coil: can be removed if required Flag indicator (tripped indicator) Red O/L button : an integral off button for test tripping and resetting - Auxiliary scale current setting for star-delta setting Direct start current setting scale with Provision for mounting setting knob trip signal contacts

D D D



#### STATE OF THE ART MOTOR PROTECTION

- · Superior phase failure protection
- · Choice of tripping classes
- · Choice of reset options
- Self powered design means convenience
- Increased accuracy and motor protection
- Wide current adjustment range

Self **Powered** Design

Test button

#### Manual reset

Standard	Approx. kW	Current	
Motor kW	range @ 400/415 V	range (A)	Cat. No.
-	77	0.10.32	CEP7-M32-0.32-10
-		0.321.00	CEP7-M32-1-10
1.1	0.31.25	1.002.9	CEP7-M32-2.9-10
1.5/2.2	0.62.2	1.65	CEP7-M32-5-10
2.2/4/5.5	1.66	3.712	CEP7-M32-12-10

#### Automatic and manual reset

Standard Motor kW	Approx.kW range @ 400/415 V	Current range (A)	Cat. No.
	-	0.10.32	CEP7-A32-0.32-10
20	100	0.321.00	CEP7-A32-1-10
1.1	0.31.25	1.002.9	CEP7-A32-2.9-10
1.5/2.2	0.62.2	1.65	CEP7-A32-5-10
2.2/4/5.5	1.66	3.712	CEP7-A32-12-10

Remote reset magnet	Cat. No.
To suit CEP7-M32 and CEP7-A32	CMR7V 1)

#### Accessories Cat. No. Cover for preventing overload adjustment CMS7-BC4 Cover for preventing current adjustment only CMS7-BC5 Separate mounting bracket **CEP7-37-PA**

Standard AC voltages 24, 110 and 240 V AC 50 Hz.
Standard DC voltage 24 V DC. Others available on request.

Class 20 tripping available on request

Auto/manual and trip selector Motor current adjustment N/O contacts N/C contacts

Q-Pulse Id TMS863

Active 10/12/2014

Page 118 of 139

Auxiliary contact block

#### **Auxiliary Contact Blocks CA 4-P**

Contact arrangement	Cat. No.
21 31 	CA 4-P-02
21 33 - 1 - 3 22 34	CA 4-P-11
43 53 21 31 - \$ - \$ - \$ - \$ 44 54 22 32	CA 4-P-22

Accessories

arrangement	Cat. No.
53 63 54 64	CS 4-P-20
53 61 - \$-\$ 54 62	CS 4-P-11
53 63 73 83 54 64 74 84	CS 4-P-40



### RC link



Mechanical Interlock

Description		Cat. No.
Mechanical interlock	(requires no additional space)	CM 4 2)
Steel DIN rail 35 mm	(2 metre lengths) - price per metre	SDR
Star-delta timing relay s	colid state (110 or 240 V AC)	CRZY 4
On time-delay, solid stat	te	
0.1-3 sec	(CA 4 connection)	CRZE 4-3S
1-30 secs	(CA 4 connection)	<b>CRZE 4-30S</b>
Protective cover for CA	CA 4-PC	
Adaptor for mounting tim	CR 4-P	

HC link for coll suppression	coll suppression 24-48 V or 110-240 V 50 Hz	
Diode link for coil suppression	I suppression 12-110 V DC	
Connection bridges (parallel con	ntacts)	
2 pole max. 34 amps		CB 4-2
3 pole max. 50 amps		CB 4-3
4 pole max. 64 amps		CB 4-4
Connecting modules for comple	ete starters 523 Amp	



KCD 4

#### Connection links

For use with KT 7-25S & CA 4

Connection	links for	DOL	starters	KTA 3	+	CA	4/CA	3	@	60	°C

For CA 4 to KTA 3	max. 9 amps	KCD 4
Connection links for revers	ing and star delta starters	@ 60 °C
Reversing link set for CA 4-5	/9 max. 9 amps	KCR 4
Star delta link set for CA 4	max. 9 amps	KCSD 4



CR4-P DIN rail adaptor

#### Adaptor CR 4-P

For mounting timing element CRZ...4 on EN 50 022-35 (DIN) mounting rails and G rails.

#### Timing elements CRZE 4 and CRZY 4

For time delay circuits. Snap-fits onto an auxiliary contact location, on the right hand side of a contactor, or with the aid of the adaptor on DIN mounting rails.

#### RC link CRC 4

04 40 V or 110 040 V EO Ha CDC 4

For damping circuits of coils and contacts. For fitting on all labelling spaces or arbitrarily in cable channels.

KT 7-25S-PEM12

#### Auxiliary contact blocks CA 4-P

Terminal markings in compliance with EN 50 012.

Can be snap fitted onto the CA 4 in a 2 or 4 pole form.

#### Mechanical interlock CM 4

Requires no additional space. Fitting from rear and recessed in DIN rails (not suitable for DC magnet system).



CRZE 4 Timer

- Notes: 1) The contact selection is to comply with contact numbering sequence. The auxiliary contacts from page 3-6 can also be used if terminal numbering is not a pre-requisite.
  - 2) Not available for use with DC contactors and relays.



#### AC AND DC CONTACTORS

#### **CA 4 Contactor**

#### AC coil 1)

AC 3	AC 2/3	3 Aux. Contacts		
kW	amps	std.	max.	Cat. No. 2)
2.6	5.3	1 N/O	5	CA 4-5-10V
2.6	5.3	1 N/C	5	CA 4-5-01V
4.5	9	1 N/O	5	CA 4-9-10V
4.5	9	1 N/C	5	CA 4-9-01V
6.1	12	1 N/O	5	CA 4-12-10V
6.1	12	1 N/C	5	CA 4-12-01V

#### AC Coil 4-pole

AC 3	AC 2/3	No. of	
kW	amps	Contacts	Cat. No.
4.5	9	4 N/O	CA 4-9M-40V

#### DC coil 1)

	AC 3 kW	AC 2 amps	Aux. Co	ontacts max.	Cat. No. 2)
	2.6	5.3	1 N/O	5	CA 4-5C-10V
	2.6	5.3	1 N/C	5	CA 4-5C-01V
	4.5	9	1 N/O	5	CA 4-9C-10V
ı	4.5	9	1 N/C	5	CA 4-9C-01V
ľ	6.1	12	1 N/O	5	CA 4-12C-10V
Ì	6.1	12	1 N/C	5	CA 4-12C-01V



CA 4 contactor



CS 4 relay

#### Basic relay CS 4 4-pole 1)

Contacts		AC	
N/O	N/C	or DC	Cat. No. 2)
4	_	AC	CS 4-40EVAC
		DC	CS 4C-40EVDC
3	1	AC	CS 4-31ZVAC
		DC	CS 4C-31ZVDC
2	2	AC	CS 4-22ZVAC
		DC	CS 4C-22ZVDC

Contact diagram



Notes: 1) CA 4/CS 4 not available without coil. Coils and contacts not replaceable.

Add coil voltage AC 24, 32, 110, 240, 415 V 50 Hz when ordering. Add coil voltage DC 12, 24, 48, 110, 125, 220 V when ordering.

240/415 V rated coils are suitable for use on 230/400 V in accordance with AS 60038:2000

SUB INDEX	N
AC and DC contactors	13
CA 4 / CS 4 accessories	14
State of the art motor protection	15
Economical thermal overload CT 4	16
Technical information (CS 4)	17
Technical information (CA 4)	18-21
Technical information (CEP 7/CT 4)	22-23
Utilisation category	24
Electrical life graph (CA 4)	25
Dimensions (CA 4/CS 4)	26
Dimensions (CT 4)	27 21 Al
Dimensions (CEP 7)	1 3 5 NG 28
Overload graph (CEP 7/CT 4)	10 29
	sprecher+ schuh CA 4-12
	T1 8 T2 8 T3 D 22 D A2



#### WORLD CLASS QUALITY CA 4 MINIATURE CONTACTORS

Sprecher + Schuh has been developing and manufacturing electrical equipment for protection and control purposes for many years. NHP is proud to be associated in bringing a world quality product to the building and electrical industry.

The CA 4 compact contactor system fully complies with the IEC recommendations as well as equivalent national standards and regulations.

The system also complies with the stringent CSA and UL specifications. The requirements of countries having compulsory termination marking codes are also complied with.

CA 4, a world class series of miniature contactors which are recognised world wide.

NHP is a company delivering quality electrical switchgear to the building and automation industry.









Backed by decades of experience

NHP is proud to supply quality products such as Sprecher + Schuh to the Australian industry.

sprecher+

CA 4

NHP

#### WIDE APPLICATION USE

#### NHP

#### CA 4 Mounted on an ACS Busbar System



#### **CA 4 Miniature Starter System**



- Star-delta
- Reversing starters
- DOL applications
- Lighting
- Building industry



CA 4 contactors can also be used in the following applications: swimming pools, sauna control systems, electric heating systems, refrigerators, house hold appliances and contact breakers.

#### Miniature Contactor System





Withstand capability of extreme industrial conditions make the CA 4 an ideal and smart choice for miniature contactor systems.



- CA 4 contactors are ideal in the office place, controlling lighting, heating, air-conditioning
- Hospitality industry where industrial dishwashing machines are used
- Large buildings where elevators and escalators are being used
- Recycling industry with large compactor crushing machines and the postal service where sorting of mail is used in a fast paced environment



#### CS 4 MINIATURE RELAY SYSTEM

#### **CS 4 Miniature Relay**

Despite increasing complexity, control systems and installations must become increasingly compact. The CS 4 miniature relay system contains a variety of control possibilities.

Just like the CA 4 contactor, the CS 4 relay shares the same dimension width of 45 mm. This also makes the CS 4 miniature relay an attractive selection for the

most discerning user. It will satisfy many industrial applications, from the most complex electronics to the basic lighting circuit.



The body of the device is sturdy as well. The front housing, containing the phase partitions and screwdriver guides, is manufactured in one piece. Front and rear housings are then joint fitted together.

## Coil assembly (DC) Positive Guidance Design Requirements >=0.3 mm Contact welded N/O N/C N/O N/C

CS 4 control relays are perfect for fail-safe control circuits. An interlock contact design, which maintains minimum 0.3 mm clearance, prevents the N/C contacts from reclosing if the N/O contact is welded when in operation. (This feature includes the base contact poles only and does not extend to the front mounted auxiliary contacts).

#### **Auxiliary Components**

CS 4 auxiliary components allow you to convert the basic four pole relay into a:

- 6 or 8 pole relay
- 4, 6 or 8 pole relay with electronic time delay
- Multiple 4, 6 or 8 pole relays with mechanical interlock



#### **CRC 4 Suppressor Module**

CRC 4 is a suppression device for limiting voltage spikes especially in electronics circuits.



#### No Additional Space Required

The entire CS 4 system is logically engineered. Auxiliary contact blocks and timing elements are modular and snap-on without increasing the CS 4's original width of 45 mm. Also due to its sideways switching movement, the basic relay has the same low profile whether an AC or DC operating magnet is used. This permits the use of enclosures with

shallow mounting depths. Once the CS 4 is installed, the auxiliary contact blocks can be snapped-on or removed without changing any existing wiring.



#### TIME UNDER CONTROL

#### NHP

#### **CRZE 4 Timing Element**

The CRZE 4 is an innovative timing element for accurate on-delay timing functions adjustable up to 30 seconds. The timer is connected in series with the contactor coil resulting in contactor energisation after the set time on the timer has elapsed.

CRZE 4 offers excellent repeatability and can be fitted to the front or right-hand side of the contactor or can be separately mounted on DIN rail via the CR 4-P adapter.

Two time ranges are available and supports voltages from 110...250 V 50/60 Hz:

0.1...3 seconds



#### **CRZY 4 Timing Element**

The CRZY 4 is a timing element for stardelta starting. It disconnects the star contactor after the specified time of the timer has expired and then energises the delta contactor after an in-built transition time of about 100

milliseconds. This time delay is essential for stardelta starters.

The CRZY 4 can be mounted to the front of the CA 4 contactor, or can be fitted to the right-hand side or, can be DIN rail mounted separately via a CR 4-P adapter.






#### Dependable Interlocking

Two CA 4 contactors can be mechanically interlocked with a CM 4 interlocking mechanism. This is used in applications where only one of two contactors is required to operate at a time such as in the case with reversing starters.

The mechanical interlock can only be used with CA 4 contactors having AC coils. CM 4 is mounted to the back of the contactors so as not to interfere with the fitting of auxiliary contacts on the front like other miniature contactors.



Two CA 4's interlocked (2.6 kW)

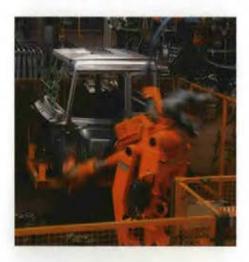



CA 4 with a CRZY 4 timer fitted



#### ADVANCED MOTOR PROTECTION

#### **CEP 7 Electronic Overload**

CA 4 contactors are suitable for use with CEP 7 electronic overload relays. The CEP 7 attaches directly to the load side of the contactor to allow the CA 4 to be used in applications requiring improved motor protection.

The CEP 7 electronic overload offers two models to cater for manual and automatic/manual trip reset modes. Each is also available with class 10 or class 20 tripping characteristics.

The combination of miniature contactor and electronic overload relay provides a unique solution for superior motor protection whilst supporting most control philosophies.



#### **Features**

- Self powered
- Low power consumption (150 mW)
- Phase failure
- Separate N/O and N/C trip contacts
- · Visible trip indicator
- Wide adjustment range
- Thermal memory

#### **CT 4 Thermal Overload**

CT 4 thermal overloads can be directly fitted to CA 4 contactors to form an economical arrangement for motor thermal protection and control.



The CT 4 is fitted with a built-in wire connection to provide a series connection between its trip contact and the 'A2' coil termination of a contactor. This connection can be removed if not required.

Trip flag indicator and test/reset button is also offered as standard on the CT 4 as well as a dual scale for current setting to allow for the straightforward commissioning of direct-on-line (DOL) or star-delta starters.

#### **Features**

- High tripping accuracy
- Manual reset
- Trip indicator
- Maximum volts 660 V
- Temperature compensation from -25 °C to 75 °C
- Snap on signal contact available



CA 4 with CEP 7



CA 4 with CT 4

#### UNDER VOLTAGE RELIABILITY (AC/DC COIL)

#### CA 4 AC & DC coils

CA 4 coils are designed for total undervoltage reliability. Under voltages that do not cause the contactor to close can be withstood indefinitely without damage.

Even though their contacts and coils are not replaceable, Sprecher + Schuh has subjected this series of contactors to monitored endurance tests that highlight their ruggedness.

At full load, under three phase conditions, the contacts in the CA 4 have an electrical life of 700,000 operations. The AC magnet system has a mechanical life of 10,000,000 operations, and DC at 20,000,000 operation.





Low Heat Losses

The low power consumption required for control purposes also contributes to efficiency:

AC pick-up

=24 VA

AC hold

=4 VA

DC pick-up and hold = 2.5 W

The result is significantly reduced heat losses which in turn permits even more compact installations and a noticeable reduction in power consumption.



#### **Efficiency with Wiring**

The CA 4 miniature contactor system has been systematically designed for speedy wiring. All components have:

- · Easily accessible connections
- Open terminals
- Universal slot screws
- Same size screw guides as on larger units. Both manual as well as power screwdrivers can be used; no tool bit changing is necessary.

No special tools are required to fasten the terminals.



#### Contact Configuration

The CA 4 contactor system can also handle low voltages. Excellent encapsulation and special contact design are major factors for the high degree of contact reliability:

- · On the basic unit: Contacts with indentation
- · On the auxiliary contact block: H-contact bridges with non-wear, selfaligning wiping contacts having a 4-way current path feature.

#### Main Contacts of CA 4 Contactor

The built-in auxiliary contact (bottom far left) is cross-stamped to provide a four-way current path. (The CS 4 relay has all four contacts of the base unit cross-stamped).

The image below shows the auxiliary contact block H-contacts


Clever contact design provides improved electrical connection and reliability.




#### **DIMENSIONS**

#### NHP

#### CA 4 Contactor CS 4 Control Relay

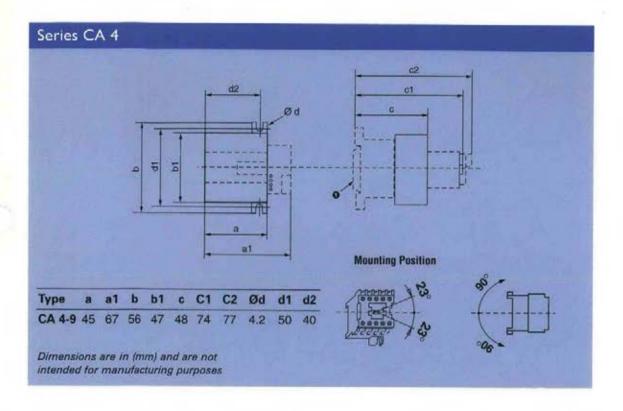

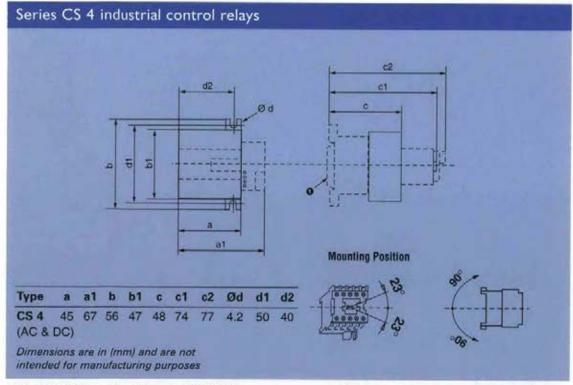


Note: DIN Rail mounting 35 mm to EN 50 022.



#### **DIMENSIONS**

#### CT 4 Thermal Overload Relay


# Notes: 1) With aux contact block CA4-P With timing elements CRZE4, CRZY4 With aux contact CT3-P-10 on overload Overload reset: 0.09 (2.3 mm) minimum travel Dimensions are in (mm) and are not intended for manufacturing purposes

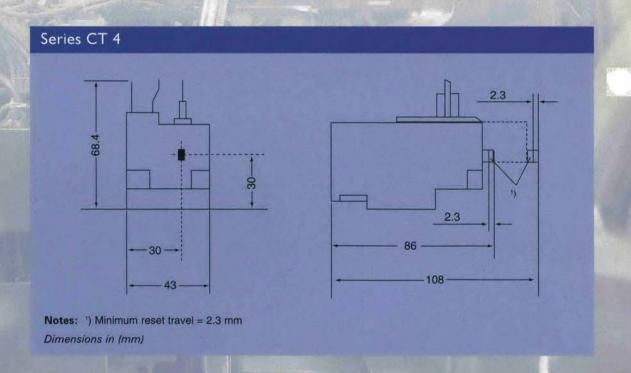


#### **DIMENSIONS**

#### NHF

#### CEP 7 Electronic Overload Relay

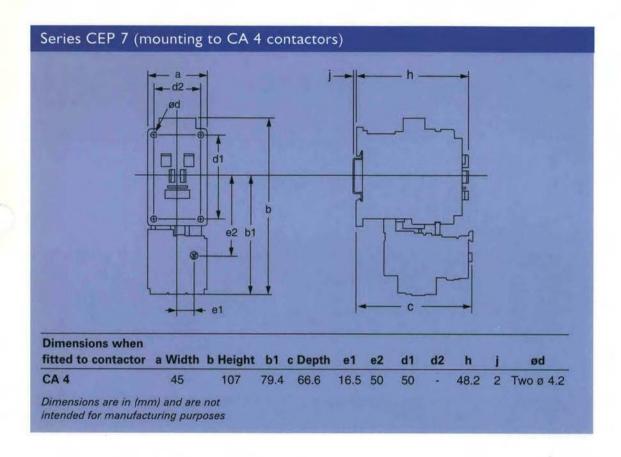

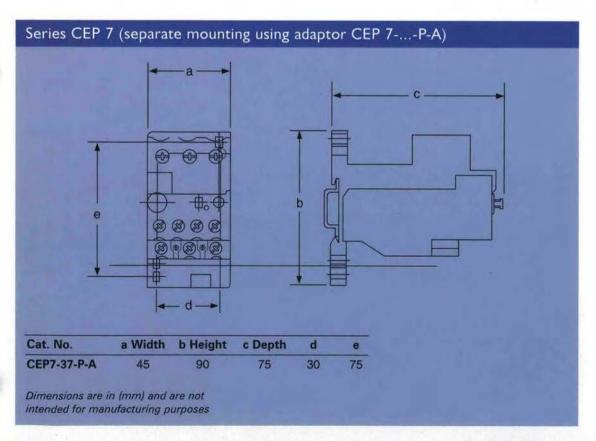


Page 130 of 13928



#### CEP 7/CT 4 OVERLOAD GRAPH

## サク

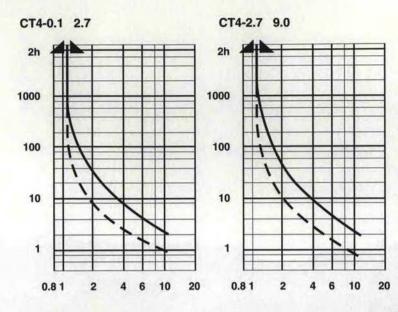

#### CT 4 Thermal Overload Relay

(thermally delayed over-current relay).

Mean value of tolerance bands, heated in three phases.

Curves: \_\_\_\_\_ from cold state

Curves: — — in operationally warm state (loaded with the set current).


Tolerance: trip time  $\pm 20 \%$  ( $\pm 10$  for current).


Function Limits and Temperature Compensation: from -25 °C...+70 °C.

Tripping Limits: specified in IEC 292-1 for -5 °C...+60 °C.

Two Phase Loading (phase failure): Trip limits 1.05..1.25 of set current  $I_{\rm eF}$  in accordance with IEC 292-1. For motors up to 10 kW, the two-phase trip at max. 1.25  $I_{\rm eF}$  guarantees heat build-up limitation to the value which occurs on three phase trip at 1.2  $I_{\rm eF}$ 

#### Trip Curves for 3Ø Applications (CEP 7-A/M...)

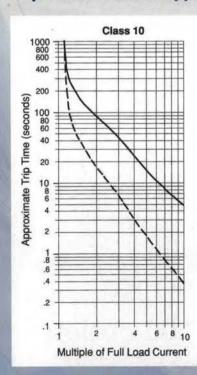

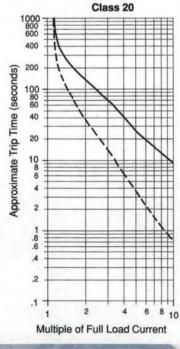

Approximate trip time for 3-phase balanced condition from cold start.


Approximate trip time for 3-phase balanced condition from hot start.

The CEP 7-A/M trip time under single-phase conditions (loss of 1-phase on a 3-phase system) varies according to the percentage of motor load. Estimate 2-3 seconds if phase loss occurs during running condition. If single phase condition is present when the motor is started, estimate 3-8 seconds for motor loads 80 % Trip times may be extended for motor loads 65-80 % due to cold start CT saturation. Single-phase protection will not function for motor loads < 65 %.

The reset time of a CEP 7 set in the automatic mode is approximately 180 seconds.



## A wholly Australian owned company Proudly serving Australian industry

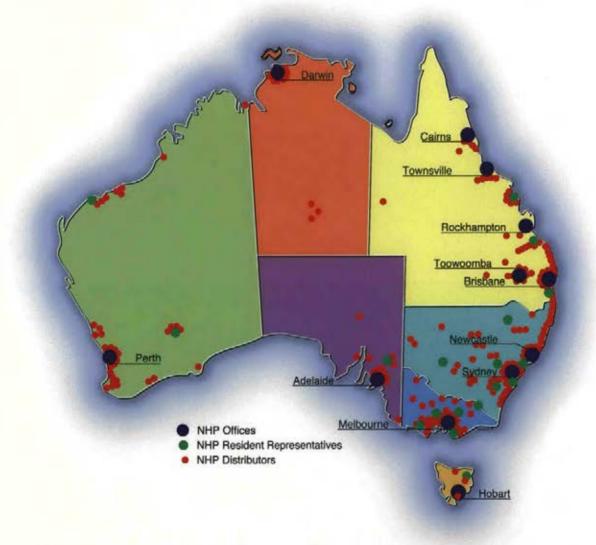

All your switchgear requirements available from over 500 outlets throughout Australia

#### CA4 6/02 14M

#### ELECTRICAL ENGINEERING PRODUCTS PTY LTD

industrial switchgear and automation solution specialists

Fax +61 8 8371 0962 Telephone +61 8 8297 9055 Keswick South Australia 5035 36-38 Croydon Road ADELAIDE

Email adl-branch@nhp.com.au

**WESTERN AUSTRALIA** 

ALIARTZUA HTUOS

Mayfield West New South Wales 2304 575 Mailland Road NEWCASTLE Email syd-branch@nhp.com.au Fax +61 2 9648 4353 Telephone +61 2 9748 3444 Silverwater New South Wales 2128 30-34 Day Street North SYDNEY **NEW SOUTH WALES** Email mel-sales@nhp.com.au Fax +61 3 9429 1075 Telephone +61 3 9429 2999

Fax +61 2 4960 2203 Telephone +61 2 4960 2220

Email not branch@nhp.com.au

Richmond Victoria 3121

43-67 River Street

**WELBOURNE** 

VICTORIA AIJARTSUA

**ONEENSLAND** 

Se Turbo Drive BHISBANE

Telephone +61 7 3891 6008 Coorparoo Queensland 4151

Email bris-branch@nhp.com.au 6819 1688 Z 19+ XB3

19t1 S12t 1 19+ XB3 0070 9774 7 13+ enorigalsT Garbutt Queensland 4814 62 Leyland Street **LOWNSVILLE** 

ROCKHAMPTON Email tsv-branch@nhp.com.au

Lax +61 7 4922 2947 Telephone +61 7 4927 2277 Rockhampton Queensland 4701 14 Robison Street

**A8MOOWOOT** Email rkh-branch@nhp.com.au

Toowoomba Queensland 4350

Telephone +61 7 4634 4799 Cnr Carroll St & Struan Crt

Email too-branch@nhp.com.au Fax +61 7 4633 1796

CAIRNS

Email cns-branch@nhp.com.au 6669 SEOF Z 19+ XE-1 Telephone +61 7 4035 6888 0784 bnslaneeuQ wolsgnud 14/128 Lyons Street



www.nhp.com.au

Email tas sales@nhp.com.au

Fax +61 3 6228 9757 Telephone +61 3 6228 9575

Moonah Tasmania 7009

Email dar-branch@nhp.com.au

Jelephone +61 8 8947 2666

**ҮЯОТІЯЯЭТ ИЯЭНТЯОИ** 

Email per-branch@rhp.com.au

TTT1 TTS 8 13+ enodqeleT

Rivervale Western Australia 6103

Fax +61 8 9277 1700

avA Inomled 85

HTR39

Winnellie Northern Territory 0820

E9X +91 8 8947 2049


2/65 Albert Road

THABOH

AINAMEAT

3 Steele Street

NIWHAD

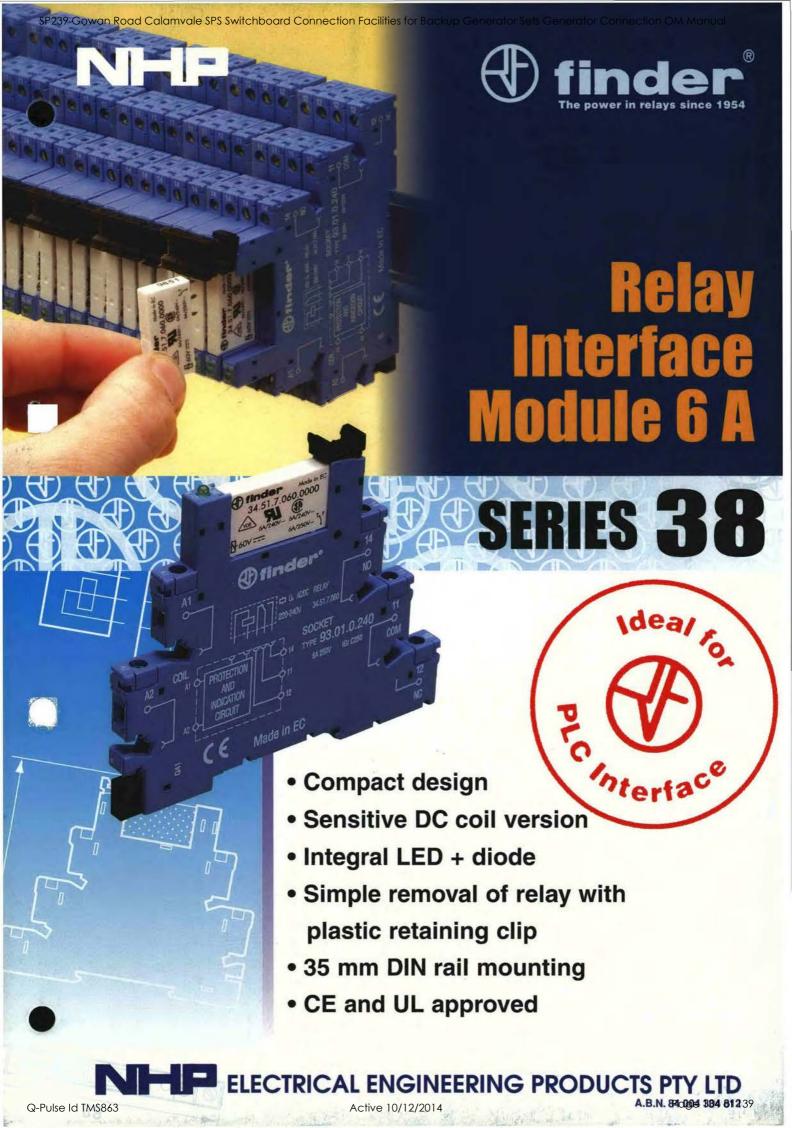

### SERIES ?

#### **Relay Interface Module 6 A**



Suitable for: **Automatic gates Elevators Alarm systems Industrial automation Furnace systems Electronic controls Industrial** controls Air conditioning **Medical equipment** 

#### **ORDERING DETAILS**

Cat. No. 38.51 ... 1 x 6 A C/O contact

#### **COIL DATA**

Voltages available (AC/DC)	24, 240
Voltages available (Sensitive DC)	12, 24
Rated Power	0.3 W
Operating Range	0.7 to 2.2 U <sub>N</sub>
Holding Voltage	0.4 U <sub>N</sub>
Drop Out Voltage	0.1 U <sub>N</sub>
Wire thermal insulation Class	F(+155 °C)


#### TECHNICAL DATA


٤,		
	Dielectric Strength-coil to contacts	4 kV
	Ambient Temperature	-40 °C to 70 °C
	Mechanical Life	10.106 cycles
	Electrical life at rated load (AC 1)	60.103 cycles
	Maximum switching frequency:	
	- without load	36,000 cycles/h
	- at rated load	1,800 cycles/h
	Operated time:	***************************************
	- pick up time	≤7 ms
	- drop out time	≤11 ms
	Type of duty	Continuous

#### CONTACT DATA

Rated current	6 A (AC 1)
Maximum peak current	30 A (0.5 s)
Rated voltage	250 V AC
Maximum switching voltage	400 V AC
Nominal rate in AC 1	1,500 VA
Nominal rate in AC 15 (230 V)	300 VA
Minimum switching load 500 mW	(12 V / 10 mA)
Contact resistanceinitial	≤50 mΩ
Contact material	AgSnO <sub>2</sub>

#### DIMENSIONS (mm)

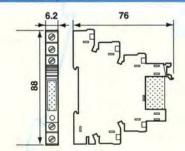

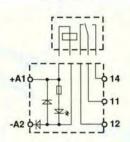



#### ECTRICAL ENGINEERING PRODUCTS PT

Sydney

Newcastle

Brisbane

Townsville

Rockhampton Toowoomba

Darwin Hobart PH: +61 3 9429 2999 +61 2 9748 3444 +61 2 4960 2220 +61 7 3891 6008 +61 7 4779 0700 +61 7 4927 2277 +61 7 4634 4799 +61 7 4035 6888 +61 8 8297 9055 +61 8 9277 1777 +61 8 8947 2666 +61 3 6228 9575 FAX: +61 3 9429 1075 +61 2 9648 4353 +61 2 4960 2203 +61 7 3891 6139 +61 7 4775 1457 +61 7 4922 2947 +61 7 4633 1796 +61 7 4035 6999 +61 8 8371 0962 +61 8 9277 1700 +61 8 8947 2049 +61 3 6228 9757

#### **CARLO GAVAZZI**

#### "A lifetime commitment to Control & Automation"



**Functions** 

Areas

**Applications** 

**Monitoring Solutions** 

Phase sequence Phase loss A total phase loss of one of the 3 phases is an extreme case of phase unbalance. Incorrect phase sequence may lead to serious equipment damage.



DPB01 and PPB01 detect incorrect phase sequence and total phase loss.

Phase asymmetry


Several 1-phase loads added to only one or two of the phases may generate unbalance. This makes motors run at a temperature nigher than their nominal ratings, causing insulation breakdown and shortening



DPB02 and PPB02 offer knob adjustable asymmetry and time delay set points. Longer motor life means less maintenance and down time. saving you money and time.

Mains Over-/Undervoltage monitoring

High quality mains monitoring in a plant prevent problems including overheating, malfunction of sensitive devices and phase

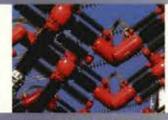

DPB01 and PPB01 can monitor all the phases in one unit. For more selective monitoring 3 units of DUB01 and PUB01 (or DUB02 and PUB02) can be linked to each single phase

Undercurrent

When running unloaded a pump can be damaged. If this is the case, the current is low and can easily be detected.



The easy to program functions of DIB01 and PIB01 can help to solve problems such as transient currents, safe relay connection, and machine stop in case of danger.

Regenerated voltage by 3-phase motors

In case of cut wire or blown fuse the motor generates itself the missing phase. There are few phase sequence relays that will detect this situation.



DPA01 and PPA01 detect a regenerated voltage up to 70% of the nominal star voltage (~85 % of the delta voltage) preventing motor damage and expensive replacement costs.

Phase reversal

Incorrect phase sequence may cause a reverse in the directional current that can be extremely dangerous. In the case of mobile applications the phase sequence has to be constantly monitored.



Installing DPB02 or DPP02 on the mobile apparatus ensures damage due to wrong connection is prevented

C-Tick Compliance



NHP

#### **ELECTRICAL ENGINEERING PRODUCTS PTY LTD**

SYDNEY: BRISBANE: CAIRNS: ADELAIDE: PERTH:

MELBOURNE: NEWCASTLE: TOWNSVILLE: ROCKHAMPTON: TOOWOOMBA: 3 Steele Street Winnellie N.T. 0820 HOBART: 2/65 Albert Road Moonah Tasmania 7009

NEW ZEALAND:

43-67 River Street Richmond Vic. 3121 30-34 Day Street North Silverwater N.S.W. 2128 575 Maitland Road Mayfield West N.S.W. 2304 25 Turbo Drive Coorparoo Qld. 4151 62 Leyland Street Garbutt Qld. 4814 14 Robison Street Rockhampton Qld. 4701 Cnr Carroll St. & Struan Crt. Toowoomba, Qld. 4350 14/128 Lyons Street Bungalow Qld. 4870 36-38 Croydon Road Keswick S.A. 5035 38 Belmont Ave. Rivervale W.A. 6103

7 Lockhart Place Mt Wellington Auckland 1006

PHONE: +61 3 9429 2999 PHONE: +61 2 9748 3444 PHONE: +61 2 4960 2220 PHONE: +61 7 3891 6008 PHONE: +61 7 4779 0700 PHONE: +61 7 4927 2277 PHONE: +61 7 4634 4799 PHONE: +61 7 4035 6888 PHONE: +61 8 8297 9055 PHONE: +61 8 9277 1777 PHONE: +61 8 8947 2666 PHONE: +61 3 6228 9575 PHONE: +64 9 276 1967

**CARLO GAVAZZI** 



NHP

CARLO GAVAZZI **Monitoring & Control Relays** 

"Reliability...you can count on"

- DIN Rail & Plug in Housings FOR FLEXIBILITY & CHOICE
- Single & Extended Functions FOR TAILORING YOUR PROTECTION NEEDS
- True RMS Monitoring FOR TRUE MONITORING & CONTROL

Now available at NHP

ELECTRICAL ENGINEERING PRODUCTS PTY LTD





#### Monitoring **Control Technology**

NHP



Electromatic has been synonymous with monitoring and control in the Australian market for over 25 years. Since its merger in 1984 with Carlo Gavazzi, Electromatic has continued to specialise in control technology that is guaranteed to out perform. Carlo Gavazzi is a company with a lifetime commitment to automation and control and dedicated to providing its customers and their industries with increased efficiency, reduced down time and solutions you can rely on. It's what they do best.

Current, voltage, phase, frequency and power factor guarding is vital in order to maximise your system's performance.

The Carlo Gavazzi range of economical and advanced monitoring relays translates into the Advantage and Advantage Plus Series offering reliability you can count on.

#### "Advantage series:

& 3 Phase Monitoring

Phase Sequence & Phase Loss

Latch Function

AC/DC Over Voltage

AC/DC Over Current

Up to 500 V AC/DC monitoring

#### ...Advantage Plus series:

1 & 3 Phase True RMS Monitoring

AC/DC Over or Under Current

AC/DC Over or Under Voltage

Phase Sequence

Phase Loss

Time Delay Setting (0.1 - 30 sec)


AC/DC Over or Under Current - mV input

AC/DC Over & Under Voltage

Phase Asymmetry

Latch & Inhibit Function

#### Reliability... you can count on

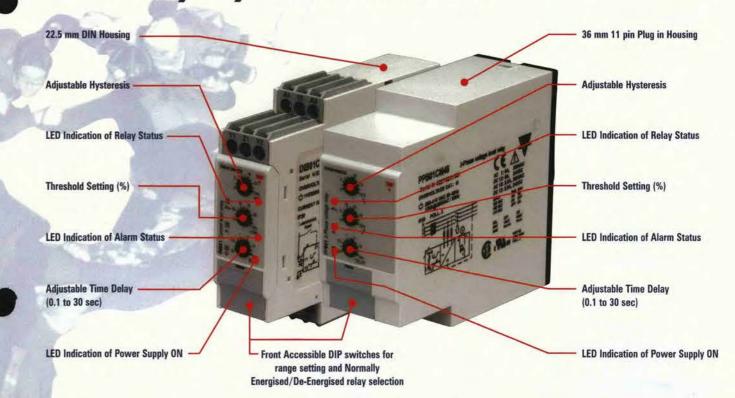

#### "Advantage SERIES

DIN Rail



DIA Current





PIA Current

• 1 Phase AC/DC over current · Latch function

Accurate



DUA Voltage



PUA Voltage

• 1 Phase AC/DC over voltage up to 500 V AC/DC

Responsive



DPA 3 Phase



PPA 3 Phase

• 3 Phase · Phase sequence and phase loss

#### Quality **Advanced**

#### ...Advantage Plus SERIES



DIB Current



PIB Current

• 1 Phase True RMS AC/DC over/under current \*Latch & inhibit function \*Time delay 0.1 - 30 sec



DUB Voltage



PUB Voltage

• 1 Phase True RMS • AC/DC over/under voltage · Latch & inhibit function ·Time delay 0.1 - 30 sec

Reliable



DPB

3 Phase

**PPB** 3 Phase

• 3 Phase · AC over & under voltage, phase asymmetry sequence & phase loss

· Latch & inhibit function · Time delay 0.1 - 30 sec

Flexible



Frequency Power Factor

• 1 Phase • 3 Phase .50 - 60 Hz · Latch & inhibit · Latch & function inhibit function · Time delay · Time delay 1 - 30 sec.

0.1 - 30 sec.

"Get the Advantage"



## COMPACT FUSES



A complete range of low voltage **BS** and **DIN** fuses

NGINEERING PRODUC

e 10/12/2014

#### **Covering your protection needs**

#### **HRC** cartridge fuse links

NHP Compact industrial bolted pattern. Centre contacts, ASTA certified to BS 88; Pert 2: 1988. Complies with IEC 269 parts 1 and 2: Tested to 80kA at 415V AC 550V AC 1

269 parts 1 and 2.		and 2. Tented to 80kA at 415V AC 556V AC.			
Current motor		Fixing			
	ng (A) al Motor	centres (mm)	BS88 ref	NHP Cat No.	
2	- motor	(111111)	5.21	NTB2")	
4	1	TO STATE OF	1	NTB4')	
6	200		130	NTB6')	
10	(S)	10.30	Name:	NTB10')	
20	100	10.5	Marita	NTB16') NTB20')	
25	Service .	97	-4	NTB25')	
32	799	Well for	P27-38	NTB32')	
40 50	5.58	STATE OF	5、肾	NTB40')	
63		17	97.1	NTB50') NTB63')	
63	80	3		NTB63M80°)	
63	100		- 3	NTB63M100°)	
2		C29894	060	NTBC2	
4	- 50	4	11.57	NTBC4	
6	No.	52 Redde	tin Allie	NTBC6 NTBC10	
16	The same	- TO		NTBC16	
20		Day 1		NTBC20	
25		111	B1	NTBC25	
32 40	BAR!	BOS .	BI	NTBC32 NTBC40	
50	TO SERVICE SER	EF S	3.20	NTBC50	
63	C. Tale	SELECTION OF THE PERSON OF THE	150	NTBC63	
63	80	Mile A	200	NTBC63M80°)	
63	100	10000	200	NTBC63M100 <sup>2</sup> )	
100		100	- THE	NTC80 NTC100	
100	125	111	B1	NTC100M125')	
100	160			NTC100M160 <sup>2</sup> )	
100	200	15/1	1000	NTC100M2001)	
125	26.6			NTF125	
160		111	82	NTF160 NTF200	
200	250	Link	62	NTF200M250°)	
200	315	E 48	The last	NTF200M3152)	
250	Size a	S-Hell S	C Y S	NTKF250	
315		111	B3	NTKF315	
315	400	1000	法使国	NTKF315M400°	
250	E 10	133		NTKM250	
315	Contract of	Section 1		NTKM315	
355 400	HET AT	111	B4	NTMF355 NTMF400	
355				NTM355	
400	\$500 M	133/184	C1	NTM400	
450				NTTM450	
500	3	133/184	C2	NTTM500	
560	1	103/104	02	NTTM560	
630	-			NTTM630	
450 500				NTT450	
560		165/229	-	NTT500 NTT560	
630				NTT630	
710	37.3	100 man	5-12-E-1	NTLT710	
800		165/229	10 To 10	NTLT800	
710	400	133/184	СЗ	NTLM710	
800	100	100/104	00	NTLM800	
1000	12 -1	149	D1	NTXU1000	
1250	239	-		NTXU1250	
-			143	COST ROLL	

#### HRC fuse fittings - 2 to 1250 Amps

NHP Compact fuse gear includes a range of moulded HRC fuse fittings, designed to accept bolt-in and clip-in HRC fuse-links.

Each fuse fitting is fully shrouded to prevent accidental contact with live parts when inserting or withdrawing a carrier and once a fuse carrier has been completely removed.

The fuse carrier and base mouldings are manufactured from high quality thermosetting material finished in black.

NHP fuse fittings accept NHP Compact HRC fuselinks and are available in ratings of 20, 32, 63, 100 and 200 amp and can be supplied in front connected and front/busbar connected.

They are designed to comply with BS88: Part 2,

1988 and are suitable for systems up to 660V. Suitable HRC fuse-links are also to BS88: Part 2,

The NHP "NV" range of clip-in HRC fuse fittings are available in 20, 32 and 63 amp at 415V. These fuse fittings can be either screw fixed to a mounting panel or mounted directly on standard DIN rail. They comply with BS88: Part 1, 1988 and accept NHP NNS and NES clip-in HRC fuse-links to the same standard.

Clip-in type fuse fittings allow fuse-links to be replaced quickly and simply, as no tools are required, fuse-links are removed from the holder using side pressure on the fuse-link while replacement involves a simple push fit.

#### HRC DIN type fuse-links (Also referred to as NH type)

N-Type 600V AC 500V AC'), Manufactured to DIN43620/1, IEG269-2-1. Rated breaking sepacity 120kA r.m.s. Time current gl. to VDE 0636/21. Characteristics gG to IEC 289-2-1.

All NHP Compact DIN fuses feature "pop up" blown fuse indication

		Length	NHP
Current rating A		mm	Cat No.
SIZE 00	6	78.5	N006')
400	10	78.5	N00103)
\$8000	16	78.5	N00163)
	20	78.5	N0020°)
	25	78.5	N00253)
	32	78.5	N0032')
	35	78.5	N00353)
•	40	78.5	N0040°)
	50	78.5	N0050°)
	63	78.5	N00633)
	80	78.5	N0080°)
	100	78.5	N001003)
	125	78.5	N00125')
	160	78.5	N00160°)
SIZE 1	25	133.0	N125
	35	133.0	N135
	50	133.0	N150
	63	133.0	N163
	80	133.0	N180
	100	133.0	N1100
	125	133.0	N1125
	160	133.0	N1160
	200	133.0	N1200
	224	133.0	N12251)
	250	133.0	N1250°)
SIZE 2	80	148.0	N280
	100	148.0	N2100
	125	148.0	N2125
	160	148.0	N2160
	200	148.0	N2200
	224	148.0	N2224
	250	148.0	N2250
	315	148.0	N2315
	355	148.0	N23551)
	400	148.0	N2400°)
SIZE 3	315	150.0	N3315
	355	150.0	N3355
	400	150.0	N3400
	500	150.0	N3500
	630	150.0	N36301)
Table 1997	AND DESCRIPTION OF THE PERSON NAMED IN COLUMN TWO IS NOT THE PERSON NAMED IN COLUMN TWO IS NAMED IN COLUMN TWO I		100000





Stromberg OFAX DIN fuse bases

NHP has a range of single and three pole DIN fuse bases for sizes 00 and 1 DIN fuses. Fully shrouded and open versions are available.



**NHP DIN fuse** 



Din fuse extractor handle and bracket Our NHP DIN fuse extractor handle suits sizes 00 to 3 DIN fuses.

Notes: ') Tested to 550V

'M' in Cat. No. denotes motor starting type.

Tested to 500V.



#### ELECTRICAL ENGINEERING PRODUCTS PTY LTD

w.nhp.com.au

MELBOURNE: 43-67 River Street, Richmond, Vic. 3121 Phone: (03) 9429 2999 Fax: (03) 9429 1075

SYDNEY . BRISBANE . ADELAIDE . PERTH . NEWCASTLE . TOWNSVILLE

ROCKHAMPTON • TOOWOOMBA • CAIRNS • DARWIN

Page 139 of 139