


PROJECT OVERVIEW & INDEX
BCC CONTRACT NO. S.201951963

VOLUME 1

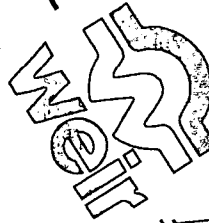

WEIR ENGINEERING PTY LTD
A.C.N. 000 573 339
EnviroTech




BRISBANE CITY COUNCIL

DEPARTMENT OF WATER AND SEWAGE

**PUMPWELL NO. 1
EAGLE FARM STATION**

**OPERATION AND MAINTENANCE
INSTRUCTION MANUAL**

**WEIR ENGINEERING JOB NO. 15140
BCC CONTRACT NO. S.20/95/963**

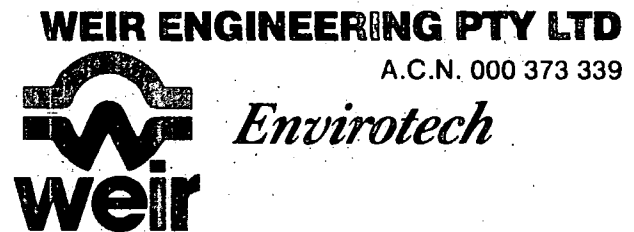

MANUAL PREPARED BY

WEIR ENGINEERING PTY LTD

**15 GINDURRA ROAD
SOMERSBY NSW 2250
TELEPHONE: (02) 4349 2999
FACSIMILE: (02) 4349 2801**

BRISBANE CITY COUNCIL
Dept. Water Supply and Sewage
Pumpwell No 1, Eagle Farm Pump Station

BCC Contract No S20/95/96
Project Overview and Index
Operation and Maintenance Manual

BRISBANE CITY COUNCIL
DEPARTMENT OF WATER SUPPLY
AND SEWAGE

PUMPWELL No 1
EAGLE FARM PUMP STATION

PROJECT OVERVIEW and INDEX
OPERATION AND MAINTENANCE
MANUAL

Volume 1

WEIR ENGINEERING PTY LTD
JOB No 15140
BCC CONTRACT No S20/95/96

BRISBANE CITY COUNCIL
Dept. Water Supply and Sewage
Pumpwell No 1, Eagle Farm Pump Station

BCC Contract No S20/95/96
Project Overview and Index
Operation and Maintenance Manual

Volume 1 Project Overview and Index

INDEX

SECTION 1 PROJECT OVERVIEW

1.1	VERTICAL SEWAGE PUMPS	1
1.2	PERFECT HARMONY DRIVE.....	1
1.3	HIGH VOLTAGE INDUCTION MOTOR.....	2
1.4	PUMP INSTRUMENTATION	2
1.5	PUMP CONTROLS.....	2

SECTION 2 INDEX FOR VOLUME 2 – VERTICAL SEWAGE PUMP

SECTION 3 INDEX FOR VOLUME 3 A & B – SITE COMMISSIONING

SECTION 4 INDEX FOR VOLUME 4 – PERFECT HARMONY DRIVE

SECTION 5 INDEX FOR VOLUME 5 – HIGH VOLTAGE INDUCTION MOTOR

SECTION 6 INDEX FOR VOLUME 6 A & B – PUMP INSTRUMENTATION

BRISBANE CITY COUNCIL
Dept. Water Supply and Sewage
Pumpwell No. 1, Eagle Farm Pump Station

BCC Contract No.: S.20/95/96
Vertical Sewage Pump
Operation and Maintenance Manual

REVISIONS/AMENDMENT CERTIFICATE

It is certified that the amendments promulgated in the undermentioned Amendment List have been incorporated in this copy of the Publication.

Amendment List		Topic/Set Affected	*Amendment Effect	Amended By	Date
No.	Date of Issue				
1					
2					
3					
4					
5					
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					
17					
18					
19					
20					

***Note:** Insert brief details of page(s) amended, inserted or cancelled.

BRISBANE CITY COUNCIL
 Department Water Supply and Sewerage
 Eagle Farm Pump Station Upgrade

BCC Contract No. S.20/95/96
Pumpwell No. 1 Speed Control Equipment

Table of Contents

Perfect Harmony User's Manual

5.2.6.	The Enter/Cancel Button	5-6
5.2.7.	Shift Function Buttons	5-6
5.2.8.	Arrow Buttons	5-7
5.2.9.	Diagnostic Indicators	5-10
5.2.10.	The Display	5-10
5.3.	Keypad and Display for Engineered Drives	5-12

CHAPTER 6: COMMISSIONING

6.1.	Set-up	6-1
6.1.1.	Initial Set-up Procedure for Re-qualification of Perfect Harmony VFD	6-1
6.1.2.	Modulator and Power Circuit Test for Low Voltage Cells Only	6-2
6.1.3.	Modulator and Power Circuit Test for High Voltage Cells Only	6-4
6.1.4.	Hardware Voltage Regulator Test	6-5
6.1.5.	Scaling Adjustments	6-7
6.1.6.	Closed Loop Operation	6-8
6.1.7.	Full Load Operation	6-9
6.2.	Portable Harmony Cell Tester	6-11
6.2.1.	Procedure for Testing an Installed Cell	6-12

CHAPTER 7: SYSTEM OPERATIONS

7.1.	Introduction	7-1
7.2.	The System Program	7-1
7.2.1.	Comments Section	7-1
7.2.2.	Flag Initialization Section	7-2
7.2.3.	On/Off Control and Blower Logic Sections	7-3
7.2.4.	Stop Features Section	7-5
7.2.5.	Run Request and Drive Fault Logic Sections	7-5
7.2.6.	Front Panel Indicators and PIB Relay Control Logic Sections	7-6
7.2.7.	Torque Gain and Acceleration Equations Section	7-6
7.2.8.	XCL Definitions	7-7
7.2.9.	Open Loop Control Logic Section	7-7
7.3.	Sample DRCTRY.PWM File	7-8

CHAPTER 8: TROUBLESHOOTING AND MAINTENANCE

8.1.	Introduction	8-1
8.2.	Six Month Inspection	8-1
8.3.	Replacement of Parts	8-2
8.4.	Interpreting Keypad Display Fault Messages	8-2
8.5.	Drive Faults	8-3
8.6.	Cell Faults	8-7
8.6.1.	Troubleshooting General Cell and Power Circuitry Faults	8-9
8.6.2.	Troubleshooting Cell Overtemperature Faults	8-9
8.6.3.	Troubleshooting Overvoltage Faults	8-10
8.6.4.	Troubleshooting Cell Communication and Link Faults	8-10
8.7.	User Faults	8-10
8.8.	Output Limitations with No Apparent Fault Message	8-10
8.8.1.	Output Voltage Limit	8-10
8.8.2.	Output Current Limit	8-10
8.8.3.	Output Speed Limit	8-11
8.9.	Diagnosing Inhibit Mode	8-11
8.10.	Filter Maintenance	8-12

1.3 High Voltage Induction Motor

The High Voltage Induction Motor for driving the pump is manufactured by Crompton Greaves in Mumbai, India. The motor is a 6.6kV, 10-pole vertical flange mounted machine rated at 2,000kW, 50Hz providing adequate torque to meet the specified pump duty over the entire speed range.

The motor design is of the totally enclosed type with water-cooled heat exchangers mounted on either side of the machine. (CACW – Closed Air Circuit, Water cooled)

For detailed information on the High Voltage Induction Motor, Refer to Volume 5 of this manual.

1.4 Pump Instrumentation

The instrumentation supplied with this project is provided to monitor the operational state of both the high voltage induction motor and the SRA 900/1000 Double Volute Vertical Sewage pump.

The instrumentation supplies control/monitoring signals directly to the Brisbane City Council pump control system.

The following pump parameters are monitored:

- ◆ Bearing and pump casing vibration.
- ◆ Bearing temperatures.
- ◆ Motor winding temperatures.
- ◆ Pump and motor speed.
- ◆ Pump reverse rotation.
- ◆ Moisture build-up in the motor casing and heat exchangers.

1.5 Pump Controls

The Pump Control System was supplied, installed and commissioned by others.

All control actions, sequencing and data logging derived from the pump instrumentation is carried out by the Pump control system.

Section 1 Project Overview

This project incorporates the manufacture, testing, installation and commissioning of three (3) new sewage pumps for the Brisbane City Council. They are installed in Pumpwell No 1 at the Councils Eagle Farm Pump Station. The scope of supply includes the pumps, drive motor, variable frequency drive unit and associated instrumentation. The pump power supply and control system was supplied by others.

1.1 Vertical Sewage Pumps

The vertical sewage pumps (Model SRA 900/1000) are manufactured by Weir Engineering at their Dandenong works facility. They are a vertical mounted, single stage, bottom entry double volute centrifugal design in general compliance with the Specification. The pumps are capable of variable speed operation and will deliver a flow of 2100l/s of sewage at a 70m head when operating at 593rpm.

Each pump is fitted with an impeller of “non-ragging” design to ensure that spheres of up to 150mm diameter and other solids consistent with raw sewage can be passed through the pump without blockage. The pump is driven through a Gridflex flexible coupling with over torque shear protection set up to operate in the event that a larger object becomes jammed in the pump.

For detailed information on the Vertical Sewage Pump, Refer to Volume 2 of this manual.

1.2 Perfect Harmony Drive

The pump is driven by a Variable Voltage, Variable Frequency (VVVF) power electronic drive unit manufactured by Robicon in the U.S.A. Power supply is taken at 11kV and supplied to the motor at 6.6kV. The design utilises a transformer with 6 phase shifted secondary windings feeding power cells in a series configuration to produce a very high quality, low harmonic, variable frequency power output to the motor.

The Perfect Harmony Drive is rated for a loading of 2,600HP. It incorporates ‘state of the art’ vector speed control technology to meet the Specification requirement of steady state speed regulation to within ± 1 rpm.

For detailed information on the Perfect Harmony Drive, Refer to Volume 4 of this manual.

BRISBANE CITY COUNCIL
Dept. Water Supply and Sewage
Pumpwell No 1, Eagle Farm Pump Station

BCC Contract No S20/95/96
System Instrumentation
Operation and Maintenance Manual

Volume 6 Pump System Instrumentation

INDEX

SECTION 1 INTRODUCTION	1
SECTION 2 DESCRIPTION OF EQUIPMENT	1
2.1 LOCAL INSTRUMENTATION PANEL	2
2.2 3300 SYSTEM OVERVIEW	3
2.2.1 System Overview	3
2.2.2 System Block Diagram	3
2.2.3 Rack	3
2.3 3300/03 SYSTEM MONITOR	4
2.3.1 System Monitor	4
2.3.2 Monitor Functions	4
2.3.3 Assembly and Disassembly Procedure	4
2.3.4 Data Interface Removal	4
2.3.5 Front Panel Installation and Removal	4
2.3.6 Monitor Options	4
2.3.7 Programmable Options	4
2.3.8 OK Relay Configuration	4
2.3.9 Operational Testing	4
2.3.10 Keyphasor Operational Testing	4
2.3.11 Recommended Spare Parts List	4
2.3.12 Specification	4
2.4 3300/12 POWER SUPPLY	5
2.4.1 Location of Assemblies	5
2.4.2 Options	5
2.4.3 Disassembly Procedure	5
2.4.4 Fuses	5
2.4.5 Input Voltage Option	5
2.4.6 Testing and Trouble shooting	5
2.4.7 Data Communication Interface Options	5
2.4.8 Transducer Voltage Option	5
2.4.9 Recommended Spare Parts	5
2.4.10 Specification	5
2.4.11 Field Wiring Drawings	5
2.5 3300 SIX CHANNEL TEMPERATURE MONITOR	6
2.5.1 Six Channel Temperature Monitor System	6
2.5.2 Monitor Functions	6
2.5.3 Monitor Options	6
2.5.4 Programmable Options	6
2.5.5 OK	6
2.5.6 Bypass	6
2.5.7 Alarm 1	6
2.5.8 Alarm 2	6
2.5.9 Read Channel Temperature	6
2.5.10 Read Alarm 1 Setpoint Levels	6
2.5.11 Read Alarm 2 Setpoint Levels	6
2.5.12 Self Test	6

BRISBANE CITY COUNCIL
Dept. Water Supply and Sewage
Pumpwell No 1, Eagle Farm Pump Station

BCC Contract No S20/95/96
System Instrumentation
Operation and Maintenance Manual

2.5.13	Error Codes	6
2.6	3300/50 TACHOMETER	7
2.6.1	System Overview Dual Setpoint Tachometer	7
2.6.2	System Overview Zero Speed Tachometer	7
2.6.3	System Overview Rotor Acceleration Tachometer	7
2.6.4	Monitor Options	7
2.6.5	Programmable Options	7
2.6.6	Monitor Functions	7
2.6.7	OK	7
2.6.8	Bypass Dual Setpoint Tachometer	7
2.6.9	Bypass Zero Speed Tachometer	7
2.6.10	Bypass Rotor Acceleration Tachometer	7
2.6.11	Alert Dual Setpoint Tachometer	7
2.6.12	Alert Zero Speed Tachometer	7
2.6.13	Alert Rotor Acceleration Tachometer	7
2.6.14	Read Gap Voltage	7
2.6.15	Read Setpoints Dual Setpoint Tachometer	7
2.6.16	Read Setpoints Zero Speed Tachometer	7
2.6.17	Read Setpoints Rotor Acceleration Tachometer	7
2.6.18	Read Peak Hold	8
2.6.19	Reset Peak Hold	8
2.6.20	Enable (Zero Speed Tachometer)	8
2.6.21	Self Test	8
2.6.22	Index	8
2.7	3300/52 REVERSE ROTATION MONITOR	9
2.7.1	Reverse Rotation Monitor System	9
2.7.2	Front Panel Features	9
2.7.3	Monitor Functions	9
2.7.4	Monitor Removal	9
2.7.5	Monitor Disassembly	9
2.7.6	Signal Input Relay Module	9
2.7.7	Monitor Functions	9
2.7.8	OK	9
2.7.9	Alert	9
2.7.10	Bypass	9
2.7.11	Read Setpoints	9
2.7.12	Read Gap Voltage	9
2.7.13	Read Max Reverse/ Peak Hold	9
2.7.14	Reset Max Reverse/ Peak Hold	9
2.7.15	Probe Installation	9
2.7.16	Reverse Rotation Enabled	9
2.7.17	Alert Hysteresis	10
2.7.18	Adjust Alert Setpoints	10
2.7.19	Bypass Alert Relays	10
2.7.20	Bypass Monitor	10
2.7.21	Adjust Threshold and Hysteresis	10
2.7.22	Adjust Full Scale Range	10
2.7.23	Test Trigger OK LED's	10
2.7.24	Test Alerts	10
2.7.25	Self Test	10
2.7.26	Error Codes	10
2.7.27	Recommended Spare Parts List	10
2.7.28	Specifications	10
2.7.29	Index	10
2.7.30	Field Wiring Diagram	10
2.8	330525 VELOMETER XA PIEZO VELOCITY SENSOR	11

BRISBANE CITY COUNCIL
Dept. Water Supply and Sewage
Pumpwell No 1, Eagle Farm Pump Station

BCC Contract No S20/95/96
System Instrumentation
Operation and Maintenance Manual

SECTION 7 OPERATIONS	1
SECTION 8 MAINTENANCE	1
8.1 TEMPERATURE MONITOR	1
8.1.1 Six Channel Temperature Monitor System	1
8.1.2 Monitor Functions	1
8.1.3 Monitor Options	1
8.1.4 Programmable Options	1
8.1.5 OK	1
8.1.6 Bypass	1
8.1.7 Alarm 1	1
8.1.8 Alarm 2	1
8.1.9 Read Channel Temperature	1
8.1.10 Read Alarm 1 Setpoint Levels	1
8.1.11 Read Alarm 2 Setpoint Levels	1
8.1.12 Self Test	1
8.1.13 Error Codes	1
8.1.14 Disassembly Procedure	2
8.1.15 Recorder/Relay Module	2
8.1.16 Temperature Input Module	2
8.1.17 Installed Program Options	2
8.1.18 RTD Analogue Board Options	2
8.1.19 First Out, Alarm Delays, Alarm 2 Options	2
8.1.20 Transducer Type, OK Options	2
8.1.21 Full Scale, Recorder Options	2
8.1.22 Alarm Setpoint Adjustment	2
8.1.23 Channel Bypass	2
8.1.24 Alarm 2 Bypass	2
8.1.25 Test Channel Alarms - TC	2
8.1.26 Test Channel Alarms - RTD	2
8.1.27 Test OK Limits - TC	2
8.1.28 Test OK Limits - RTD	2
8.1.29 Test OK Limits - TC	2
8.1.30 Test OK Limits - RTD	2
8.1.31 Test/Calibration - TC	2
8.1.32 Test/Calibration - RTD	2
8.1.33 Field Wiring Diagrams	2
8.1.34 Recommended Spare Parts - TC Monitor	2
8.1.35 Recommended Spare Parts - RTD Monitor	2
8.1.36 Specifications	2
8.2 TACHOMETER	3
8.2.1 System Overview Zero Speed Tachometer	3
8.2.2 System Overview Rotor Acceleration Tachometer	3
8.2.3 Front Panel Features - Dual Setpoint Tachometer	3
8.2.4 Front Panel Features - Zero Speed Tachometer	3
8.2.5 Front Panel Features - Rotor Acceleration Tachometer	3
8.2.6 Monitor Removal	3
8.2.7 Monitor Disassembly	3
8.2.8 Signal Input Relay Module	3
8.2.9 Monitor Options	3
8.2.10 Monitor Full Scale Range Adjustment	3
8.2.11 Events per Revolution Adjustment	3
8.2.12 Threshold and Hysteresis Adjustment	3
8.2.13 Alert Hysteresis	3
8.2.14 Adjust Alert Setpoints Dual Setpoint Tachometer	3
8.2.15 Adjust Alert Setpoints Zero Speed Tachometer	3

BRISBANE CITY COUNCIL
Dept. Water Supply and Sewage
Pumpwell No 1, Eagle Farm Pump Station

BCC Contract No S20/95/96
System Instrumentation
Operation and Maintenance Manual

2.8.1	<i>Operating Information</i>	11
2.8.2	<i>Installation</i>	11
2.8.3	<i>Maintenance</i>	11
2.8.4	<i>Field Testing and Trouble Shooting</i>	11
2.8.5	<i>Specifications</i>	11
2.9	3300 - 8 MM PROXIMITY TRANSDUCER SYSTEM	12
2.9.1	<i>Operating Information</i>	12
2.9.2	<i>Installation</i>	12
2.9.3	<i>Maintenance and Trouble Shooting</i>	12
2.9.4	<i>Specifications</i>	12
2.10	RTD TEMPERATURE SENSING ELEMENTS	13
2.11	MOTOR MOISTURE DETECTOR	14
SECTION 3 DESIGN CRITERIA AND PROCESS DESCRIPTION		1
3.1	VIBRATION MEASUREMENT	1
3.2	TEMPERATURE MEASUREMENT	1
3.2.1	<i>Bearing Temperature</i>	1
3.2.2	<i>Motor Cooling Air Temperature</i>	2
3.2.3	<i>Motor Stator Winding Temperature</i>	2
3.3	SPEED MEASUREMENT	2
3.4	3300 SYSTEM COMPATIBILITY GUIDE	3
3.4.1	<i>Operating Information</i>	3
3.4.2	<i>Installation</i>	3
3.4.3	<i>Maintenance and Trouble Shooting</i>	3
SECTION 4 INSTALLATION AND PRE-COMMISSIONING		1
4.1	INSTALLATION	1
4.2	3300 SYSTEM INSTALLATION	1
4.2.1	<i>Receiving Inspection</i>	1
4.2.2	<i>Handling and Storage Considerations</i>	1
4.2.3	<i>Rack Assembly Options</i>	1
4.2.4	<i>Rack Installation (Panel Mount)</i>	1
4.2.5	<i>Rack Installation (19-inch ELA)</i>	1
4.2.6	<i>Panel Cutout Dimensions</i>	1
4.2.7	<i>Weatherproof Housing Installation</i>	1
4.2.8	<i>Power Supply Installation</i>	1
4.2.9	<i>System Monitor Installation</i>	1
4.2.10	<i>Monitor Installation (Typical)</i>	1
4.2.11	<i>Power Input Module</i>	1
4.2.12	<i>Signal Input Relay Module</i>	1
4.2.13	<i>Alert Relay Actuation Circuits</i>	1
4.2.14	<i>Danger Relay Actuation Circuits</i>	2
4.2.15	<i>Field Grounding Technique</i>	2
4.2.16	<i>Index</i>	2
4.2.17	<i>Appendix</i>	2
4.3	PRE-COMMISSIONING	3
4.3.1	<i>Velometer Final Test Data</i>	3
4.3.2	<i>Inspection and Test Plan for Local Instrumentation Panel</i>	3
SECTION 5 START-UP AND SHUT-DOWN PROCEDURES		1
SECTION 6 COMMISSIONING		1

BRISBANE CITY COUNCIL
Department Water Supply and Sewerage
Eagle Farm Pump Station Upgrade

BCC Contract No. S.20/95/96
Pumpwell No. 1 Speed Control Equipment

Perfect Harmony User's Manual

Table of Contents

TABLE OF CONTENTS

CHAPTER 1: INTRODUCTION

1.1.	Introduction to the Perfect Harmony	1-1
1.1.1.	Clean Power Input	1-3
1.1.2.	High Power Factor, Nearly Perfect Sinusoidal Input Currents	1-3
1.1.3.	Nearly Perfect Sinusoidal Output Voltages	1-4
1.2.	Hardware Overview	1-5
1.3.	Cell Specifications	1-11
1.4.	Removing and Installing Cells	1-14
1.5.	Features	1-14
1.6.	Safety Precautions and Warnings	1-14

CHAPTER 2: DESCRIPTION OF EQUIPMENT

2.1.	Introduction	2-1
2.2.	The Cell Control System	2-1
2.3.	The Master Control System	2-4
2.4.	The Power Circuit	2-4
2.5.	Specifications	2-8

CHAPTER 3: DESIGN CRITERIA & PROCESS DESCRIPTION

3.1.	Introduction	3-1
3.2.	Theory - The Power Circuitry	3-2
3.3.	Multiple Motors	3-10
3.4.	The PLC Interface	3-12
3.5.	The "Up" Transfer (from VFD to Line Control)	3-13
3.6.	The "Down" Transfer (from Line to VFD Control)	3-13
3.7.	Required Signals	3-14
3.8.	Additional Parameter Descriptions	3-15

CHAPTER 4: INSTALLATION AND PRECOMMISSIONING

4.1.	Introduction	4-1
4.2.	Installation Practices	4-1
4.2.1.	Receiving	4-1
4.2.2.	Shipping Splits	4-1
4.2.3.	Off-loading	4-1
4.2.4.	Weight Estimates	4-2
4.2.5.	Handling	4-2
4.2.6.	Location	4-3
4.2.7.	Anchoring Cabinets to Floors and Walls	4-4
4.2.8.	Re-connect Wiring	4-5
4.2.9.	Power-up Check List	4-7

CHAPTER 5: STARTUP & SHUT DOWN PROCEDURES

5.1.	Introduction	5-1
5.2.	The Standard Keypad	5-1
5.2.1.	Fault Reset Button	5-3
5.2.2.	Automatic Button	5-3
5.2.3.	Manual Stop Button	5-3
5.2.4.	Manual Start Button	5-3
5.2.5.	The 0-9 Buttons	5-4

BRISBANE CITY COUNCIL
Department Water Supply and Sewerage
Eagle Farm Pump Station Upgrade

BCC Contract No. S.20/95/96
Pumpwell No. 1 Speed Control Equipment

Perfect Harmony User's Manual

Table of Contents

CHAPTER 9: FAULT PROTECTION & RECTIFICATION

9.1. Introduction	9-1
9.2. Motor Menu (1) Options.....	9-3
9.3. Drive Menu (2) Options	9-5
9.4. Stability Menu (3) Options	9-14
9.5. Auto Menu (4) Options.....	9-20
9.6. Main Menu (5) Options	9-24
9.7. Log Control Menu (6) Options	9-26
9.8. Drive Protect Menu (7) Options	9-29
9.9. Meter Menu (8) Options	9-31
9.10. Communications Menu (9) Options	9-37

CHAPTER 10: ISOLATION & RESTORATION PROCEDURES

CHAPTER 11: LIST OF SUB CONTRACTORS & PROPRIETARY EQUIPMENT

CHAPTER 12: RECOMMENDED SPARE PARTS AND SPECIAL TOOLS

CHAPTER 13: LIST OF ENGINEERING DRAWINGS

CHAPTER 14: TRAINING

CHAPTER 15: LIST OF CONTRACT VARIATIONS AND PLANT MODIFICATIONS

CHAPTER 16: COMMISSIONING AND TEST REPORTS

APPENDIX A1: GLOSSARY OF TERMS

APPENDIX A2: SYSTEM CONTROL DIAGRAMS

APPENDIX A3: WARRANTY POLICY AND PRODUCT LIABILITY

A3.1. Guarantee and Product Liability	A3-1
A3.2. In-house Repair Services	A3-1
A3.3. Field Service Repairs.....	A3-2
A3.4. Terms and conditions.....	A3-2
A3.4.1. Warranty.....	A3-2
A3.4.2. Expedited Service.....	A3-2

APPENDIX A4: PARAMETER SUMMARY

APPENDIX A5: SOLID STATE VARIAC OPTION

A5.1. Introduction	A5-1
A5.2. Protective circuits	A5-1
A5.3. Operation	A5-1
A5.4. Troubleshooting.....	A5-2
A5.4.1. SCR Power Bridge Test.....	A5-3
A5.4.2. Power Fuse Replacement	A5-3
A5.5. Warranty	A5-4
A5.6. Specifications.....	A5-4

NOTES

Table of Contents

SECTION 1	INTRODUCTION	5
SECTION 2	DESCRIPTION OF EQUIPMENT	1
2.1	EQUIPMENT SUPPLIED	1
2.2	RATING DETAILS	1
2.3	APPLICATION DETAILS	1
2.4	ACCESSORIES FITTED ON MOTOR	2
2.5	SPECIAL REQUIREMENTS	2
SECTION 3	DESIGN CRITERIA AND PROCESS DESCRIPTION	1
3.1	SPECIFIED DESIGN CRITERIA	1
3.2	MOTOR PERFORMANCE COMMITMENTS	2
3.3	MOTOR CONSTRUCTION FEATURES	3
3.4	MOTOR PERFORMANCE CURVES	3
SECTION 4	INSTALLATION AND PRE-COMMISSIONING	1
4.1	SITE CONNECTIONS	1
4.2	COOLING WATER REQUIREMENTS	1
4.3	INSPECTION ON RECEIPT	2
4.4	HANDLING PRECAUTIONS	3
4.5	STORAGE	3
4.6	INSTALLATION	4
4.6.1	<i>Location</i>	4
4.6.2	<i>Measurement of Insulation Resistance</i>	4
4.6.3	<i>Minimum Insulation Resistance for Motor Energisation</i>	5
4.6.4	<i>Drying the Winding</i>	5
4.6.5	<i>Lubricant Condition and Relubrication</i>	7
4.6.6	<i>Foundation below Motor Stool</i>	7
4.6.7	<i>Drive Coupling</i>	8
4.7	ELECTRICAL CONNECTIONS	9
4.7.1	<i>Connection to Stator</i>	9
4.7.2	<i>Earthing</i>	10
4.7.3	<i>Space Heaters</i>	10
4.7.4	<i>Temperature Detectors</i>	10
SECTION 5	START UP AND SHUTDOWN PROCEDURES	1
SECTION 6	COMMISSIONING	1
SECTION 7	OPERATIONS	1
7.1	INTRODUCTION	1
7.2	DIRECTION OF ROTATION AND ITS REVERSAL	1
7.3	CHECKS DURING OPERATION	1
7.4	RECOMMENDED SETTINGS	2
SECTION 8	MAINTENANCE	1
8.1	INTRODUCTION	1
8.2	MECHANICAL MAINTENANCE	1
8.2.1	<i>Cleanliness</i>	1
8.2.2	<i>Bearing and Lubrication</i>	1

8.2.3	<i>Vibration</i>	2
8.2.4	<i>Overhauling – Dismantling and Reassembly</i>	2
8.3	ELECTRICAL MAINTENANCE	5
8.3.1	<i>Connections</i>	5
8.3.2	<i>Insulation Resistance</i>	5
8.3.3	<i>Polarisation Index</i>	5
8.3.4	<i>Drying Out</i>	5
8.3.5	<i>Insulation Resistance of Auxiliary Circuits</i>	5
8.4	ROLLER BEARINGS	6
8.4.1	<i>Drive End Bearing Data</i>	6
8.4.2	<i>Non Drive End Bearing Data</i>	6
8.4.3	<i>Transportation</i>	7
8.4.4	<i>Construction</i>	7
8.4.5	<i>Mounting and Dismounting of Bearing Assembly</i>	7
8.4.6	<i>Putting into Service</i>	9
8.4.7	<i>Operation and Inspection</i>	9
8.4.8	<i>Application of Grease</i>	11
8.5	HARDWARE LIST	12
8.6	RECOMMENDED TORQUE VALUES	13
SECTION 9	FAULT PROTECTION AND RECTIFICATION	1
9.1	FAULTS	1
9.2	FAULT ANALYSIS GUIDE	1
SECTION 10	ISOLATION AND RESTORATION PROCEDURES	1
SECTION 11	LIST OF SUB-CONTRACTORS AND PROPRIETARY EQUIPMENT	1
SECTION 12	RECOMMENDED SPARES AND SPECIAL TOOLS	1
12.1	RECOMMENDED SPARE PARTS	1
12.2	SPECIAL TOOLS	1
SECTION 13	LIST OF ENGINEERING DRAWINGS	1
SECTION 14	TRAINING	1
SECTION 15	LIST OF CONTRACT VARIATIONS AND PLANT MODIFICATIONS	1
SECTION 16	COMMISSIONING AND TEST REPORTS	1

BRISBANE CITY COUNCIL
Dept. Water Supply and Sewage
Pumpwell No 1, Eagle Farm Pump Station

BCC Contract No S20/95/96
System Instrumentation
Operation and Maintenance Manual

8.2.16	<i>Adjust Alert Setpoints Rotor Acceleration Tachometer</i>	3
8.2.17	<i>Bypass Dual Setpoint Tachometer</i>	3
8.2.18	<i>Bypass Zero Speed Tachometer</i>	3
8.2.19	<i>Bypass Rotor Acceleration Tachometer</i>	3
8.2.20	<i>Monitor Bypass Dual Setpoint Tachometer</i>	3
8.2.21	<i>Monitor Bypass Zero Speed Tachometer</i>	3
8.2.22	<i>Monitor Bypass Rotor Acceleration Tachometer</i>	3
8.2.23	<i>Test Alert Dual Setpoint Tachometer</i>	3
8.2.24	<i>Test Alert Zero Speed Tachometer</i>	3
8.2.25	<i>Test Alert Rotor Acceleration Tachometer</i>	4
8.2.26	<i>Test Trigger OK's</i>	4
8.2.27	<i>Self Test</i>	4
8.2.28	<i>Wiring Diag - Dual Setpoint Tachometer</i>	4
8.2.29	<i>Wiring Diag - Zero Speed Tachometer</i>	4
8.2.30	<i>Wiring Diag - Rotor Acceleration Tachometer</i>	4
8.2.31	<i>Recommended Spare Parts</i>	4
8.2.32	<i>Specifications</i>	4
8.2.33	<i>Index</i>	4
8.2.34	<i>Schematics and Technical Drawings</i>	4
8.3	VIBRATION MONITOR.....	5
8.3.1	<i>Dual Velocity Monitor System</i>	5
8.3.2	<i>Front Panel Features</i>	5
8.3.3	<i>Monitor Removal</i>	5
8.3.4	<i>Monitor Disassembly</i>	5
8.3.5	<i>Signal Input Relay Module</i>	5
8.3.6	<i>Monitor Options</i>	5
8.3.7	<i>Main Board Jumper Locations</i>	5
8.3.8	<i>PK-PK Filter Board Jumper Locations</i>	5
8.3.9	<i>RMS Filter Jumper Locations</i>	5
8.3.10	<i>First Out, Alarm Delays</i>	5
8.3.11	<i>Alert Mode, Danger Mode</i>	5
8.3.12	<i>Danger Relay Voting</i>	5
8.3.13	<i>Buffered Transducer Output Option</i>	5
8.3.14	<i>Transducer Channel Units Input Option</i>	5
8.3.15	<i>Transducer Type Option</i>	5
8.3.16	<i>Channel A Full Scale Range Option</i>	5
8.3.17	<i>Channel B Full Scale Range Option</i>	5
8.3.18	<i>Barriers, Trip Multiply Options</i>	5
8.3.19	<i>Alarm Setpoint Adjustment</i>	5
8.3.20	<i>Bypass Monitor Channel</i>	5
8.3.21	<i>Danger Bypass</i>	5
8.3.22	<i>Test Channel Alarms</i>	6
8.3.23	<i>Test OK Limits</i>	6
8.3.24	<i>Calibrate Channels</i>	6
8.3.25	<i>Filter Programming</i>	6
8.3.26	<i>Self Test</i>	6
8.3.27	<i>Field Wiring Diagram</i>	6
8.3.28	<i>Recommended Spare Parts</i>	6
8.3.29	<i>Specifications</i>	6
8.3.30	<i>Index</i>	6
SECTION 9	FAULT PROTECTION AND RECTIFICATION	1
9.1	ALARM PROTECTION AND SAFETY DEVICES.....	1
9.2	TROUBLE SHOOTING	1
SECTION 10	ISOLATION AND RESTORATION PROCEDURES	1

BRISBANE CITY COUNCIL
Dept. Water Supply and Sewage
Pumpwell No 1, Eagle Farm Pump Station

BCC Contract No S20/95/96
System Instrumentation
Operation and Maintenance Manual

SECTION 11	LIST OF SUB-CONTRACTORS AND PROPRIETARY EQUIPMENT	1
SECTION 12	RECOMMENDED SPARES AND SPECIAL TOOLS	1
SECTION 13	LIST OF ENGINEERING DRAWINGS	1
13.1	PROCESS DRAWINGS	1
13.2	ELECTRICAL SCHEMATIC DRAWINGS	1
SECTION 14	TRAINING	1
SECTION 15	LIST OF CONTRACT VARIATIONS AND PLANT MODIFICATIONS	1
SECTION 16	COMMISSIONING AND TEST REPORTS	1