



BRISBANE CITY COUNCIL

Pressure Gauge Switchboard P0404

Royston St Brookfield

Contract : BW 70103-048

Job Number : WT400106

ELECTRICAL INSTALLATION

OPERATIONS and MAINTENANCE MANUAL

INSTALLATION BY:

**SJ Electric (Qld) Pty Ltd
19 Elliot Street
Albion Qld 4010**

Telephone: 07 3256 1522 Fax: 07 3256 1533

INDEX

| SECTION | Pressure Station – P0404 Royston St Brookfield |
|----------------|---|
| Sect 1 | GENERAL |
| 1. | 1..1 General Workplace Health & Safety 1..2 Project Overview 1..3 Plant Maintenance 1..4 Electrical Control System 1..5 Control & Monitoring System |
| Sect 1 | MANUFACTURER'S TECHNICAL DATA |
| 2. | 2.1 Critec DAR-275V Alarm Relay 2.2 Trio DR900-06A02-D0 Radio. 2.3 Polyphaser IS-50NX Impulse Suppressor. 2.4 Powerbox Radio/DC converter. 2.5 Powerbox Modem/DC converter. |
| Sect 1 | DRAWINGS |
| 3. | |
| Sect 1 | INSPECTION & TEST RESULTS |
| 4. | |
| Sect 1 | COMPLIANCE CERTIFICATES |
| 5. | |

1. General

1.1 General Workplace Health and Safety

- The Workplace Health and Safety Act (1995) sets out the laws about Workplace Health and Safety for all workplaces, workplace activities and specified high risk plant. The Electrical Safety Act (2002) sets out the laws covering electrical safety. Nothing in this document is designed, in any way, to undermine the authority of the Acts.
- All reasonable care must always be taken to ensure the plant is without risk to the health and safety of personnel operating and maintaining plant and equipment.
- Employers have an obligation to ensure the workplace health and safety of all personnel at work.
- It is employer responsibility to ensure that all persons entering or working on the premises use appropriate personal protective equipment.
- Personal protective equipment includes gloves, safety glasses, hard hats, ear protection, safe foot ware and, where necessary, specialist protective clothing for hazardous areas.
- Any item of equipment should always be isolated before maintenance or repairs commence to ensure that inadvertent operation of the item does not result in risk to the health and safety of any person.
- Where the item is isolated, any total or partial shutdown should not allow a hazardous situation to be created.
- Where the item cannot be isolated, another person should be stationed at the controls of the item and an effective means of direct communication should exist between the persons carrying out the maintenance and the person at the controls.

General Operating Principles

- All persons working the premises must be qualified Electrical Engineers or electrical trades persons capable of performing the required tasks competently. All personnel must also be familiar with plant and equipment.
- Adequate information, instruction, training and supervision must be provided to enable personnel to perform work without risk to health and safety.
- Work in an orderly way.
- Plan work in advance to avoid hazardous situations.
- Warn others of any hazards.
- Make inquiries before starting work, particularly on any unfamiliar installation or equipment.
- Before any work begins ensure that any instructions received or given are fully understood.
- Concentrate on the task on hand.
- Do not distract others or allow yourself to be distracted by foolish actions.
- Work from a safe and convenient position that provides a maximum working space that you do not have to over reach, you cannot slip, trip or stumble and so endanger yourself and others.
- Keep the working area tidy and free of unwanted materials and equipment.
- Use insulated tools where possible.
- Inspect tools and equipment regularly and ensure that any necessary maintenance is carried out.
- Keep yourself in good health.
- Do not work if ill or over tired, to the extent that your concentration, movement or alertness is affected. Illness or fatigue can endanger yourself and others.

1.2 Project Overview

Contract BW70103-048 was for the manufacture and testing of ten (10) new Pressure switchboards for various locations throughout Brisbane.

Equipment provided by SJ Electric ensures safe and efficient operation of the pump stations. Equipment supplied and installed by SJ Electric includes: -

- Switchboards
- Instrumentation
- Civil Works

The switchboard incorporates the latest technology in power monitoring, and instrumentation. It is important engineers, technicians and operators are familiar with the equipment installed before attempting any adjustments, modifications or maintenance.

The following Sections of this manual contain a comprehensive description of all equipment supplied, by SJ Electric. It is recommended that this manual be referred to before carrying out any work on any equipment.

1.3 Plant Maintenance

To ensure proper operation of the plant the following should be observed: -

- The plant should be kept clean and tidy at all times. Not only is this of aesthetic value, it extends equipment life.
- Check that all plant and equipment is operating correctly. Correctly operating equipment promotes overall plant efficiency.
- All items and areas of equipment should be hosed down and cleaned regularly.

WARNING

- **Avoid directly hosing any drive motor or electrical item.**

- All maintenance, service, modifications and significant deviations from Normal operating conditions should be recorded in the Plant Service Log
- After a month of operation, check the tension of all bolts associated with the plant and thereafter periodically. Bolted connections on painted surfaces can loosen due to thinning of the paint underneath the bolt head-bearing surface. Motor mounting bolts and other bolted connections subjected to vibration should be periodically checked for loosening.

WARNING

- **Before starting work on any item ensure that the power supply is isolated, tagged off, and the item cannot be started.**

- The importance of preventative maintenance cannot be over-emphasized. Regular maintenance and suitable care of the equipment will ensure a long and reliable service life of the equipment.
- Many stoppages can be avoided by following the recommended maintenance procedures. Do not wait until you hear the grinding of equipment that has broken down. If you see any item wearing down, replace it, before it causes damage to other associated items.

Preventive Maintenance

Maintenance procedures recommended to extend switchboard life are outlined as follows: -

- Switchboard exterior should be regularly wiped down with a solvent base cleaner such as "Spray & Wipe". This will ensure longevity of the powder-coated surface.
- Accessible areas like distribution boards and motor starter panels should be cleaned with a vacuum cleaner to remove dust and foreign matter.
- RTU panels should be maintained as dust free as possible. Dusting with a dry rag is recommended - taking care not to allow dust inside the I/O modules or processor.
- When removing or installing PLC modules care should be taken to ensure that power is turned off to the rack before modules are removed or installed.
- Connections and efficient operation of circuit breakers, contactors and isolators should be checked every 12 months - especially where connected to busbars.
- Busbar connections should be checked every 12 months.
- Globes for indicator lights should be checked on a weekly basis with any faulty lamps replaced.
- Cubicle Fans Filter should be inspected and cleaned frequently.

1.4 Electrical Control System

General Description

The switchboards are manufactured from 3mm aluminium and are suitable for location outdoors; the switchboards have been designed by Brisbane Water and contain several separate sections including:

- Incoming Section.
- Distribution Section.
- RTU Section.

1.5 Control and Monitoring System.

The control and monitoring of the system is performed by the Brisbane Water telemetry system and was not included in this contract.

2. MANUFACTURER'S TECHNICAL DATA

TECHNICAL DATA SHEET

For

PRESSURE STATION P0404 **Royston St Brookfield**

| | |
|------------------------|---|
| Equipment Type: | Surge Filter Alarm Relay |
| Location: | Main Incomer |
| Model Numbers: | DAR-275V |
| Manufacturer: | Critec |
| Supplier: | Energy Correction Options PO Box 431 Kelvin Grove, QLD. 4059 Ph: 07 3356 0577 Fx: 07 3356 1432 Web: www.ecoptions.com.au |

TECHNICAL DATA SHEET

For

PRESSURE STATION P0404 **Royston St Brookfield**

| | |
|------------------------|----------------|
| Equipment Type: | Radio |
| Location: | RTU Section |
| Model Numbers: | DR900-06A02-D0 |
| Manufacturer: | Trio |
| Supplier: | Brisbane Water |

TECHNICAL DATA SHEET

For

PRESSURE STATION P0404

Royston St Brookfield

Equipment Type: Impulse Suppressor

Location: RTU Section

Model Numbers: IS-50NX-C2

Manufacturer: Polyphaser

Supplier: Brisbane Water

TECHNICAL DATA SHEET

For

PRESSURE STATION P0404 **Royston St Brookfield**

Equipment Type: Radio/DC Converter

Location: RTU Section

Model Numbers: PB1H-2412G-CC

Manufacturer: Powerbox

Supplier: Brisbane Water

TECHNICAL DATA SHEET

For

PRESSURE STATION P0404 **Royston St Brookfield**

Equipment Type: Modem/DC Converter

Location: RTU Section

Model Numbers: 24VDC-SP-CC

Manufacturer: Powerbox

Supplier: Brisbane Water

2. MANUFACTURER'S TECHNICAL DATA

2.1 Critec DAR-275V Alarm Relay

INSTALLATION INSTRUCTIONS

**MODEL NUMBER
DAR 275V**

1. PREPARATION

DANGER: *Electrical shock or burn hazard. Installation of this device should only be made by qualified personnel. Failure to lockout electrical power during installation or maintenance can result in fatal electrocution or severe burns. Before making any connections be sure that power has been removed from all associated wiring, electrical panels, and other electrical equipment.*

**CAUTION NOTES:**

1. *The installation of this device should follow all applicable electrical codes, such as the National Electrical Code.*
2. *Check to make sure line voltage does not exceed DAR275V voltage ratings.*
3. *Follow all instructions to ensure correct and safe operation.*
4. *Do not attempt to open or tamper with the DAR in any way as this may compromise performance and will void warranty. No user serviceable parts are contained.*

2. INTRODUCTION

Selected DSD, TDS & TDF DINLINE Surge Protection Devices include status monitoring circuits which provide visual status display of device capacity. They may also provide a low voltage opto-coupler alarm output circuit that can be connect to the DAR to provide potential free (Form C) change-over contacts. The DAR alarm contacts may be used to provide output to external alarm systems or remote monitoring circuits.

One DAR can be used per DSD/TDS/TDF opto-coupler alarm or up to 16 DSD opto-coupler alarms can be connected in series to the one DAR to provide a common output. It is recommended that the DAR be powered from the same power circuit that feeds the device(s) being monitored, however the DAR can be powered from other circuits. This allows for example, one DAR unit to be connected to separate SPDs that are protecting a three phase circuit.

Note. Depending upon the usage of the DAR output contacts, failure of power to the DAR may be interpreted as a failure of one or more of the SPDs being monitored. Visual inspection of the DAR and SPDs status displays would determine this.

3. MOUNTING

The DAR is designed to clip to 35mm (top hat) DIN rails (standard EN50022). Unless otherwise mechanically restrained, use horizontal DIN rails with the DAR module spring clips to the bottom and the label text the correct way up.

NOTE: The DAR must be installed in an enclosure or panel that:

- *prevents the DAR temperature from exceeding 131°F (55°C)*
- *provides adequate electrical and safety protection*
- *prevents the ingress of moisture and water*
- *allows DAR status indicators to be inspected*

4. ELECTRICAL CONNECTION

The interconnecting wiring should:

- be of size #10 to #14 AWG (2.5mm² to 6mm²) solid or stranded conductor.
- The wire insulation should be stripped back 5/16" (8mm).
- **NOTE:** Do not use greater than 9inlbs (1Nm) of torque when tightening the terminals.


CONNECTION TO TELECOMMUNICATIONS NETWORKS

The DAR is approved for use in Australia where the alarm contacts may be connected to private lines or building cabling associated with the telecommunications network. NO direct connection to the public switched network should be made.


INSTALLATION INSTRUCTIONS

5. INTERCONNECTION

When connecting the DAR to a single opto-coupler output the + terminal of the SPD should connect to the + terminal on the DAR. The – terminal should connect to the – terminal.

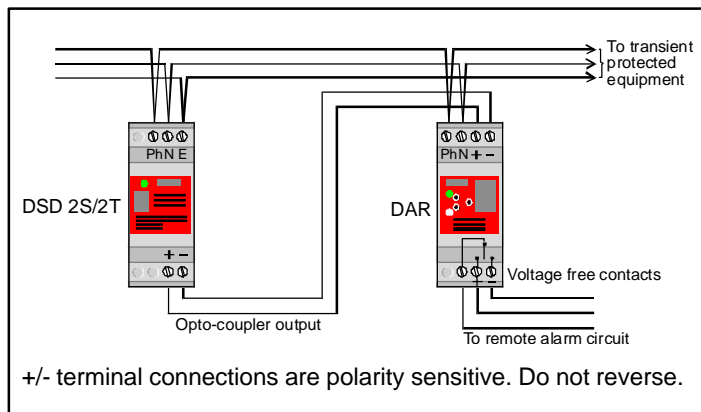

When connecting the DAR to multiple opto-couplers the opto-couplers should be connected in series with + terminal of one connected to the – terminal of the next. The DAR + terminal should connect to + SPD terminal at one end of the series connection and the – DAR terminal connect to the – SPD terminal at the other end of the series connection.

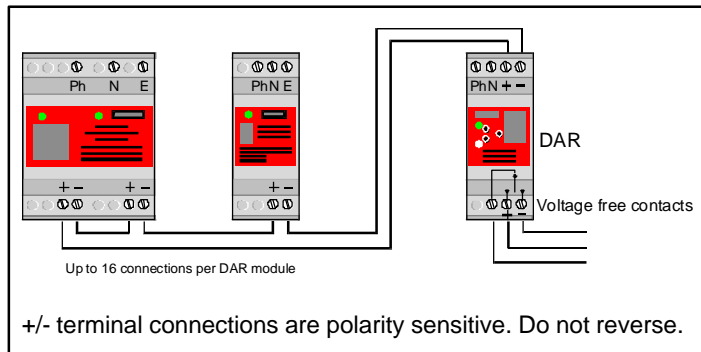

5. STATUS INDICATION

| | ✓ | ! | X |
|-------------|---|--|---|
| STATUS | Protection Operational | Protection Alarm | Fault Mode |
| DISPLAY | | | |
| EXPLANATION | Normal operation Normal (green) indicator ON Red indicator OFF Relay is energised Power is supplied | DSD in alarm mode or power to DSD has been removed Normal (green) indicator OFF Red indicator ON Relay is de-energised Power is supplied | Power to DAR removed Protection status unknown Normal (green) indicator OFF Red indicator OFF Relay is de-energised Power is OFF |

6. FUSING AND ISOLATION

Overcurrent protection must be installed in the upstream circuit of the power supply to the DAR to provide protection to the unit itself and the wiring in case of fault conditions.

The fuse rating should be based on the wiring size used to connect to the DAR Ph & N terminals. Australian regulations AS3000-1991, Table B2 specifies the following upstream protection for single phase circuits, unenclosed in air.

| Cable Size | HRC Fuse or | CB Rewirable Fuse |
|--------------------|-------------|-------------------|
| 1.5mm ² | 16A | 12A |
| 2.5mm ² | 20A | 16A |
| 4mm ² | 25A | 20A |
| 6mm ² | 32A | 25A |

Where overcurrent protection of the appropriate rating or smaller is already fitted in the upstream circuit, overcurrent protection at the DAR will not be required

6. MAINTENANCE & TESTING

Before removing a DAR unit from service, ensure that the power has been removed. Maintenance, testing and replacement should only be undertaken by qualified personnel.

Testing of a DAR unit which is connected to a fully functional DSD unit can be accomplished by removing power to the DSD only. The DAR Status indication and output contacts should alter from the Normal to Fault condition.

Testing of the DAR unit alone may be accomplished by disconnecting the + / - connections to the unit. When power is applied the DAR "Fault" Status Indicator should be illuminated. By connecting the + / - terminals together, the "Normal" Status Indicator should be illuminated. The output contacts should alter to the appropriate state.

7. USE OF OTHER INTERFACES

Only DAR units are recommended for the interfacing of equipment to the DSD, TDS & TDF opto-coupler alarm output circuit(s). The direct connection of other equipment to these opto-coupler alarm outputs may not provide sufficient isolation or exceed the opto-coupler specifications. This may damage the SPD and/or the connected equipment. Warranty may be voided under such circumstances.

NOTE: In connecting to the SPD opto-coupler alarm output(s), do not reverse the +/- connections as damage may occur.

2. MANUFACTURER'S TECHNICAL DATA

2.2 Trio DR900-06A02-D0 Radio.



TC-900DR USER GUIDE

41 Aster Avenue Carrum Downs 3201 Australia Tel: 61 3 9775 0505 Fax: 61 3 9775 0606

GENERAL

The Trio DataCom TC-900DR is a full duplex 900 MHz Radio featuring a fully integrated 4800/9600 bps data radio modem and antenna diplexer. Configuration of the unit is fully programmable, with parameters held in non volatile memory (NVRAM). All configuration parameters are accessible using the TC-DRPROG installation package, consisting of a programming lead, manual and software which will run on a PC under Windows 95/98/NT. It is essential that each unit is programmed to suit individual requirements prior to operation. *For detailed information refer to the TC-900DR Handbook.*


DATA CONNECTION

The data connection is via a DB9 connector labeled 'Port A' (shown below), which is wired as a DCE.

User Serial "Port A" Pin Assignment.

EXTERNAL VIEW OF 'PORT A'


NOTE: Pin 6 and pin 9 provide a dual function which depends on the mode that the TC-900DR is operating in.

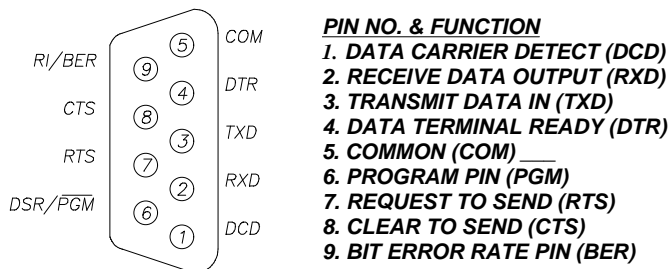

User Serial "Port B" Pin Assignment.

Port B can be used as a secondary data stream (independent of Port A) once configured by the programmer. Port B also has one connection that may be of use for installation. This connection (Pin 9) is Receive Signal Strength Indicator (RSSI) output. 0-5V where 1.5V typically indicates -110dBm and every 0.5V increase indicates an improvement of » 10dBm.

EXTERNAL VIEW OF 'PORT B'

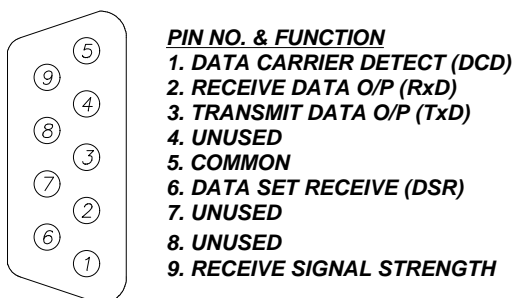

NOTE: Port B Pin 9 output has a high impedance of around 50K OHMS and loading will decrease accuracy of the RSSI measurement.

POWER CONNECTIONS

The power required is 13.8VDC nominal, at 600mA (Tx) nominal. If the POWER LED indicator is not illuminated once power is applied, check the internal 1Amp fuse fitted within the unit.

POWER CONNECTOR


TOP PIN

BOTTOM PIN

PIN ASSIGNMENT

+VE SUPPLY (13.8vdc,

GROUND

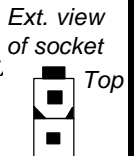

AUXILIARY CONNECTOR

The auxiliary connector is primarily for use with the optional audio handset. The connections to this auxiliary 6 pin RJ11 connector are as follows:

PIN NUMBER

1

2

3

4

5

6

FUNCTION

8 VOLTS

AUDIO OUT


GROUND

MIC INPUT/SENSE

GROUND

MANUAL PTT

External view of socket

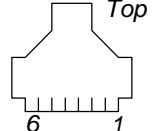

The optional audio handset is recommended as an aid in checking installations for radio path viability. This audio handset will only function when fitted prior to applying power to the unit.

The modem upon power up will check the presence of the handset and will inhibit data being transmitted so that voice communications can be established.

Once the path tests have been conducted the audio handsets **MUST be REMOVED** and the unit powered up with the handset removed before data communication can commence.

USER INDICATIONS

The TC-900DR provides 4 LED's that show status information to the user - POWER, RXSIG, SYNC, and TXMIT indications.

The POWER is indicated by a green LED and simply signifies that power has been applied to the unit.

The RXSIG LED (yellow) indicates the level of RSSI signal from the radio IF strip, compared to a threshold level set in the configuration data programmed by the user. If the signal is above the threshold, then the LED indicator is turned on.

In all operation modes except "Programmer mode", the SYNC LED (yellow) indicates when the modem has detected a valid data stream. The SYNC LED is activated, when the modem detects a valid HDLC flag sequence, and remains active until an invalid sequence of seven or more consecutive "1" bits is detected.

The SYNC LED will not be turned on if the RSSI signal strength (as indicated by the RXSIG LED) is below the minimum threshold. This prevents false SYNC detection from noise.

The TXMIT LED (red) indicator is connected directly to the modem's PTT output transistor. Whenever the radio is transmitting, this TXMIT LED indicator will be on.

SPECIAL MODES OF OPERATION

Part of the power-up/reset initialisation phase of the TC-900DR are tests to determine if the modem should enter one of 3 "special operation" modes. *In these modes the TC-900DR won't operate in its standard run mode.*

- ◆ Programmer mode.
- ◆ Bit error rate test mode.
- ◆ Handset mode.

These modes are only entered if the required setup conditions are present at power up. An error mode of operation can also be entered into, if during normal operation, an error condition occurs.

PROGRAMMER MODE

CABLE - Pins 2, 3, 4, 5 straight through with Pin 6 on the DB9 connector of Port A, connected to pin 5. When the modem is powered up with this fitted, the controller senses this and attempts to enter "Programmer mode" and the "SYNC" LED will flash approx. once per second. (Note, the TC-DRPROG programming software and lead has the required connections). Failure to supply the correct password in time, will cause the modem to abandon the "Programmer mode" attempt, and go on with its normal power-up procedure.

BIT ERROR RATE TEST MODE

Pin 9 of the DB9 connector of Port A, is normally the Ring Indicate output line. However, if this pin is driven positive (connecting it to pin 6 [DSR] and pin 7 [RTS]), then the modem's data transmitter and receiver will enter the BER test mode. This will activate the RF transmitter, and generate a scrambled bit pattern which should be decoded at a receiver as a constant logic "1" level in the unscrambled data. Any errors in the decoded bitstream, will be "0", and the receiver portion of the modem in this mode, will activate the SYNC LED every time it sees a "0" bit.

Note: As the TC-900DR is full duplex this test can operate in both directions simultaneously.

Every error bit detected, will activate the SYNC LED. For error rates of 1 in 10^3 and above, the SYNC LED will be ON most of the time. A 1 in 10^4 error rate will show the SYNC LED active for approximately 10% of the time. This function provides a crude indication of Bit Error Rate for installation purposes. Note: Error count messages (ET:XXXX) for every 10,000 bits are presented to Port A for the user. If pin 9 ceases to be driven positive, then the BER Test mode is terminated, and the modem restarts its initialisation phase.

HANDSET MODE

The DFM4-9 modem tests for the presence of a handset plugged into the handset auxiliary port at power up. If a handset is plugged in, the modem will not generate a data stream. However, it will continue to indicate received RF signal strength. The handset has a PTT button, and this signal is connected across the modem's PTT output. Thus the handset PTT switch will activate the TXMIT LED. It is essential to remove the handset from the unit and reapply power to the unit in order to return to normal operation.

ERROR INDICATION MODES

There are 3 error conditions that cause the RXSIG & SYNC LEDs to be used for error indications and not their normal purpose. Two are fatal conditions, that cause the modem to restart after the duration of the error indication phase.

TRANSMIT POWER LOW

While the modem activates the radio transmitter, it periodically checks the transmit power. If the power measurement is less than a threshold set in the non-volatile memory, then the RXSIG and SYNC LEDs are made to alternate, approximately 4 times per second. The TXMIT LED will also be on during this process. This indication condition will persist for the duration of the transmission. As soon as the transmission is discontinued, the error indication will cease, and the two LEDs revert to their normal function. Factory set to 100 milliWatts.

NVRAM READ ERROR

The DFM4-9DR modem accesses the non-volatile memory as part of its initialisation phase, to read programming configuration data. If the communication protocol with the device is violated, or the non-volatile memory CRC checksum is found to be incorrect, then the modem indicates this by flashing the RXSIG and SYNC LEDs twice alternately. That is, one LED operates ON and OFF twice, then the other. A total of five cycles of this occurs, then the modem restarts initialisation.

SYNTHESISER LOCK DETECT ERROR

If at any time during normal operation, BER mode, or handset mode, the TBB206 frequency synthesiser indicates an out of lock condition, the modem enters an error indication mode for a short time before restarting.

One LED is turned ON (☉), the LEDs are swapped, then both turned OFF (●). Then the latter LED ON again, swap LEDs, and then OFF. This will give the appearance of a sweeping motion between the LEDs. The following table shows all error condition displays.

| Tx PWR Err | | NVRAM Err | | SYNTH Err | |
|------------|------|-----------|------|-----------|------|
| RXSIG | SYNC | RXSIG | SYNC | RXSIG | SYNC |
| ☉ | ● | ☉ | ● | ☉ | ● |
| ● | ☉ | ● | ● | ● | ☉ |
| ☉ | ● | ☉ | ● | ● | ● |
| ● | ☉ | ● | ● | ● | ☉ |
| ☉ | ● | ● | ☉ | ☉ | ● |
| ● | ☉ | ● | ● | ● | ● |
| ☉ | ● | ● | ☉ | repeat | |
| ● | ☉ | ● | ● | | |
| continue | | repeat | | | |

MOUNTING AND ANTENNA CONNECTION

The TC-900DR should be mounted in a cool, dry, vibration free environment, whilst providing easy access to screws and connections. There are 4 mounting holes on the unit. The antenna should be an external yagi antenna but can be a ground independent dipole mounted via a feeder to the antenna connector (SMA type) for short range applications. However the whole radio modem should be clear of the associated data equipment to prevent mutual interference.

ASSEMBLY OF POWER LEAD

A small plastic bag containing a molex connector (M5557-2R) and two pins (M5556-TL) is provided in the packing box.

The pins are designed to take 18-24 (AWG) wire size with insulation range 1.3 - 3.10mm.

Please take care when crimping the pins.

04/01




2. MANUFACTURER'S TECHNICAL DATA

2.3 Polyphaser IS-50NX Impulse Suppressor.

ALL DESIGN, OPERATIVE AND PROCESS DATA PERTAINING TO THE ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF POLYPHASER CORPORATION. THE INFORMATION IS NOT TO BE COPIED, REPRODUCED, REVEALED TO OR APPROPRIATED BY OTHERS WITHOUT THE EXPRESS WRITTEN CONSENT OF POLYPHASER CORPORATION.

REVISIONS


| REV | LTR | DATE | ENG | MKTG | Q.A. |
|-----|-----|-------------------------|--------|--------|-------|
| A | | 01/30/96 _{PJP} | T. K. | - - | R. M. |
| B | | 06/30/99 _{JCG} | K.C.B. | T.G.F. | R. M. |
| C | | 01/16/01 _{SH} | KCB | PH | RM |
| D | | 11/18/02 _{SH} | LC | SD | LJ |

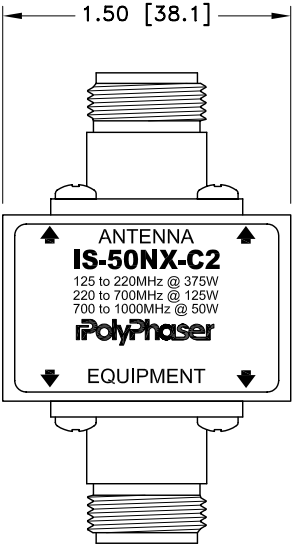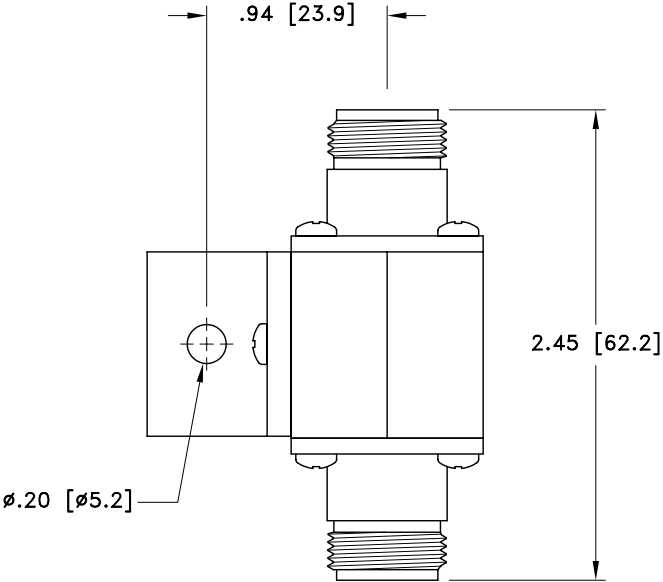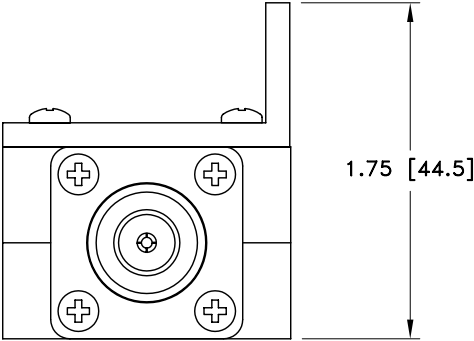

MAXIMUM CHARACTERISTICS

SURGE:
50kA IEC 1000-4-5 8/20 μ s WAVEFORM 500 JOULES
TURN ON:
600Vdc \pm 20%
TURN ON TIME:
2.5ns FOR 2kV/ns
FREQUENCY RANGE:
125MHz TO 1GHz
VSWR:
 \leq 1.1:1 OVER FREQUENCY RANGE
INSERTION LOSS:
 \leq 0.1dB OVER FREQUENCY RANGE
TEMPERATURE:
-45°C TO +85°C STORAGE/OPERATING +50°C

CUSTOMER APPROVAL: _____ DATE: _____
ALL DIMENSIONS SHOWN ABOVE ARE FOR REFERENCE ONLY.

| | | | | | |
|----------------------------|------------------|---|------------------|--------------|-----------------|
| DRAFTER J. CALLISTER | DATE 09/21/93 | <div> P.O. BOX 9000, MINDEN, NV 89423-9000 (775) 782-2511 FAX (775) 782-4476 IS-50NX-C2 CUSTOMER PRINT</div> | | | |
| MECH ENGINEER - - - - | DATE - - - - | | | | |
| ELEC ENGINEER J. JONES | DATE 04/12/95 | | | | |
| MARKETING - - - - | DATE - - - - | | | | |
| QUALITY DEPT R. MATHEUS | DATE 04/12/95 | CAGE CODE 61114 | FILE NAME -C1 | SCALE 1/1 | SHEET 1 OF 1 |

2. MANUFACTURER'S TECHNICAL DATA

2.4 Powerbox Radio/DC converter.

PBIH Series

15-150 WATTS DC/DC SINGLE OUTPUT

Features

- Wide selection of models
- 4 input voltage ranges
- High efficiency
- Low output ripple
- Proven reliability
- Good thermal margins



Specifications

INPUT

| | |
|---------------|---|
| Input voltage | 12VDC (9.2–16) 24VDC (19–32) 48VDC (38–63) 110VDC (85–140) |
|---------------|---|

| | |
|----------------|------------------------|
| Inrush current | 20A max. for 110V only |
|----------------|------------------------|

OUTPUT

| | |
|-------------------------|---|
| Output voltage | See table |
| Voltage adjustment | ±10%, ±5% for PBIH-F |
| Output current | See table |
| Ripple & noise | Output Volts x 1% + 50mV to -100mV pk-pk |
| Line regulation | 0.8% over input range |
| Load regulation | 0.9%, 0%–100% load |
| Temperature coefficient | 0°C to 50°C, 0.03% per °C |
| Overvoltage protection | O.V. clamp, PBIH-F Output shutdown, PBIH-G, J, M, R – input must be switched off for at least 30S to reactivate |
| Overcurrent protection | Fold back – PBIH-F Current limiting, PBIH-G, J, M, R (PBIH-R series is adjustable); PBIH110xxR models are not adjustable |
| Drift | Output V x 0.5% + 15(mV) per 8 hrs after 1 hr warm-up |
| Rise Time | 200mS max. – PBIH-F, M, R 100mS max. – PBIH-G, J (at 25°C) |
| Holdup time | 10mS (only 110V input) |
| Remote sense | PBIH-R Series only |

OPERATING

| | |
|-----------------------------|---|
| Efficiency | 70%–89% |
| Safety isolation (1 minute) | Type – 12, 24, 48V input Input – Output: 1500VAC Input– Case: 1500VAC Output– Case: 500VAC Type– 110V input Input– Output: 2000VAC Input– Case: 2000VAC Output– Case: 500VAC |
| Insulation resistance | 50M (500VDC) Input – Case |
| Parallel operation | Consult sales office for details |
| Remote control | PBIH-R Series: Open link: output normal Short link: output off |

ENVIRONMENTAL

| | |
|-----------------------|--|
| Operating temperature | 0°C to 50°C full load |
| Cooling | Convection cooled |
| Storage temperature | -20°C to +85°C |
| Humidity | 85% |
| Shock | 30G, PBIH-F, G and J |
| Vibration | (5Hz–10Hz, 10mm), (10Hz–50Hz) 2G, PBIH-F, G and J |

STANDARDS AND APPROVALS

| | |
|--------|---------------------------------|
| Safety | Designed to UL1950 |
| C-tick | AS/NZS CISPR11 Group 1, Class A |

MECHANICAL

| | |
|--------|--|
| Weight | PBIH-F : 250g PBIH-G : 380g PBIH-J : 410g PBIH-M : 800g PBIH-R : 1.4kg |
|--------|--|

PBIH Series

15-150 WATTS DC/DC SINGLE OUTPUT


Selection Table

| MODEL NUMBER | INPUT | OUTPUT | OUTPUT POWER |
|--------------|---------|-----------|--------------|
| PBIH-1205F | 9.2-16V | 5V 3A | 15W |
| PBIH-1212F | 9.2-16V | 12V 1.2A | 15W |
| PBIH-1215F | 9.2-16V | 15V 1A | 15W |
| PBIH-1224F | 9.2-16V | 24V 0.62A | 15W |
| PBIH-2405F | 19-32V | 5V 3A | 15W |
| PBIH-2412F | 19-32V | 12V 1.2A | 15W |
| PBIH-2415F | 19-32V | 15V 1A | 15W |
| PBIH-2424F | 19-32V | 24V 0.62A | 15W |
| PBIH-4805F | 38-63V | 5V 3A | 15W |
| PBIH-4812F | 38-63V | 12V 1.2A | 15W |
| PBIH-4815F | 38-63V | 15V 1A | 15W |
| PBIH-4824F | 38-63V | 24V 0.62A | 15W |
| PBIH-11005F | 85-140V | 5V 3A | 15W |
| PBIH-11012F | 85-140V | 12V 1.2A | 15W |
| PBIH-11015F | 85-140V | 15V 1A | 15W |
| PBIH-11024F | 85-140V | 24V 0.62A | 15W |
| PBIH-1205G | 9.2-16V | 5V 5A | 25W |
| PBIH-1212G | 9.2-16V | 12V 2.1A | 25W |
| PBIH-1215G | 9.2-16V | 15V 1.7A | 25W |
| PBIH-1224G | 9.2-16V | 24V 1.1A | 25W |
| PBIH-1248G | 9.2-16V | 48V 0.5A | 25W |
| PBIH-2405G | 19-32V | 5V 5A | 25W |
| PBIH-2412G | 19-32V | 12V 2.1A | 25W |
| PBIH-2415G | 19-32V | 15V 1.7A | 25W |
| PBIH-2424G | 19-32V | 24V 1.1A | 25W |
| PBIH-2448G | 19-32V | 48V 0.5A | 25W |
| PBIH-4805G | 38-63V | 5V 5A | 25W |
| PBIH-4812G | 38-63V | 12V 2.1A | 25W |
| PBIH-4815G | 38-63V | 15V 1.7A | 25W |
| PBIH-4824G | 38-63V | 24V 1.1A | 25W |
| PBIH-4848G | 38-63V | 48V 0.5A | 25W |
| PBIH-11005G | 85-140V | 5V 5A | 25W |

| MODEL NUMBER | INPUT | OUTPUT | OUTPUT POWER |
|--------------|---------|----------|--------------|
| PBIH-11012G | 85-140V | 12V 2.1A | 25W |
| PBIH-11015G | 85-140V | 15V 1.7A | 25W |
| PBIH-11024G | 85-140V | 24V 1.1A | 25W |
| PBIH-11048G | 85-140V | 48V 0.5A | 25W |
| PBIH-1205J | 9.2-16V | 5V 8A | 50W |
| PBIH-1212J | 9.2-16V | 12V 3.3A | 50W |
| PBIH-1215J | 9.2-16V | 15V 2.7A | 50W |
| PBIH-1224J | 9.2-16V | 24V 1.7A | 50W |
| PBIH-1248J | 9.2-16V | 48V 0.8A | 50W |
| PBIH-2405J | 19-32V | 5V 10A | 50W |
| PBIH-2412J | 19-32V | 12V 4.3A | 50W |
| PBIH-2415J | 19-32V | 15V 3.4A | 50W |
| PBIH-2424J | 19-32V | 24V 2.5A | 50W |
| PBIH-2448J | 19-32V | 48V 1A | 50W |
| PBIH-4805J | 38-63V | 5V 10A | 50W |
| PBIH-4812J | 38-63V | 12V 4.3A | 50W |
| PBIH-4815J | 38-63V | 15V 3.4A | 50W |
| PBIH-4824J | 38-63V | 24V 2.5A | 50W |
| PBIH-4848J | 38-63V | 48V 1A | 50W |
| PBIH-11005J | 85-140V | 5V 10A | 50W |
| PBIH-11012J | 85-140V | 12V 4.3A | 50W |
| PBIH-11015J | 85-140V | 15V 3.4A | 50W |
| PBIH-11024J | 85-140V | 24V 2.5A | 50W |
| PBIH-11048J | 85-140V | 48V 1A | 50W |
| PBIH-1205M | 9.2-16V | 5V 18A | 100W |
| PBIH-1212M | 9.2-16V | 12V 9A | 100W |
| PBIH-1215M | 9.2-16V | 15V 7A | 100W |
| PBIH-1224M | 9.2-16V | 24V 4.5A | 100W |
| PBIH-1248M | 9.2-16V | 48V 2A | 100W |
| PBIH-2405M | 19-32V | 5V 20A | 100W |
| PBIH-2412M | 19-32V | 12V 9A | 100W |
| PBIH-2415M | 19-32V | 15V 7A | 100W |

| MODEL NUMBER | INPUT | OUTPUT | OUTPUT POWER |
|--------------|---------|----------|--------------|
| PBIH-2424M | 19-32V | 24V 5A | 100W |
| PBIH-2448M | 19-32V | 48V 2A | 100W |
| PBIH-4805M | 38-63V | 5V 20A | 100W |
| PBIH-4812M | 38-63V | 12V 9A | 100W |
| PBIH-4815M | 38-63V | 15V 7A | 100W |
| PBIH-4824M | 38-63V | 24V 5A | 100W |
| PBIH-4848M | 38-63V | 48V 2A | 100W |
| PBIH-11005M | 85-140V | 5V 20A | 100W |
| PBIH-11012M | 85-140V | 12V 9A | 100W |
| PBIH-11015M | 85-140V | 15V 7A | 100W |
| PBIH-11024M | 85-140V | 24V 5A | 100W |
| PBIH-11048M | 85-140V | 48V 2A | 100W |
| PBIH-1205R | 9.2-16V | 5V 27A | 150W |
| PBIH-1212R | 9.2-16V | 12V 13A | 150W |
| PBIH-1215R | 9.2-16V | 15V 10A | 150W |
| PBIH-1224R | 9.2-16V | 24V 6.5A | 150W |
| PBIH-1248R | 9.2-16V | 48V 3.3A | 150W |
| PBIH-2405R | 19-32V | 5V 30A | 150W |
| PBIH-2412R | 19-32V | 12V 14A | 150W |
| PBIH-2415R | 19-32V | 15V 11A | 150W |
| PBIH-2424R | 19-32V | 24V 7A | 150W |
| PBIH-2448R | 19-32V | 48V 3.5A | 150W |
| PBIH-4805R | 38-63V | 5V 30A | 150W |
| PBIH-4812R | 38-63V | 12V 14A | 150W |
| PBIH-4815R | 38-63V | 15V 11A | 150W |
| PBIH-4824R | 38-63V | 24V 7A | 150W |
| PBIH-4848R | 38-63V | 48V 3.5A | 150W |
| PBIH-11005R | 85-140V | 5V 30A | 150W |
| PBIH-11012R | 85-140V | 12V 14A | 150W |
| PBIH-11015R | 85-140V | 15V 11A | 150W |
| PBIH-11024R | 85-140V | 24V 7A | 150W |
| PBIH-11048R | 85-140V | 48V 3.5A | 150W |

PBIH-F

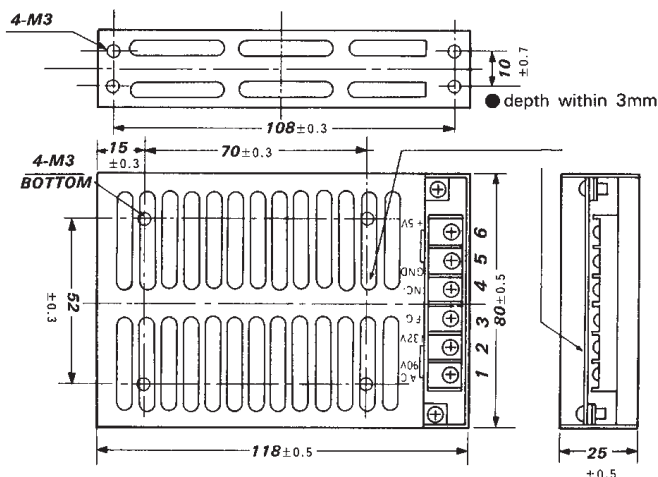

* Dimensions in mm

| terminal No. | |
|--------------|---------------|
| 1 | 0 V (DC in) |
| 2 | + V (DC in) |
| 3 | FG |
| 4 | NO Connection |
| 5 | - V out |
| 6 | + V out |

15-150 WATTS SINGLE OUTPUT

| Terminal | Connection |
|----------|------------|
| 0 | FG |
| 1 | DC +V in |
| 2 | 0V in |
| 3 | LFG |
| 4 | NO |
| 5 | NO |
| 6 | -V out |
| 7 | +V out |

| Terminal | Connection |
|----------|------------|
| 1 | FG |
| 2 | DC +V in |
| 3 | 0V in |
| 4 | LFG |
| 5 | -V out |
| 6 | +V out |
| 7 | NC |

| Terminal | Connection |
|----------|------------|
| 1 | +V out |
| 2 | +V out |
| 3 | -V out |
| 4 | -V out |
| 5 | FG |
| 6 | -V in |
| 7 | +V in |

| Terminal | Connection |
|----------|----------------|
| 1, 2 | +V out |
| 3 | +S |
| 4 | -S |
| 5, 6 | -V out |
| 7 | Remote Control |
| 8 | DC +V in |
| 9 | DC 0V in |
| 10 | FG |

2. MANUFACTURER'S TECHNICAL DATA

2.5 Powerbox Modem/DC converter.

PB251 Series

220-330 WATTS DC UPS

Features

- Ultra-low noise output
- Independent battery charging output
- DC output OK & battery OK alarms & LEDs
- Battery-LVD and alarm
- Over-temperature protection
- Battery fuse fail LED



Specifications

INPUT

| | |
|------------------|----------------------------------|
| Voltage: | 190 to 264 vac, or 190 to 400VDC |
| Line regulation: | 0.2% typical |
| Current: | 1.4A maximum |
| Inrush current: | 10A maximum |
| Frequency: | 45 to 65 Hz |

OUTPUT

| | |
|-------------------------------------|--|
| Voltage | See table |
| Current | See table |
| Load regulation | 0.5% typical |
| Current limit type - load cct | Constant current |
| Current limit type - batt. cct | Constant current |
| Short circuit protection | Indefinite, auto-resetting |
| Over-voltage protection | 17.5 to 20V latching (13.8Vdc output) 31.5 to 39V latching (27.6Vdc output) |
| Ripple & noise 100 MHz bandwidth | 28mVp-p (13.8Vdc output) 55mVp-p (27.6Vdc output) |

ENVIRONMENTAL

| | |
|-----------------------------|---|
| Operating temperature | 0 to 70°C ambient with derating, 5...90% relative humidity (non-condensing) |
| Over-temperature protection | Automatic & auto-resetting |
| Cooling requirement | Natural convection |
| Efficiency | 80% minimum |

STANDARDS & APPROVALS

| | |
|---|---|
| Safety | Complies with AS/NZS 60950, class 1, NSW Office of Fair Trading Approval N20602 |
| EMC | Emissions comply with AS/NZS CISPR11, Group 1, Class B. Complies with ACA EMC Scheme, Safety & EMC Regulatory Compliance Marked |
| Isolation i/p-o/p i/p-ground o/p-ground | 4242VDC for 1 minute 2121VDC for 1 minute 707VDC for 1 minute |

ALARMS & BATTERY FUNCTIONS

| | |
|------------------------------|---|
| Converter ON/OK alarm | Indicated by voltage-free changeover relay contacts & |
| green LED | ON=PSU OK |
| Battery low (& fuse) alarm | 10.2 to 12.6V for 12V battery, adjustable 20.4 to 25.2V for 24V battery, adjustable Indicated by voltage-free changeover relay contacts & green LED: ON=BATT OK |
| Low voltage disconnect | 9.6 to 12V for 12V battery, adjustable 19.2 to 24V for 24V battery, adjustable |
| Charger over-load protection | Auto-resetting electronic circuit breaker |
| Reverse polarity protection | Internal battery fuse |
| Battery to load voltage drop | 0.2 to 0.25V typical |

MECHANICAL

| | |
|-------------------------------|-------------------------|
| Case size | 264 L x 172 W x 67 H mm |
| Case size with heatsink | 264 L x 186 W x 67 H mm |
| Rack size | 232 D x 19" W x 2RU H |
| Weight | 1.9 kg |
| Weight with heatsink | 2.1 kg |
| Weight (rack mounted version) | 5.5 kg |

Selection Table


| MODEL NUMBER | OUTPUT | | OUTPUT POWER |
|--------------|--------|-------------------|--------------|
| | VDC | I _{LOAD} | |
| PB251-12CM | 13.8V | 16A | 220W |
| PB251-12CM-H | 13.8V | 20A | 275W |
| PB251-24CM | 27.6V | 11A | 300W |
| PB251-24CM-H | 27.6V | 12A | 330W |
| PB251-12RML | 13.8V | 20A | 275W |
| PB251-12B | 13.8V | 20A | 275W |
| PB251-24RML | 27.6V | 12A | 330W |

Note: Non standard battery charging current available on request. ie PB251-12CM-H-10 for 10A.


PB251 Series

275-330 WATTS DC UPS


Technical Illustrations

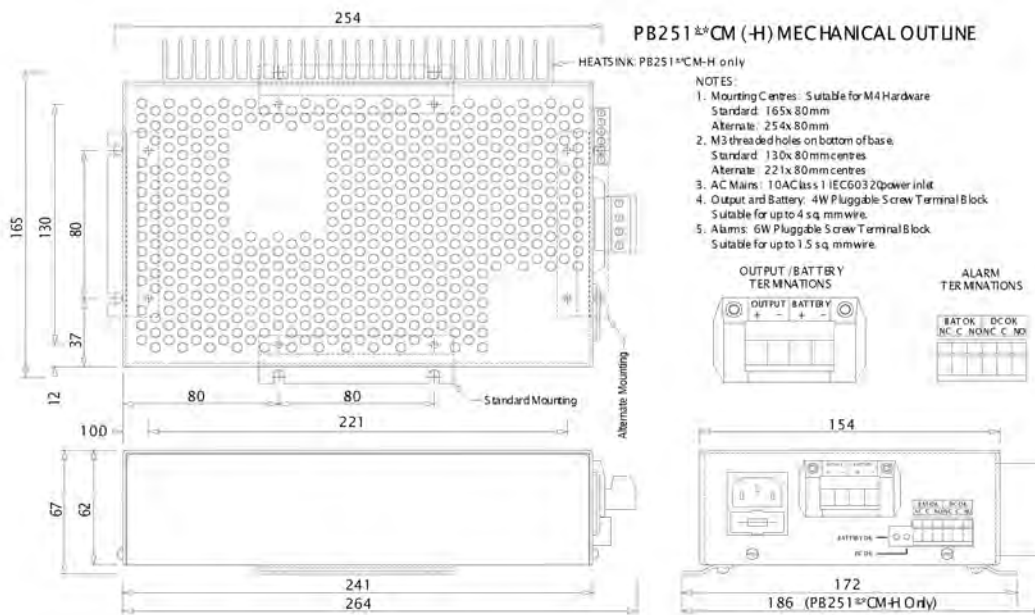



PB251-**RML & -12B MECHANICAL OUTLINE

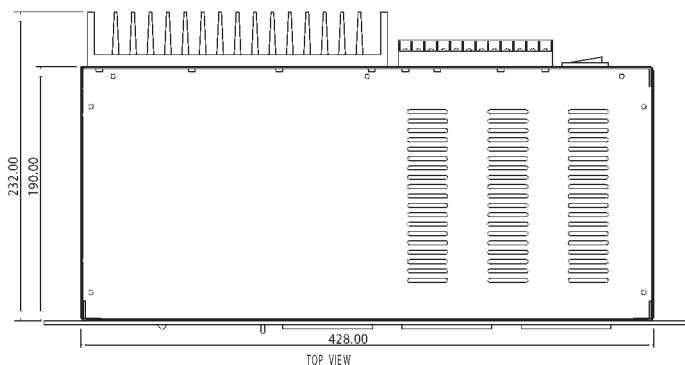



- NOTES:
1. 2RU x 19" rack enclosure per IEC 297
 2. Mounting slots are suitable for M6 hardware.
 3. Input connector is a 10A Class 1 IEC60320 inlet.
 4. 2 meter IEC mains cord with Australian plug is supplied with unit.
 5. PB251-12B alarm terminal is DB25 female.
 6. PB251-12B output and battery connector is Hirose pn. HS28R-4A. Mating connector is Hirose pn. HS28P-4A (not supplied).
 7. PB251-**RML alarm and output terminals are M3.5 screws suitable for ring or fork lugs up to 8 mm wide.

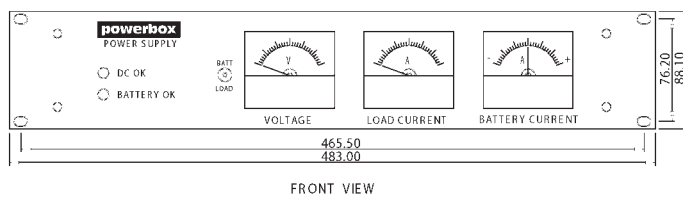

PB251-**RML ALARM AND OUTPUT TERMINALS

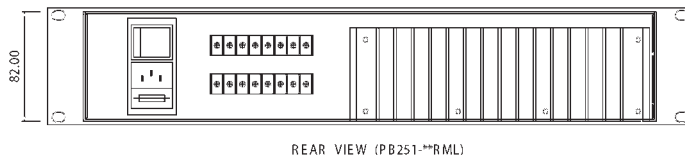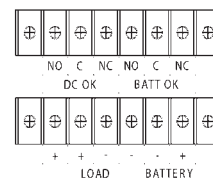

PB251-12B OUTPUT & BATTERY CONNECTOR

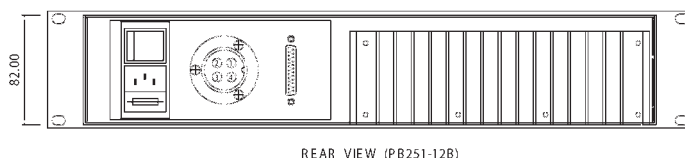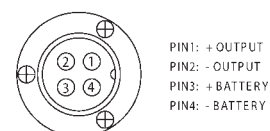

PB251-12B ALARM CONNECTOR



3. DRAWINGS



ABN 86 673 835 011

P0404

ROYSTON ST, BROOKFIELD

PRESSURE GAUGE SWITCHBOARD

| DRAWING VARIABLE | VARIABLE / LAYER | VALUE / ON or OFF |
|------------------|--------------------------------|-------------------|
| | SITE ID (01) | P0404 |
| | StreetName (02) | ROYSTON ST |
| | SuburbName (03) | BROOKFIELD |
| | P1 Gauge No. (04) | P0404 |
| | P2 Gauge No. (05) | - |
| | Flowmeter No. (06) | - |
| | RadioPartNo. (07) | DR900-07A02-D0 |
| | DrawingNo. (08) | 486/4/9-0788- |
| | Site Function (09) | PRESSURE GAUGE |
| DRAWING LAYER | Antenna Mast Height (10) | 4.0 |
| | 1.1 Main PRV fitted | no |
| | 12.1 Bypass PRV fitted | no |
| | 2.1 Radio fitted | yes |
| | 2.1.1 Side Antenna Mast fitted | yes |
| | 2.1.2 Rear Antenna Mast fitted | no |
| | 3.1 PSTN Modem fitted | no |
| | 3.2 GSM Modem fitted | no |
| | 4.1 Flowmeter fitted | no |
| | 5.1.1 Pressure Gauge 1 fitted | yes |
| | 5.2.1 Pressure Gauge 2 fitted | no |
| | 6.1 Sump Pump fitted | no |
| | 7.1 RTU - MD331 fitted | no |
| | 7.2 RTU - eNet fitted | yes |
| | 7.3 RTU plg/skt fitted | yes |

ELECTRICAL DRAWINGS INDEX


| DWG N°. | TITLE | SHEET | REVISIONS | | | | |
|------------------|--|-------|-----------|---|--|--|--|
| 486/4/9-0788-001 | ELECTRICAL DRAWING INDEX | 01 | 0 | A | | | |
| 486/4/9-0788-002 | POWER DISTRIBUTION SCHEMATIC DIAGRAM | 02 | 0 | A | | | |
| 486/4/9-0788-003 | DIGITAL INPUTS AND OUTPUTS TERMINATION DIAGRAM | 03 | 0 | | | | |
| 486/4/9-0788-004 | ANALOG INPUTS AND OUTPUTS TERMINATION DIAGRAM | 04 | 0 | A | | | |
| 486/4/9-0788-005 | SWITCHBOARD GENERAL ARRANGEMENT | 05 | 0 | A | | | |
| 486/4/9-0788-006 | SWITCHBOARD CONSTRUCTION DETAILS | 06 | 0 | | | | |
| 486/4/9-0788-007 | SWITCHBOARD EQUIPMENT LIST | 07 | 0 | A | | | |
| 486/4/9-0788-008 | SWITCHBOARD CABLE SCHEDULE & LABEL SCHEDULE | 08 | 0 | A | | | |
| 486/4/9-0788-009 | SWITCHBOARD SITE LAYOUT | 09 | 0 | A | | | |
| 486/4/9-0788-010 | SPARE | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

| ELECTRICAL AS BUILT DETAILS | | | |
|-----------------------------|-------------|---|---------|
| REV | COMPANY | - | |
| - | ELECTRICIAN | - | |
| | LICENCE No. | - | DATE: - |

SHEET 01

FOR CONSTRUCTION

| | | | | | | | | | | | | | | | |
|----------|-------|------------------------------------|------|---------|--------------------|----------------------|--------------|--|------------------------|-------------------------|-------|---------------------------|--|------------------|---|
| | | | | DRAFTED | E.PARANAGAMA 04.10 | * A.CHAVEZ-PLASENCIA | 7/5/10 | | SITE | P0404 | TITLE | ELECTRICAL DRAWINGS INDEX | SHEET No. | AMEND. | |
| A | 06.10 | MINOR REVISIONS - FOR CONSTRUCTION | DPM | GA | DRAFTING CHECK | P.MOSTERT 04.10 | DESIGN | | ROYSTON ST, BROOKFIELD | PRESSURE GAUGE | | | Queensland Urban Utilities DRAWING No. | 486/4/9-0788-001 | A |
| O | 04.10 | FOR CONSTRUCTION | E.P. | AW | CAD FILE | 49-0788SetA.dwg | * A.WITTHOFT | | ROYSTON ST, BROOKFIELD | PRESSURE GAUGE | | | | | |
| No. DATE | | AMENDMENT | DRN. | APD. | B.C.C. FILE No. | | DESIGN CHECK | | CLIENT DELEGATE | ELECTRICAL INSTALLATION | | | | | |

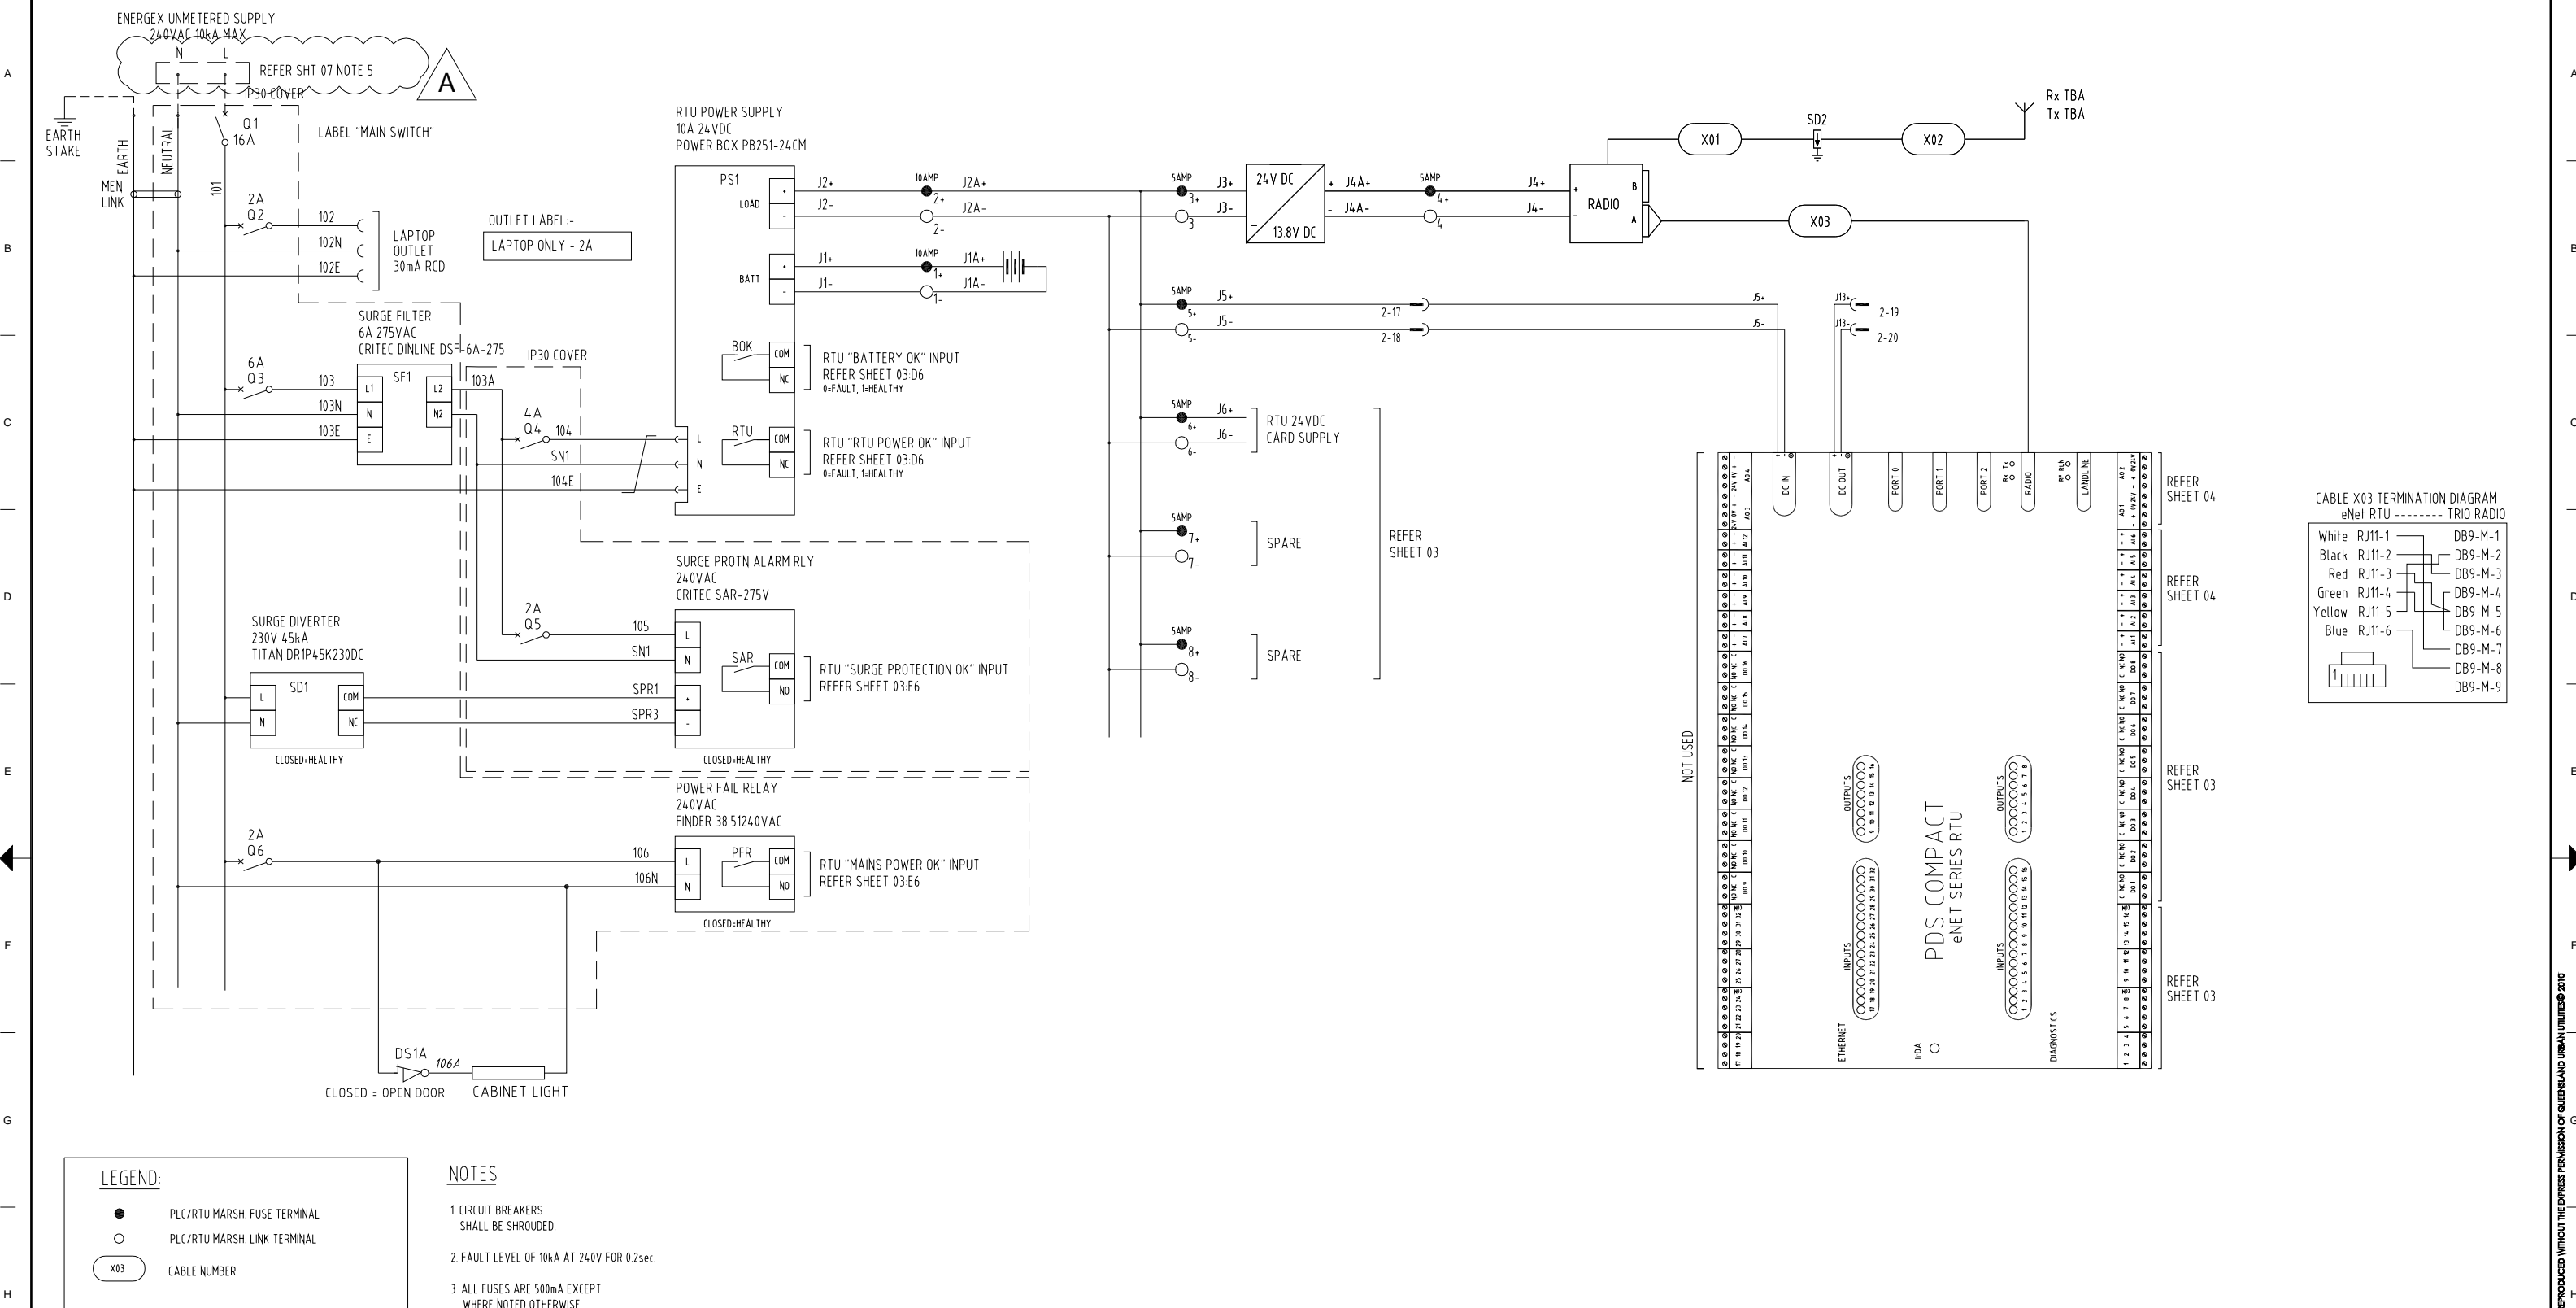

ELECTRICAL AS BUILT DETAILS

| | | |
|-----|-------------|---|
| REV | COMPANY | - |
| - | ELECTRICIAN | - |
| - | LICENCE No. | - |
| - | DATE: | - |


SHEET 02

FOR CONSTRUCTION

| | | | | | | | | | |
|-------------------|------------------------------------|--------------------------------|--------------------------------|--|----------------------------------|--|--|---|--------|
| Q-Pulse Id TMS473 | DRAFTED E.PARANAGAMA 04.10 | * A.CHAVEZ-PLASENCIA DESIGN | R.P.E.Q. No. DATE | * K.VAHEESAN PRINCIPAL DESIGN MANAGER | 7/5/10 DATE | SITE P0404 ROYSTON ST, BROOKFIELD PRESSURE GAUGE ELECTRICAL INSTALLATION | TITLE POWER DISTRIBUTION SCHEMATIC DIAGRAM | SHEET No. Queensland Urban Utilities DRAWING No. | AMEND. |
| A 06.10 | MINOR REVISIONS - FOR CONSTRUCTION | DPM GA | DRAFTING CHECK P.MOSTERT 04.10 | * A.WITTHOFT DESIGN CHECK | 8895 5/5/10 R.P.E.Q. No. DATE | * P.SHERRIFF CLIENT DELEGATE | 5/5/10 DATE | 486/4/9-0788-002 | A |
| O 04-10 | FOR CONSTRUCTION | E.P. AW | CAD FILE 49-0770SetIO.dwg | | | | | | |
| No. DATE | AMENDMENT | DRN. APD. | B.C.C. FILE No. | | | | | | |

Active 02/12/2013

Q:\194 WATER SUPPLY\268 Drafting\248 Plans\Electrical\3. WATER NETWORKS\4. Gauges-Meters\P0404 Royston St Brookfield\49-0770SetIO.dwg Last Saved by 088901 on Wednesday, 14 July 2010 10:28:52 AM

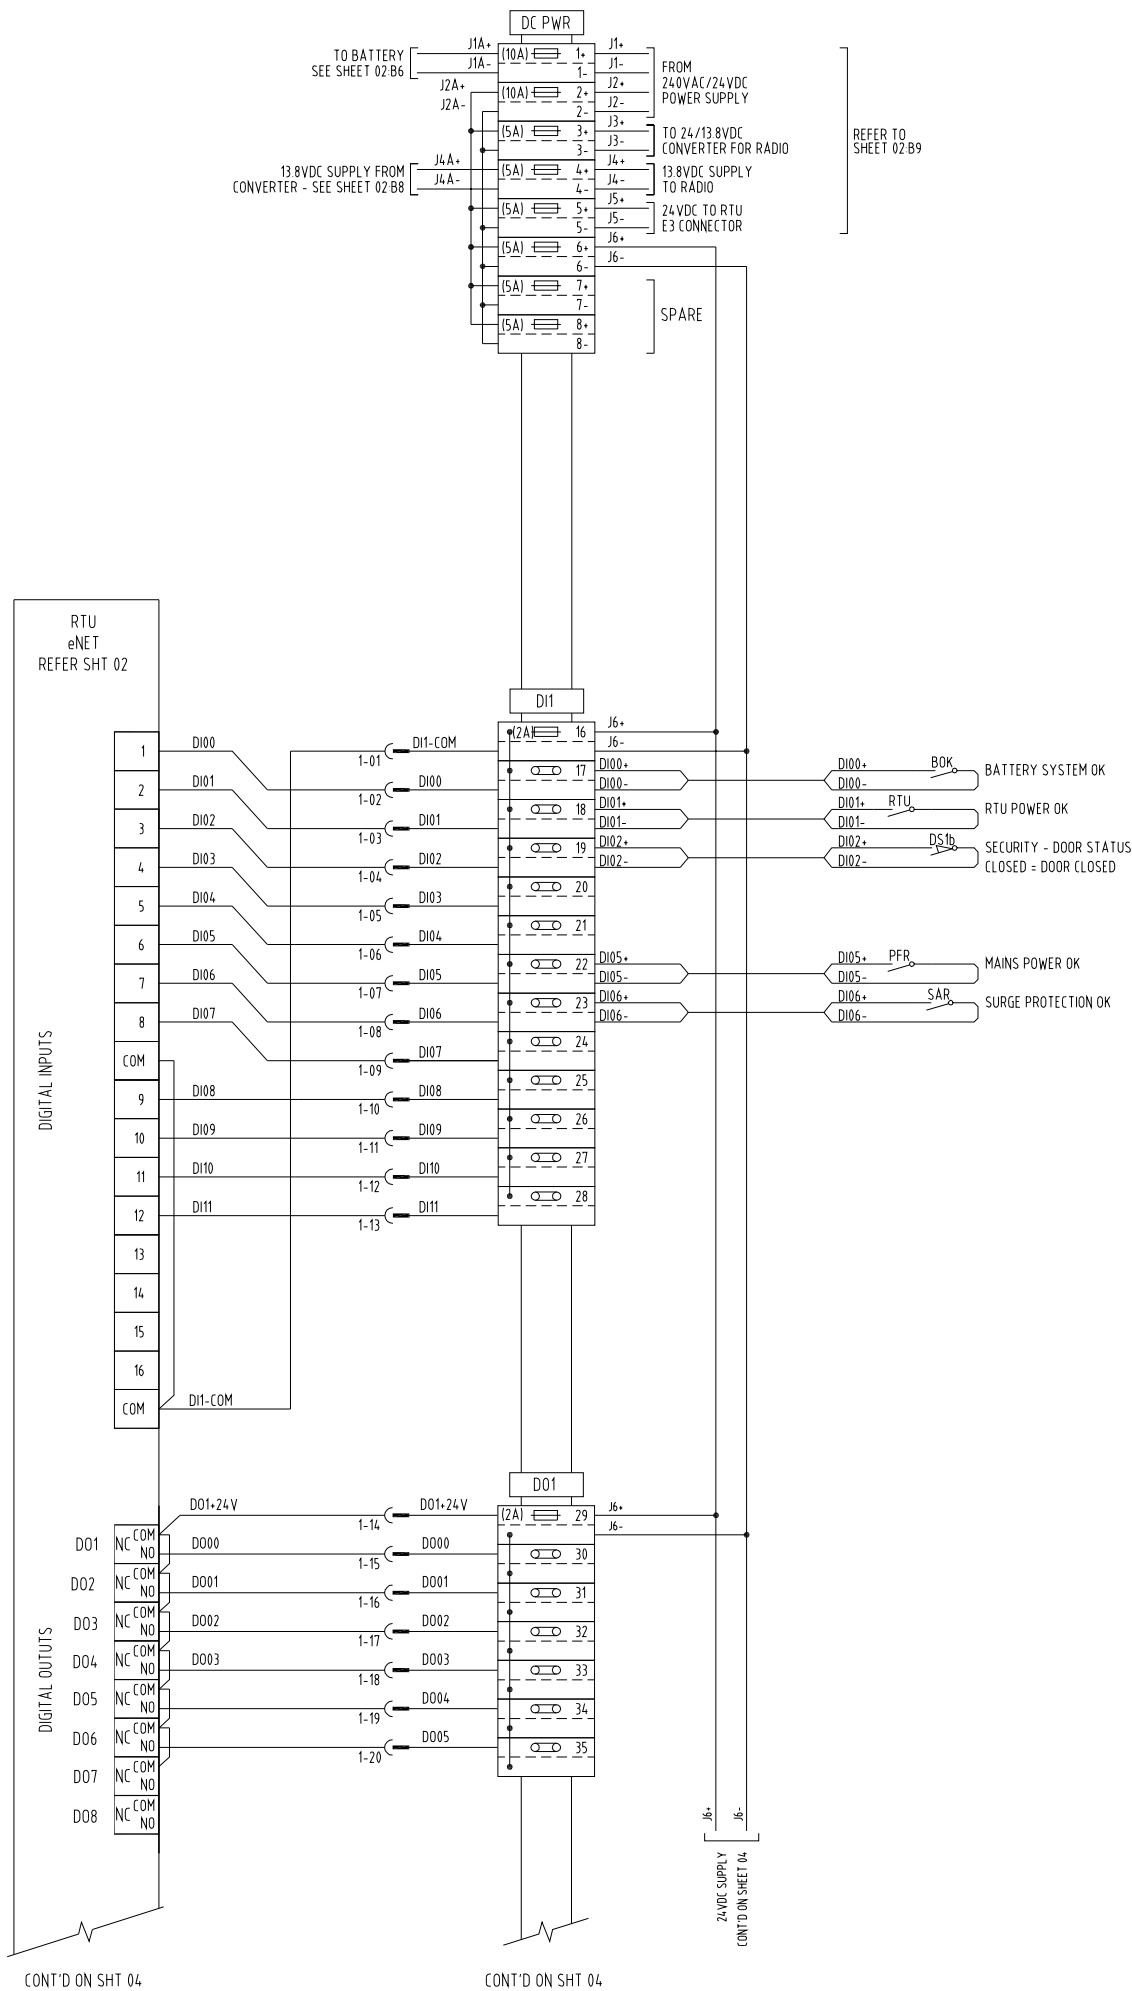

NOTES

1 ALL FUSES ARE 500mA EXCEPT WHERE NOTED OTHERWISE.

ELECTRICAL AS BUILT DETAILS

| | | | | |
|-----|-------------|---|------|---|
| REV | COMPANY | - | DATE | - |
| - | ELECTRICIAN | - | - | - |
| - | LICENCE No. | - | - | - |

SHEET 03

FOR CONSTRUCTION


| | | | | | | | | | | | | | | | |
|-------------------|--|--|--|---------------------|--|--|--|-----------------------|--|--|--|--------------------------|--|--|--|
| DRAFTED | | | | E. PARANAGAMA 04.10 | | | | * A. CHAVEZ-PLASENCIA | | | | 7/5/10 | | | |
| DRAFTING CHECK | | | | P. MOSTERT 04.10 | | | | DESIGN | | | | PRINCIPAL DESIGN MANAGER | | | |
| O 04-10 | | | | FOR CONSTRUCTION | | | | E.P. AW | | | | CAD FILE | | | |
| No. DATE | | | | AMENDMENT | | | | DRN. APD. | | | | B.C.C. FILE No. | | | |
| Q-Pulse Id TMS473 | | | | | | | | | | | | | | | |



SITE
P0404
ROYSTON ST, BROOKFIELD
PRESSURE GAUGE
ELECTRICAL INSTALLATION

TITLE
DIGITAL INPUTS AND OUTPUTS
TERMINATION DIAGRAM

| | | | |
|--|--|--------|--|
| SHEET No. | | AMEND. | |
| Queensland Urban Utilities DRAWING No. | | | |
| 486/4/9-0788-003 | | O | |

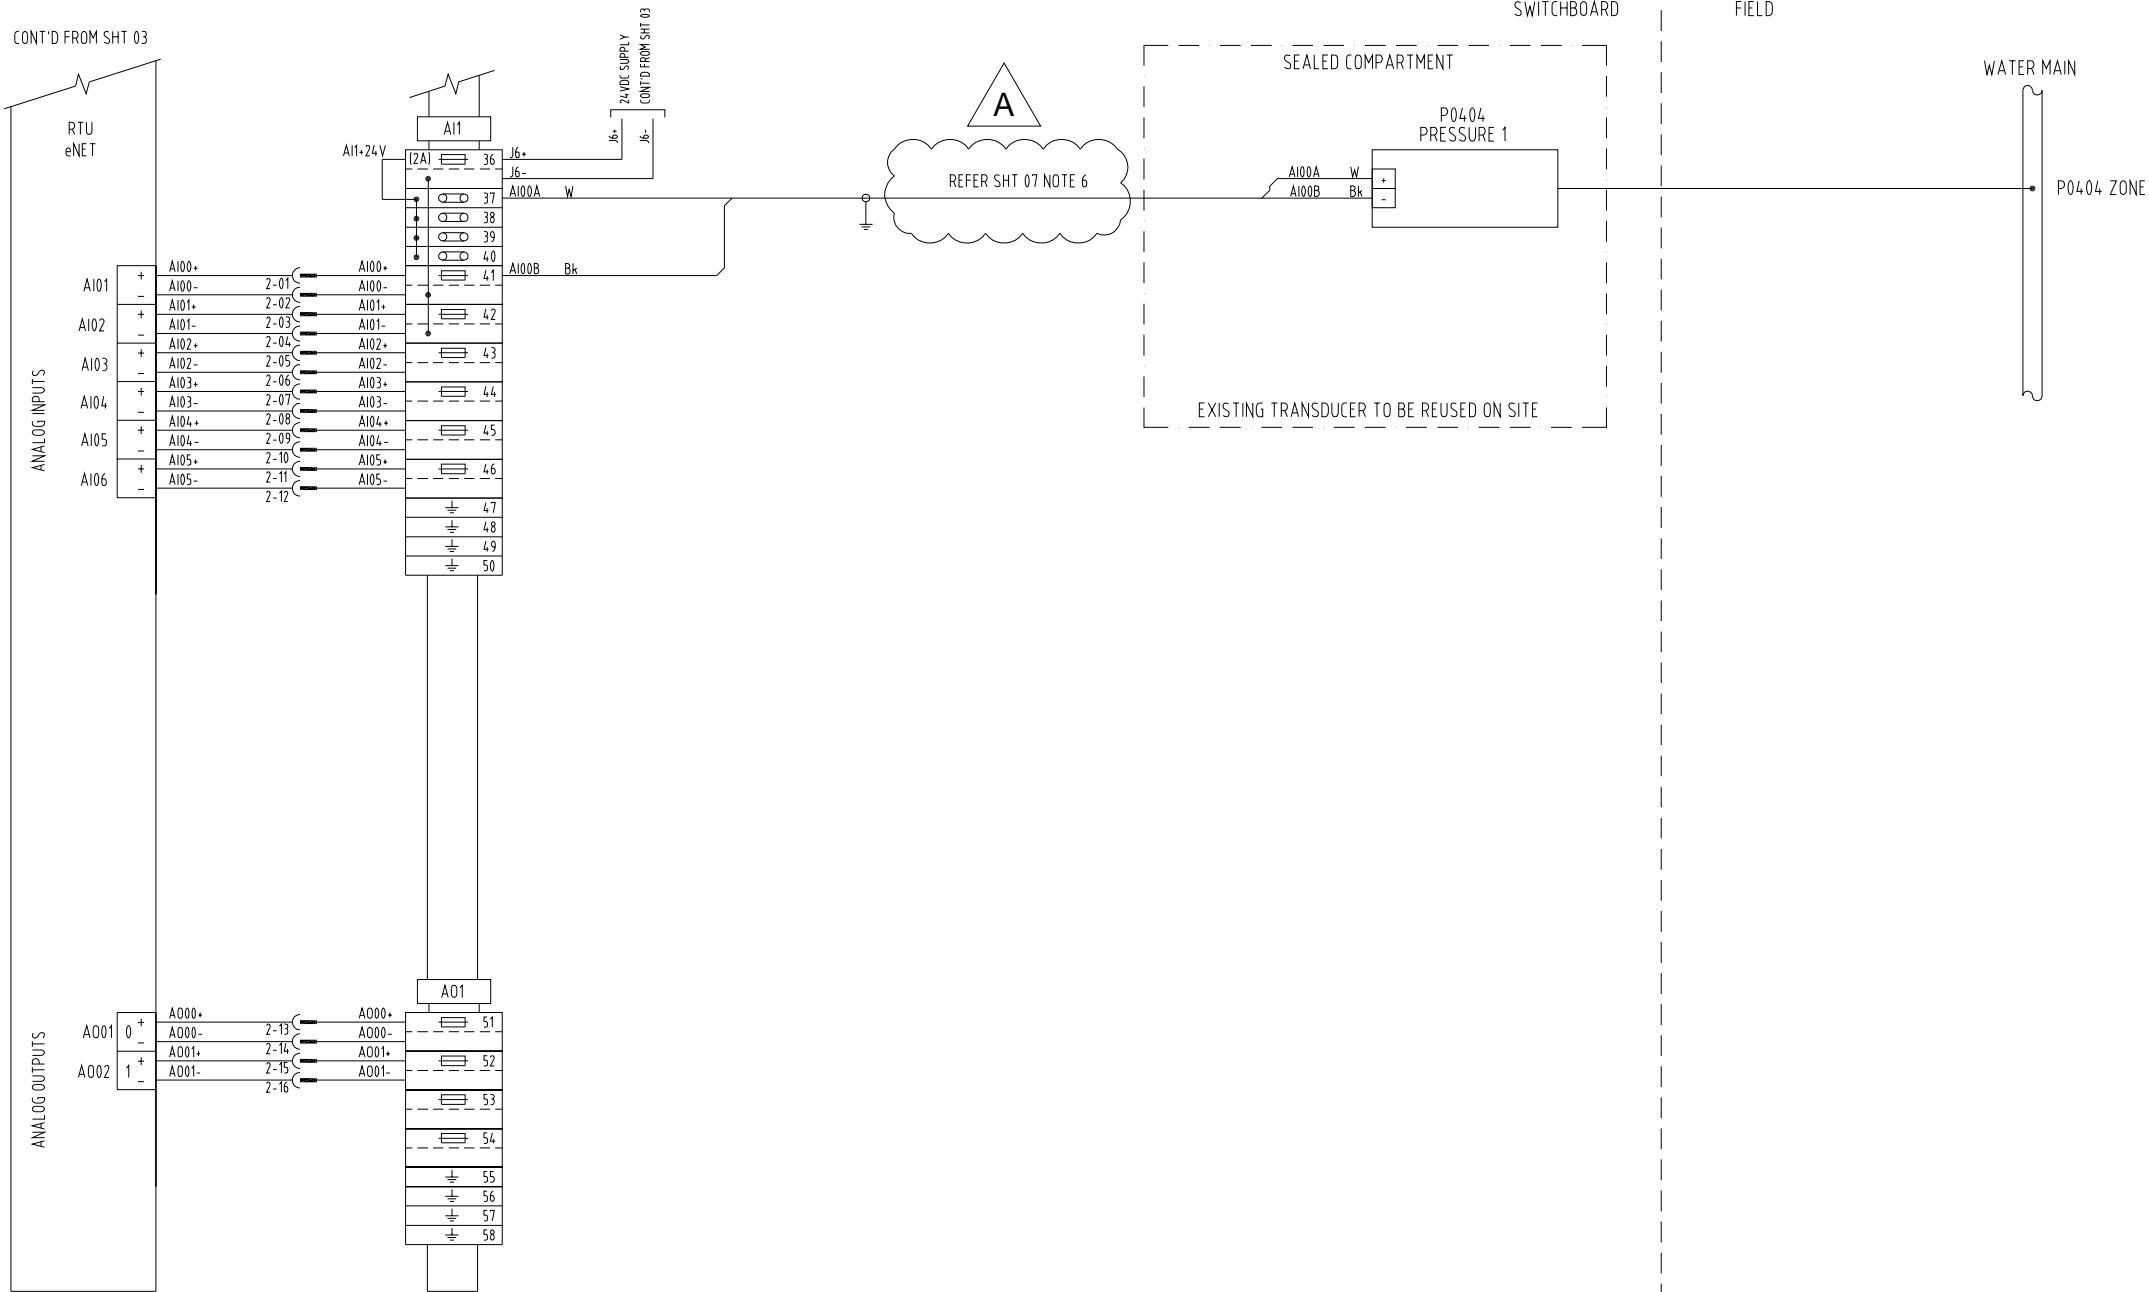

NOTES

1. ALL FUSES ARE 500mA EXCEPT WHERE NOTED OTHERWISE

| ELECTRICAL AS BUILT DETAILS | | | |
|-----------------------------|-------------|---|---------|
| REV | COMPANY | - | |
| - | ELECTRICIAN | - | |
| | LICENCE No. | - | DATE: - |

SHEET 04

FOR CONSTRUCTION

| | | | | | |
|-----|-------|------------------------------------|------|------|--------------------------------|
| No. | DATE | AMENDMENT | DRN. | APD. | B.C.C. FILE No. |
| A | 06/10 | MINOR REVISIONS - FOR CONSTRUCTION | DPM | GA | DRAFTING CHECK P.MOSTERT 04.10 |
| O | 04-10 | FOR CONSTRUCTION | E.P. | AW | CAD FILE 49-0770SetO.dwg |

| | | | | |
|--------------|--------------|------|----------------------|--------|
| DESIGN | R.P.E.Q. No. | DATE | * A.CHAVEZ-PLASENCIA | 7/5/10 |
| DESIGN CHECK | R.P.E.Q. No. | DATE | * A.WITTHOFT | 5/5/10 |


| | | | |
|--------------------------|------|--------------|--------|
| PRINCIPAL DESIGN MANAGER | DATE | * K.VAHEESAN | 7/5/10 |
| CLIENT DELEGATE | DATE | * P.SHERRIFF | 5/5/10 |



| | |
|-------------------------|-------|
| SITE | P0404 |
| ROYSTON ST, BROOKFIELD | |
| PRESSURE GAUGE | |
| ELECTRICAL INSTALLATION | |

| | |
|-------|---|
| TITLE | ANALOG INPUTS AND OUTPUTS TERMINATION DIAGRAM |
|-------|---|



| | | | |
|----------------------------|------------------|--------|---|
| SHEET No. | 486/4/9-0788-004 | AMEND. | A |
| Queensland Urban Utilities | DRAWING No. | | |

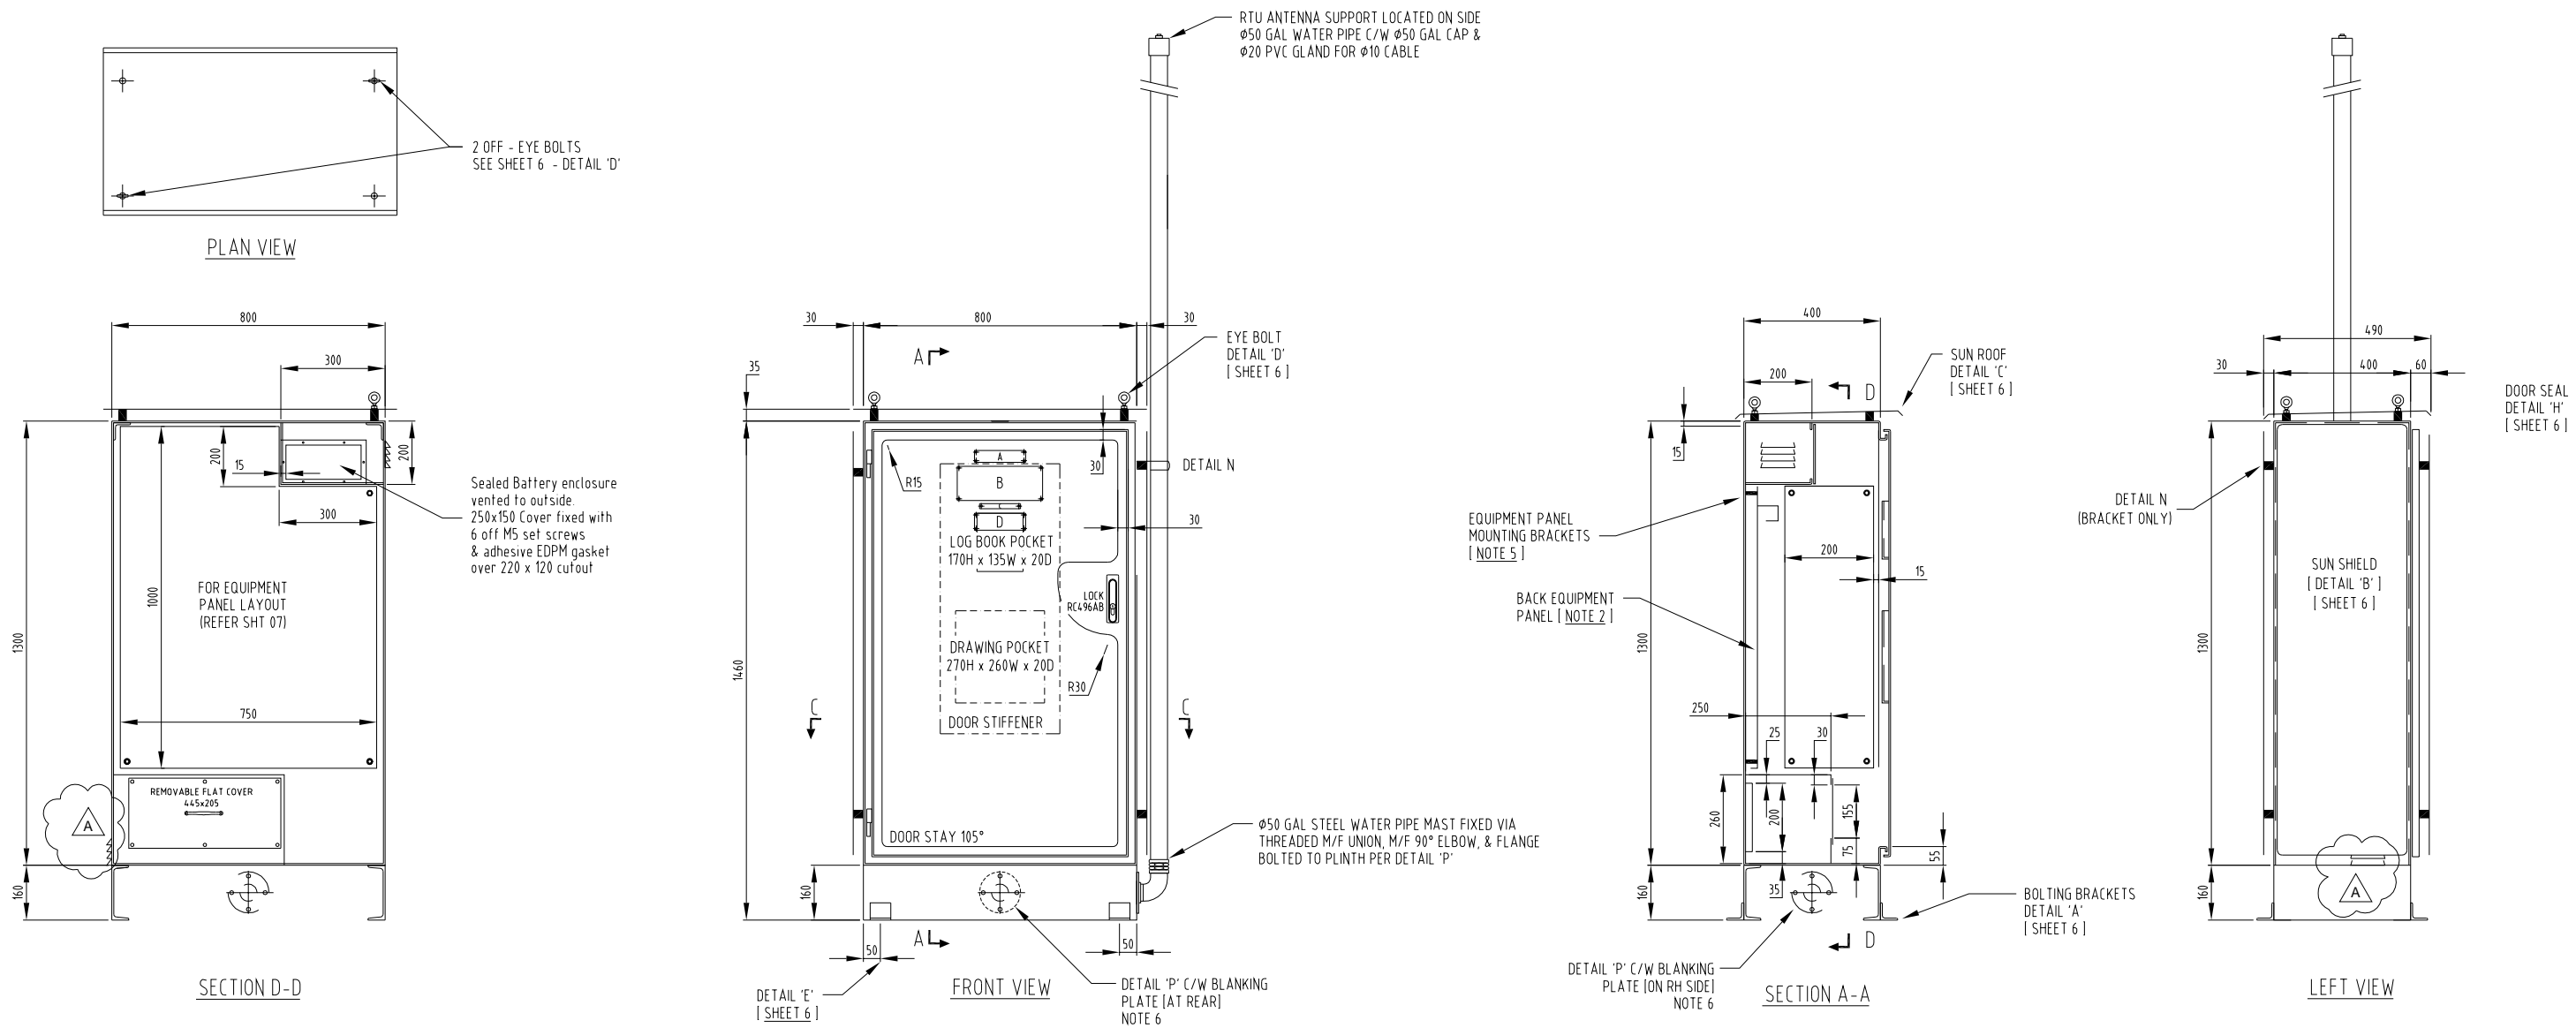

GENERAL ARRANGEMENT


SCALE: 1/10 ON A1 SIZE PRINT

- NOTES:
- 1. REFER TO SHEET 06 FOR THE SWITCHBOARD CONSTRUCTION DETAILS.
 - 2. SIDE & BACK EQUIPMENT PANELS TO BE MOUNTED 40mm OFF THE SIDE & BACK WALLS AND OPEN AT BOTH THE TOP AND BOTTOM TO ALLOW FOR AIR FLOW.
 - 3. REFER TO SHEET 07 FOR THE EQUIPMENT PANEL LAYOUT DETAIL AND EQUIPMENT SCHEDULE.
 - 4. BACK & SIDE GEAR MOUNTING BRACKETS [6 OFF TOTAL] [25 X 25 X 3 (TYP.)]
 - 5. THIS DRAWING TO BE READ IN CONJUNCTION WITH SHEET 06, FOLLOWING
 - 6. ANTENNA FLANGE MOUNTING DETAILS - WHERE NO ANTENNA IS TO BE INSTALLED, PROVIDE Ø120 BLANKING PLATES WITH GASKETS, TO COVER SIDE AND REAR ANTENNA FLANGE DRILLING POSITIONS.

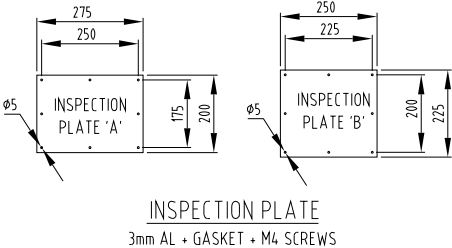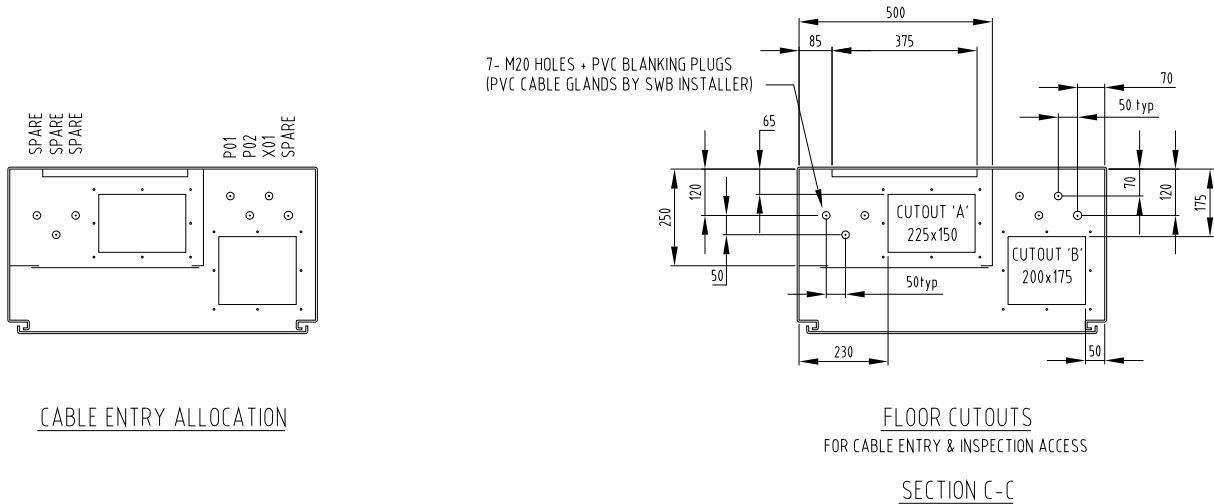


| ELECTRICAL AS BUILT DETAILS | | | |
|-----------------------------|-------------|------|---------|
| REV | COMPANY | DATE | |
| - | ELECTRICIAN | | |
| - | LICENCE No. | | DATE: - |

SHEET 05
FOR CONSTRUCTION

| | | | | | | | | | | | | | | | | | | | | | |
|----|-------|------------------------------------|--|---------|------|--------------------|--|----------------------|-------|--------------|--|--------------|--------|---|--|---|--------------------------|--|--------|--|--------|
| | | | | DRAFTED | | E.PARANAGAMA 04.10 | | * A.CHAVEZ-PLASENCIA | | | | 7/5/10 | |  | SITE P0404 ROYSTON ST, BROOKFIELD PRESSURE GAUGE ELECTRICAL INSTALLATION | TITLE SWITCHBOARD GENERAL ARRANGEMENT | SHEET No. | | | | |
| A | 07-10 | MINOR REVISIONS - FOR CONSTRUCTION | | AP | GA | DRAFTING CHECK | | P.MOSTERT | 04.10 | DESIGN | | R.P.E.Q. No. | DATE | | | | PRINCIPAL DESIGN MANAGER | | DATE | Queensland Urban Utilities DRAWING No. | AMEND. |
| O | 04-10 | FOR CONSTRUCTION | | E.P. | AW | CAD FILE | | 49-0770SetO.dwg | | * A.WITTHOFT | | 8895 | 5/5/10 | | | | * P.SHERRIFF | | 5/5/10 | 486/4/9-0788-005 | A |
| No | DATE | AMENDMENT | | DRN. | APD. | B.C.C. FILE No. | | | | DESIGN CHECK | | R.P.E.Q. No. | DATE | | | | CLIENT DELEGATE | | DATE | | |

EQUIPMENT LIST

| REF | QTY | DESCRIPTION | MANUFACTURER | CATALOGUE No | REMARKS |
|-----|-----|--|-----------------------|-----------------------|---|
| 01 | 1 | Q1 - MAIN CIRCUIT BREAKER | TERASAKI | DTCB10_16 | 10kA |
| 02 | 5 | POLE FILLER | TERASAKI | DT POLE FILLER | |
| 03 | 2 | IP30 8 POLE COVER | TERASAKI | DTPC8 | |
| 04 | 1 | SD1 - SURGE DIVERTER | NHP | TITIAN DR1P45K230DC | 45KA MAX |
| 05 | 1 | Q2 - GPO CIRCUIT BREAKER | TERASAKI | DTCB10_02 | |
| 06 | 1 | GPO - COMPUTER OUTLET 30mA RCD | CLIPSAL | 2A CB + RCD | |
| 07 | 1 | Q3 - SURGE FILTER CIRCUIT BREAKER | TERASAKI | DTCB10_06 | |
| 08 | 1 | SF1 - SURGE FILTER | CRITEC | DSF-6A-275 | |
| 09 | 1 | Q4 - PWR SUPPLY CIRCUIT BREAKER | TERASAKI | DTCB10_04 | |
| 10 | 1 | Q5 - SURGE ALARM RLY CIRCUIT BREAKER | TERASAKI | DTCB10_02 | |
| 11 | 1 | SAR- SURGE PROTN ALARM RLY | CRITEC | DAR-275V | |
| 12 | 1 | Q6 - POWER FAILURE RLY CIRCUIT BREAKER | TERASAKI | DTCB10_02 | |
| 13 | 1 | PFR - POWER FAILURE RELAY | FINDER | 38.51240VAC | |
| 14 | 2 | NEUTRAL LINK | CLIPSAL | LA6 | |
| 15 | 1 | EARTH LINK | CLIPSAL | BP165D18 | |
| 16 | | | | | |
| 17 | | | | | |
| 18 | | | | | |
| 19 | 2 | SW/BD DOOR MICRO SWITCHES | CAMSCO | SM202 | 1 OFF N/O 1 OFF N/C |
| 20 | 1 | SW/BD 8W INTERNAL FLUORO LIGHTS | THORN | BB0108 | |
| 21 | 1 | CORROSION INHIBITOR | CORTEC | VPCI-110 OR 111 | FROM AP CONTROLS |
| 22 | 1 | RTU | SERCK | eNET -5XEW-EI | eNET RTU WITH 1/2 I.O., 10-30V INPUT. |
| 23 | 2 | DISCONNECT PLUGS | PHOENIX CONTACT | MSTB 2,5/20-ST-5 08 | |
| 24 | 2 | DISCONNECT BLOCKS | PHOENIX CONTACT | UMSTBVK2,5/20-G-5 08 | |
| 25 | 2 | CABLE HOUSING | PHOENIX CONTACT | KGS-MSTB2 5/20 | |
| 26 | 1 | CODING PINS | PHOENIX CONTACT | CP-MSTB + CR-MSTB | |
| 27 | Lot | FUSED TERMINALS with LED 24V INDICATION | PHOENIX CONTACT | UT4-HESI LED24 (5x20) | |
| 28 | Lot | FUSE CARTRIDGES | PHOENIX CONTACT | M205 | RATINGS AS REQUIRED |
| 29 | Lot | DISCONNECT TERMINALS | PHOENIX CONTACT | UT4-MT P/P | |
| 30 | Lot | TERMINALS | PHOENIX CONTACT | UT4-? | |
| 31 | 8 | EARTH TERMINALS | PHOENIX CONTACT | UT4-MTD-PE/S | |
| 32 | 6 | GROUP MARKER CARRIER | PHOENIX CONTACT | UBE | |
| 33 | 2 | TEST PLUG ADAPTOR | PHOENIX CONTACT | PS-6 | |
| 34 | 1 | SCREW DRIVER | PHOENIX CONTACT | SZS 0.6 x 3.5 | |
| 35 | Lot | PLUG-IN BRIDGE | PHOENIX CONTACT | FBS | AS REQUIRED |
| 36 | | | | | |
| 37 | 2 | PRESSURE TRANSDUCER | EXISTING | EXISTING | INSTALLER TO REUSE EXISTING |
| 38 | | | | | |
| 39 | 2 | 12V 6.5Ah SEALED LEAD ACID BATTERY | YUASA | NP7-12 | |
| 40 | | | | | |
| 41 | 1 | PS1 - RTU 24VDC POWER SUPPLY | POWERBOX | PB251-24CM-CC-T | |
| 42 | | | | | |
| 43 | | | | | |
| 44 | | | | | |
| 45 | | | | | |
| 46 | | | | | |
| 47 | 1 | 24V/13.8V DC CONVERTER | POWERBOX | PB1H-2412G | |
| 48 | 1 | RADIO | TRIO | DR900-07A02-D0 | FREE ISSUE |
| 49 | 1 | SD2 - RADIO COAX SURGE PROTECTOR | POLYPHASE CORPORATION | IS-50NX-C2 | |
| 50 | 1 | ANTENNA MAST | SWBD MANUFACTURER | | 4.0 METRES |
| 51 | 1 | ANTENNA | TRIO | ANT13AL | SUPPLIED LOOSE BY SWBD MFR & FITTED ON SITE |
| 52 | 1 | INTERNAL COAX CABLE (Radio to Lightning Arrester) | TRIO | TRIO - SMAM/NM/TL23 | Cable No X01 |
| 53 | 1 | EXTERNAL COAX CABLE (Lightning Arrester to Aerial) | R.F. INDUSTRIES | ANDREW - CNT400 | Cable No X02 |
| 54 | 1 | COAX PLUG | R.F. INDUSTRIES | SMA | SUPPLIED LOOSE BY SWBD MFR & FITTED ON SITE |
| 55 | 1 | COAX PLUG | R.F. INDUSTRIES | N88 (MALE) | SUPPLIED LOOSE BY SWBD MFR & FITTED ON SITE |
| 56 | 2 | COAX PLUG (For CNT400 cable) | PULSE | N-203HS | Straight plug crimp (Cable No X02) |
| 57 | 1 | 'U' CLAMP | R.F. INDUSTRIES | UNV | SUPPLIED LOOSE BY SWBD MFR & FITTED ON SITE |
| 58 | | | | | |
| 59 | | | | | |
| 60 | | | | | |
| 61 | | | | | |
| 62 | | | | | |

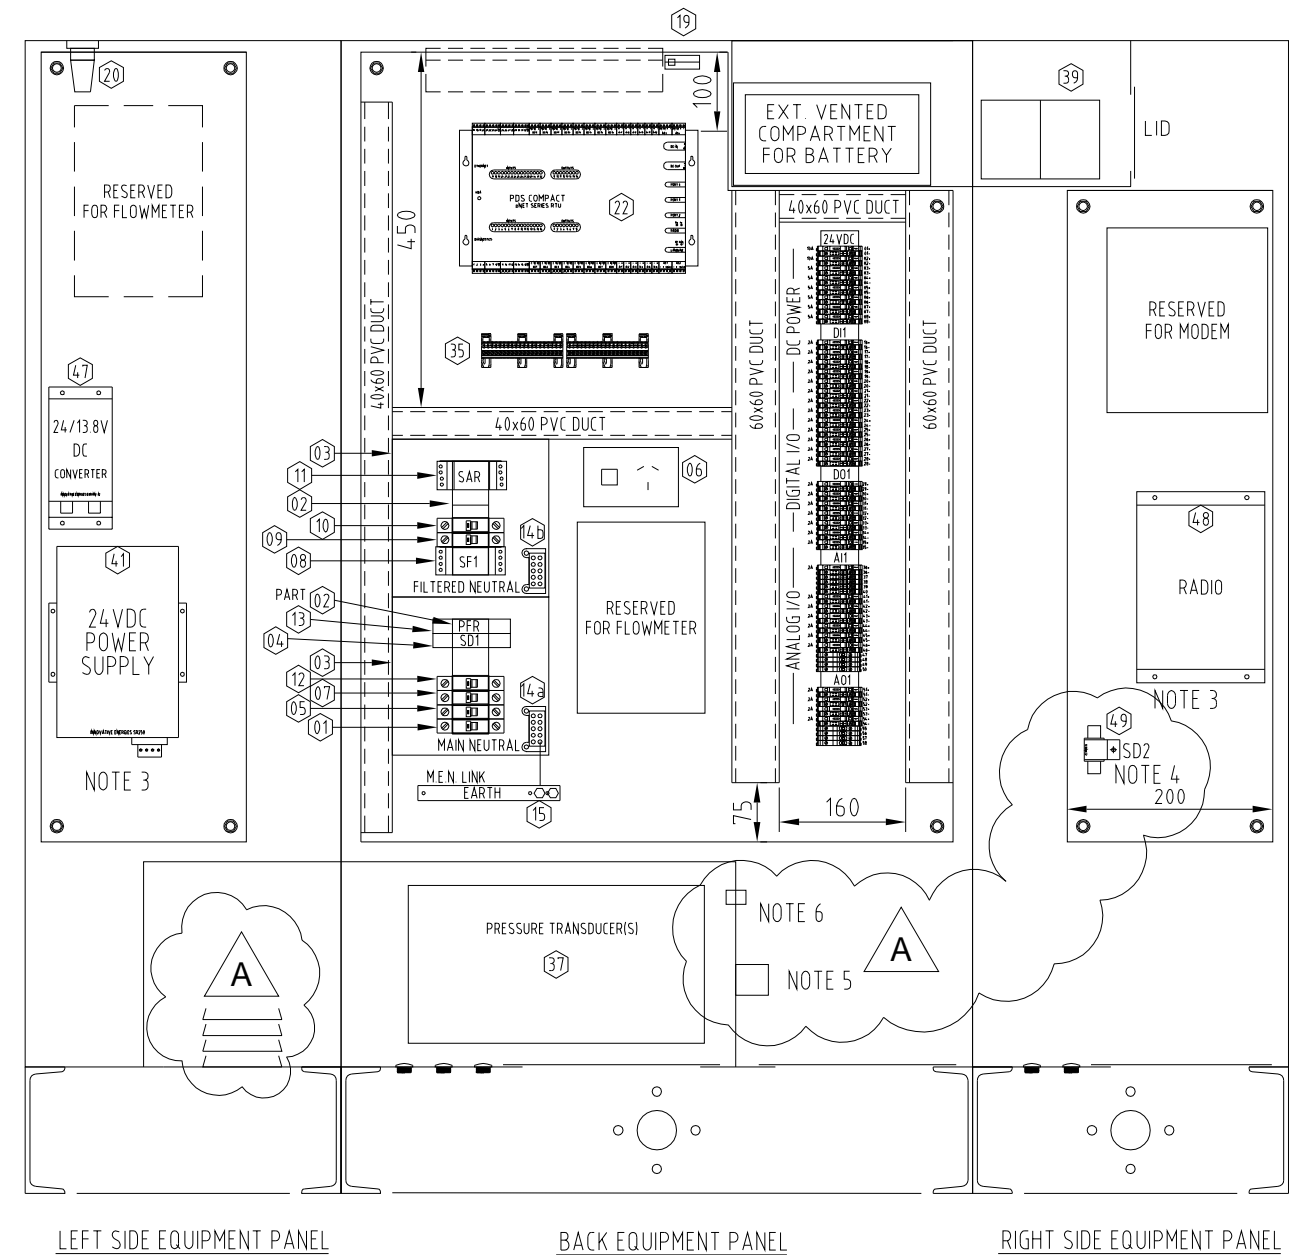

NOTES:

1. LABELS FITTED ADJACENT ASSOCIATED EQUIPMENT
2. LABELS OBSTRUCTED BY SWITCHBOARD WIRING ARE RELOCATED TO ADJACENT DUCT LID
DUCT LIDS LOCATED BY SINGLE CABLE TIE AT ONE CORNER
3. INDICATING LIGHTS ON THE 24V DC POWER SUPPLY AND THE RADIO MUST FACE UPWARDS.

4. USE STAR WASHER BETWEEN SD2 & PANEL TO FIX SD2 IN POSITION, OR USE DIN RAIL FOR MOUNTING SD2.
5. INCOMING IP30 240V TERMINALS WIRED TO Q1 & NEUTRAL BAR IN FACTORY.
6. FACTORY PREWIRE PRESSURE Tx SIGNAL CABLE THRU PVC GLAND TO MARSHALLING TERMINALS.

ELECTRICAL AS BUILT DETAILS

| REV | COMPANY | ELECTRICIAN | LICENCE No. | DATE |
|-----|---------|-------------|-------------|------|
| - | - | - | - | - |

SHEET 07

FOR CONSTRUCTION

| | | | | | | | | | | | |
|-------|------------------------------------|-----------|------|----------------|-----------------|-------|--------------|--------------|--------|-----------------|--------|
| 06.10 | MINOR REVISIONS - FOR CONSTRUCTION | DPM | GA | DRAFTING CHECK | P.MOSTERT | 04.10 | DESIGN | R.P.E.Q. No. | DATE | K.VAHEESAN | 7/5/10 |
| 04.10 | FOR CONSTRUCTION | E.P. | AW | CAD FILE | 49-0770SetO.dwg | | A.WITTHOFT | 8895 | 5/5/10 | P.SHERRIFF | 5/5/10 |
| No. | DATE | AMENDMENT | DRN. | APD. | B.C.C. FILE No. | | DESIGN CHECK | R.P.E.Q. No. | DATE | CLIENT DELEGATE | DATE |

Q-Pulse Id TMS473

Active 02/12/2013



SITE
P0404
ROYSTON ST, BROOKFIELD
PRESSURE GAUGE
ELECTRICAL INSTALLATION

TITLE
SWITCHBOARD
EQUIPMENT LIST

SHEET No.
Queensland Urban Utilities DRAWING No.
486/4/9-0788-007
AMEND.
A

Q:\194 WATER SUPPLY\2008 Drafting\2448 Plans\Electrical\3. WATER NETWORKS\4. Gauges-Meters\P0404 Royston St Brookfield\49-0770SetA.dwg Last Saved by 088901 on Wednesday, 24 July 2010 10:28:22 AM

CABLE SCHEDULE

[illegible]

NOTES

1. REUSE THE EXISTING INCOMING MAINS CABLE,
EXTENDING AS NECESSARY TO TERMINATE IN NEW MAIN CB.

EQUIPMENT LABEL LIST

| REF | TEXT HEIGHT mm / MATERIAL | TEXT LINE 1 / TEXT LINE 2 |
|-----|-----------------------------|---------------------------|
| 01 | 10mm / 4mm / WBW TRAFFOLYTE | MAIN SWITCH / Q1 - 16A |
| 04 | 4mm / WBW TRAFFOLYTE | SD1 - SURGE DIVERTER |
| 05 | 4mm / WBW TRAFFOLYTE | Q2 - LAPTOP GPO - 2A |
| 06 | 4mm / WBW TRAFFOLYTE | 2Amp LAPTOP ONLY |
| 07 | 4mm / WBW TRAFFOLYTE | Q3 - SURGE FILTER - 6A |
| 08 | 4mm / WBW TRAFFOLYTE | SF1 - SURGE FILTER |
| 09 | 4mm / WBW TRAFFOLYTE | Q4 - 24V PWR SUPPLY - 4A |
| 10 | 4mm / WBW TRAFFOLYTE | Q5 - SURGE ALMRLY - 2A |
| 11 | 4mm / WBW TRAFFOLYTE | SAR - SURGE ALMRLY |
| 12 | 4mm / WBW TRAFFOLYTE | Q6 - POWER FAIL RLY - 2A |
| 13 | 4mm / WBW TRAFFOLYTE | PFR - POWER FAIL RLY |
| 14 | 4mm / WBW TRAFFOLYTE | NEUTRAL |
| 15 | 4mm / WBW TRAFFOLYTE | EARTH |
| 18 | | |
| 19 | 4mm / WBW TRAFFOLYTE | PS1 - 24VDC10A PWR SUPPLY |
| 20 | 4mm / WBW TRAFFOLYTE | 24/13.8VDC CONVERTER |
| 21 | 4mm / WBW TRAFFOLYTE | BATTERY COMPARTMENT |
| 22 | 4mm / WBW TRAFFOLYTE | RTU |
| 24 | | |
| 25 | | |
| 28 | | |
| 29 | | |
| 45 | | |
| | | |

EQUIPMENT LABEL LIST

[illegible]

EXTERNAL LABELS

| LABEL | TEXT | TEXT HEIGHT | PAINT FILL LETTERING | DIMENSIONS | QTY |
|---|--|----------------|-------------------------|------------|-----|
| A | P0404 | 20mm | BLACK | 150X35 | 1 |
| B | <p style="text-align: center;"><u>WARNING</u></p> <p style="text-align: center;">THIS SITE IS MONITORED BY THE CONTROL ROOM OPERATOR PLEASE INFORM THE OPERATOR BEFORE ISOLATING STATION</p> | 8mm | BLACK | 250X100 | 1 |
| C | DANGER 240V | 8mm | RED | 120X15 | 1 |
| D | <p>REMINDER:</p> <p>THIS IS AN UN-METERED SUPPLY AND ANY ALTERATIONS TO THESE CIRCUITS MUST BE NOTIFIED TO SUPPLY AUTHORITY BILLING DEPARTMENT.</p> | 3mm | BLACK | TO SUIT | 1 |
| EXTERNAL LABELS 1mm THK. 316 GRADE STAINLESS STEEL. FIXED WITH M3 316 STAINLESS STEEL METAL THREADS. | | | | | |

| ELECTRICAL AS BUILT DETAILS | |
|-----------------------------|-----------------------|
| REV | COMPANY - |
| - | ELECTRICIAN - |
| | LICENCE No. - DATE: - |

SHEET 08

FOR CONSTRUCTION

| | | |
|--|-------|--|
| SHEET No. | | |
| Queensland Urban Utilities DRAWING No. | AMEND | |
| 486/4/9-0788-008 | A | |



| | | | | | | | | | |
|-----|-------|------------------------------------|------|------|-----------------|--------------------|--------------------------------|--------------------------|--------|
| | | | | | DRAFTED | E.PARANAGAMA 04.10 | * A.CHAVEZ-PLASENCIA | * K.VAHEESAN | 7/5/10 |
| A | 06.10 | MINOR REVISIONS - FOR CONSTRUCTION | DPM | GA | DRAFTING CHECK | P.MOSTERT 04.10 | DESIGN R.P.E.Q. No. DATE | PRINCIPAL DESIGN MANAGER | DATE |
| O | 04-10 | FOR CONSTRUCTION | E.P. | AW | CAD FILE | 49-0770SetO.dwg | * A.WITTHOFT 8895 5/5/10 | * P.SHERRIFF | 5/5/10 |
| No. | DATE | AMENDMENT | DRN. | APD. | B.C.C. FILE No. | . | DESIGN CHECK R.P.E.Q. No. DATE | CLIENT DELEGATE | DATE |




SITE
P0404
ROYSTON ST, BROOKFIELD
PRESSURE GAUGE
ELECTRICAL INSTALLATION

TITLE
SWITCHBOARD
CABLE & LABEL SCHEDULE

| | | |
|----------------------------|-------------|--------|
| SHEET No. | | |
| Queensland Urban Utilities | DRAWING No. | AMEND. |
| 486/4/9-0788-008 | | A |

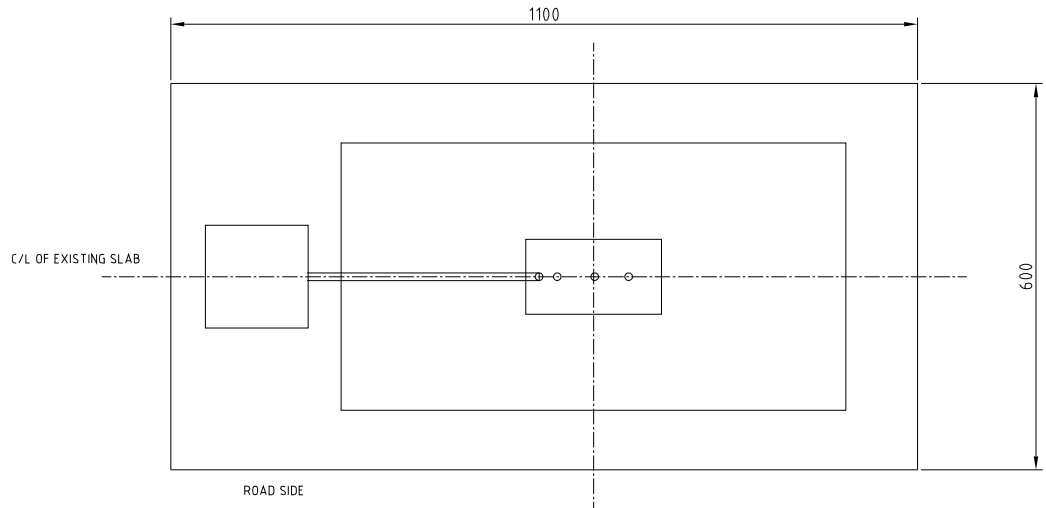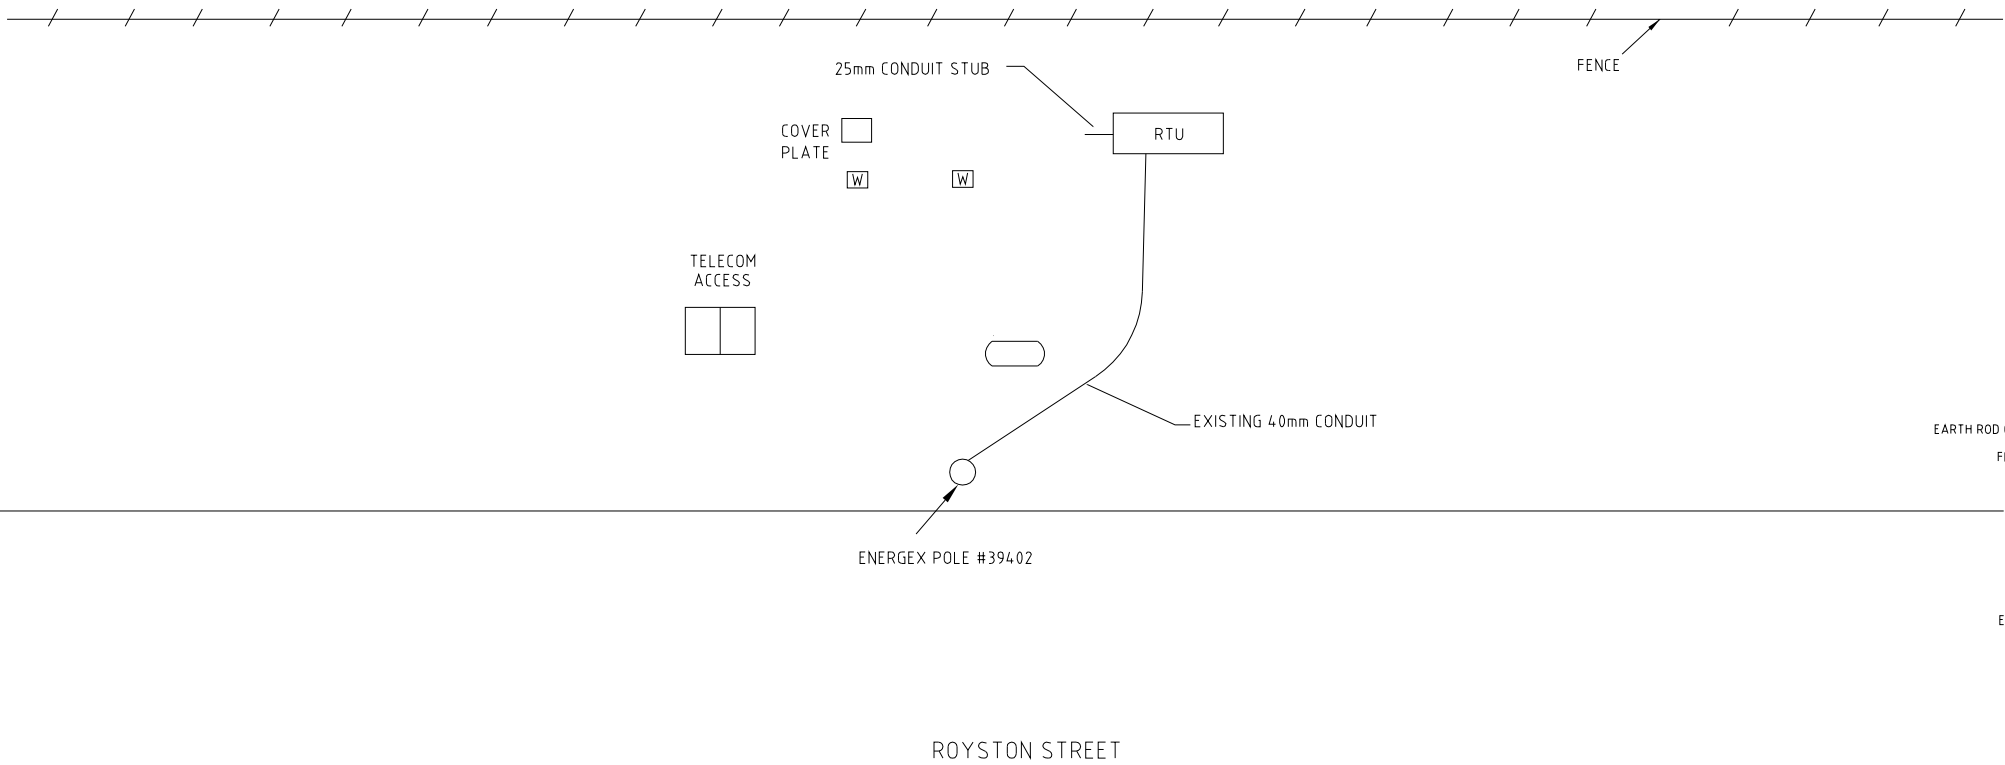


PLAN VIEW

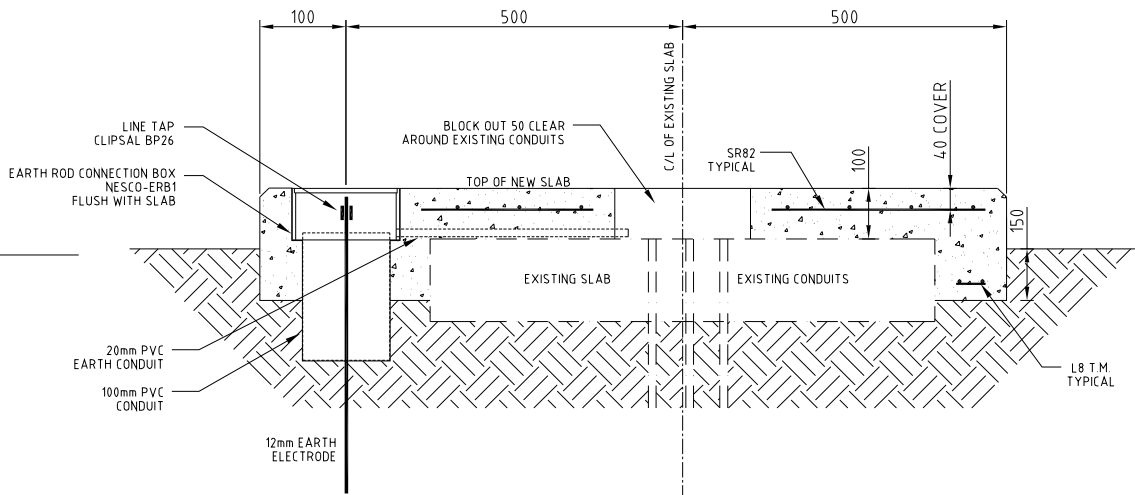

SECTION VIEW

SWITCHBOARD SLAB
DETAIL 1

CONSTRUCTION NOTE
1. NEW CONCRETE SLAB PLACED AROUND AND OVER EXISTING SLAB FOR THE NEW SWITCHBOARD SEE SHEET 05 FOR SWITCHBOARD DIMENSIONS
2. FINAL DIMENSION DETAILS TO SUIT PARTICULAR SITE CONDITIONS ARE RESPONSIBILITY OF THE CONTRACTOR

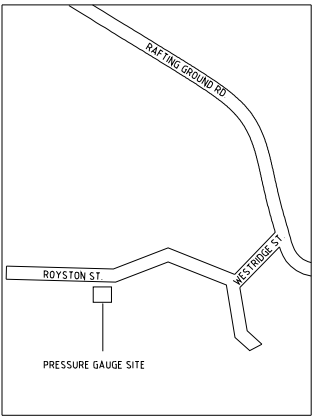

LOCALITY MAP

| ELECTRICAL AS BUILT DETAILS | | | |
|-----------------------------|-------------|---|---------|
| REV | COMPANY | - | |
| - | ELECTRICIAN | - | |
| - | LICENCE No. | - | DATE: - |

SHEET 09

FOR CONSTRUCTION

| | | | | | |
|-----|-------|---------------------|------|---------|--------------------|
| | | | | DRAFTED | E.PARANAGAMA 04.10 |
| A | 07-10 | AMMENDMENT TO NOTES | AP | GA | DRAFTING CHECK |
| O | 04-10 | FOR CONSTRUCTION | E.P. | AW | CAD FILE |
| No. | DATE | AMENDMENT | DRN. | APD. | B.C.C. FILE No. |

| | | | | | |
|--|--|--|--|--|--|
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

| | | | | | |
|--|--|--|--|--|--|
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |



SITE
P0404
ROYSTON ST, BROOKFIELD
PRESSURE GAUGE
ELECTRICAL INSTALLATION

TITLE
SWITCHBOARD
SITE LAYOUT

| | |
|--|--------|
| SHEET No. | AMEND. |
| Queensland Urban Utilities DRAWING No. | |
| 486/4/9-0788-009 | A |


4. INSPECTION & TEST RESULTS

TEST SHEET

CUSTOMER NAME: BRISBANE WATER
CUSTOMERS ADDRESS: ROYSTON STREET
SWITCHBOARD ID: P0404
DATE: 3-11-2000
JOB No.: GT 400106

[illegible]

TEST EQUIPMENT: KYORITSU MECCOR
SERIAL NO: S123060
TEST DUE DATE: 26-4-2010

NAME: ANDREW BURNER
LIC NO: 39850
SIGNATURE: 

| | | | |
|--|--|-------------------------------|--|
| Project: M/J/T/V Change PO404 Royston St | | SJ Electric Job No. 141430025 | |
| Contractor / Order No. | | Corresponding ITP No. 001 | |
| ITC No. 003 | | Date: 24/9/10 | |

| | |
|-------------------------------------|-------------------------------------|
| Built By: Renee Wardrop, David King | Test Equipment: Megger / Multimeter |
| Location Tested: Workshop | Type: Kyoritsu / Fluke |
| Drg rev No: | Serial No. 5149622 / 10620027 |

Check List (Tick () acceptable items only, note deviations under "REMARKS") (If not applicable mark as N/A)

| Switch Board and Control Panels Construction Check List | | | | |
|---|--|-------------|---------|--------------|
| Item | Activity Description | Hold Points | Checked | By (Initial) |
| Busbar | | | | |
| 1 | Correct size busbar to rated current load to meet AS 2067 | N/A | () | BS |
| 2 | Appearance is good i.e. Straight & level | | () | |
| 3 | Correct phase identification | | () | |
| 4 | Correct hole sizes for joins and terminations | | () | |
| 5 | All clearances have been met | | () | |
| 6 | Correct busbar support material has been used | | () | |
| 7 | Busbar supports are at the correct distances apart | | () | |
| 8 | Correct tensioning & blue spotted at all joins & terminations | | () | |
| 9 | Correct hole format in joining cubicle | | () | |
| 10 | Sufficient clearances for terminating cable | | () | |
| 11 | Heat shrink attached to flags for terminations | | () | |
| 12 | All joins are dressed flat | | () | |
| 13 | Busbar is insulated at supports | | () | |
| Cabling | | | | |
| 15 | Correct size for demand of circuit | | () | BS |
| 16 | Correct phase colouring | | () | |
| 17 | Correct termination & insulated | | () | |
| 18 | Correct numbering | | () | |
| 19 | Correctly formed and neat | | () | |
| 20 | Correctly supported | | () | |
| 21 | All cable entry holes are insulated | | () | |
| 22 | Check cable tray is mounted correctly & all sharp surfaces are removed | | () | |
| 23 | All cable ties are neatly trimmed | | () | |
| 24 | All cable clear from busbar's | N/A | () | |
| 25 | Check all analog inputs and outputs are shielded | | () | |
| 26 | All shielded cables have been earthed | | () | |

Remarks/Remedial Action Required Hold Points:

| | | |
|---|------------------------|---------------|
| Remedial Actions Completed <input type="checkbox"/> | Signature: | Date: |
| Approved By: Brendan Stringer | | |
| Signature: <i>BS</i> | Checked By: Ben George | |
| Electrical Licence No. 114766 | Signature: <i>BS</i> | Date: 24/9/10 |

All the above signatories certify that the Electrical switchboard work listed has been checked and tested in accordance with the prescribed procedure and that such work complies in every respect with the requirements of the Electricity Act, AS3000 2007 and AS3008.1.1 1998

Switchgear and Control Panels Inspection Form C1 1.1 (24/07/02)

| Item | Activity Description | Hold Points | Checked | By (Initial) |
|------|--|-------------|---------|--------------|
| 1 | Switchgear | | | |
| | Check all main switches & circuit breakers are the correct | | | |
| | • current rating | | (S) | |
| | • ka rating | | (S) | |
| | • trip settings | | (S) | |
| | • correct to cabling | | (S) | |
| | • to labels | | (S) | |
| | • shunt trips | | (S) | |
| | • inter locks | | (S) | |
| 2 | Check the fixings | | (S) | |
| 3 | Check the number of poles | | (S) | |
| 4 | Check correct operation | | (S) | |
| 5 | Correct mechanism | | (S) | |
| 6 | Control Switches | | | |
| | Check correct number of positions | NA | | PAG |
| 7 | Check correct size | | () | |
| 8 | Check correct to labels | | () | |
| 9 | Check mountings | | () | |
| 10 | Contactors | | | |
| | Check for correct model no | NA | | PAG |
| 11 | Check for correct current rating to control | | () | |
| 12 | Correct auxiliary contacts | | () | |
| 13 | Correct phasing | | () | |
| 14 | Correct coil size | | () | |
| 15 | Check that it is accessible | | () | |
| 16 | Check it has correct overloads | | () | |
| 17 | Correct labelling | | () | |
| 18 | Relays and Timers | | | |
| | Check correct rated voltage | | (S) | PAG |
| 19 | Correct contacts | | (S) | |
| 20 | Correct variances | | (S) | |
| 21 | Dip switches in required position | | (S) | |
| 22 | Timers set to correct settings | NA | () | |
| 23 | Correct operation | | (S) | |
| 24 | Correct auxiliaries | | (S) | |
| 25 | Transformers and Power Supplies | | | |
| | Check for correct voltage ratings | | | PAG |
| 26 | Check for correct current ratings | | (S) | |
| 27 | Check cabling is correct (no crossed voltage) | | (S) | |
| 28 | Check the secondary has been earthed when applicable | | (S) | |
| 29 | Check correct labelling | | (S) | |
| 30 | Check mountings | | (S) | |
| 31 | Check for clearance around for heat extraction | | (S) | |

Remarks/Remedial Action Required:

Remedial Actions Completed ☐ Signature: Date:

Approved By: Brendan Stringer

Signature:

Checked By: Ben George

Electrical Licence No. 114766

Signature:

Date: 24/9/10

All the above signatories certify that the Electrical switchboard work listed has been checked and tested in accordance with the prescribed procedure and that such work complies in every respect with the requirements of the Electricity Act 2002, AS3000 2007 and AS3008.1 1998

Inspection and Test Check List

Ref: SIQF 502
Date: 19 July 2007



| Switch Board and Control Panels (continued) Check List (SIQF 502) | | | | |
|---|---|---|---------|--------------|
| Item | Activity / Description | Test Points | Checked | By (Initial) |
| Fuses | | | | |
| 1 | Check that the cartridge is correct size | | (✓) | BS |
| 2 | Correct mountings | | (✓) | |
| 3 | Correct labelling | | (✓) | |
| 4 | Check that line side conductors are SDI and < 500mm | | () | |
| Current Transformers | | | | |
| 6 | Correct ratio & size | | () | BS |
| 7 | Correct direction of feed | | () | |
| 8 | Correct earthing | | () | |
| 9 | Correct cabling | | () | |
| Voltage / Current Monitoring Equipment | | | | |
| 10 | Correct voltage / current range on meter to the installation | | () | BS |
| 11 | Correct to ratio on CTs | | () | |
| 12 | Voltmeter terminations are insulated | | () | |
| 13 | Check that all meters are preset to zero | | () | |
| 14 | Correct indication labels applied | | () | |
| Indication Equipment | | | | |
| 15 | Correct colour | | () | BS |
| 16 | Correct voltage size with matching lamp attached | | () | |
| 17 | Correct operation eg. Push to test | | () | |
| 18 | Correct labelling | | () | |
| Terminal Blocks | | | | |
| 19 | Correct size to cable | | (✓) | BS |
| 20 | Correct colour coding | | (✓) | |
| 21 | Correct numbering | | (✓) | |
| 22 | Correctly mounted with lock ends | | (✓) | |
| 23 | Correct labels | | (✓) | |
| Neutral Links | | | | |
| 24 | Check that they are accessible | | (✓) | BS |
| 25 | Correct labelling | | (✓) | |
| 26 | Correct numbers stamped to match circuit identification | | (✓) | |
| 27 | Correct cabling to circuit identification | | (✓) | |
| 28 | Check that all neutral links & bar are insulated from the switchboard frame | | (✓) | |
| Earthing | | | | |
| 29 | Check that all main earth bar is correct size | | (✓) | BS |
| 30 | Check that the main earth is continuous | | (✓) | |
| 31 | Correctly labelled | | (✓) | |
| 32 | Continuous for CT wiring | | (✓) | |
| 33 | Check that all doors with equipment mount are electrically earth | | (✓) | |
| 34 | Check all frames are earthed | | (✓) | |
| Remarks/Remedial Action Required: | | | | |
| Remedial Actions Completed <input type="checkbox"/> Signature: Date: | | | | |
| Approved By: Brendan Stringer | | Checked By: Ben George | | |
| Signature: <i>[Signature]</i> | | Signature: <i>[Signature]</i> Date: 24/9/10 | | |
| Electrical Licence No. 114766 | | | | |
| All the above signatories certify that the Electrical switchboard work tested has been checked and tested in accordance with the prescribed procedure and that such work complies in every respect with the requirements of the Electricity Act 2002, AS3000 2007 and AS3008.1 1998 | | | | |

Inspection and Test Check List

Ref: SIQF 502
Date: 19 July 2007

| | | | | | | | | | |
|--|--|------------------------|----|-------------|-------|---------------|--------|---------------|------------|
| Switch W and Bond C | | Activity Description | | Hold Points | | Test Result | | By (Initials) | |
| Earthing Resistance & Continuity Test (Note all readings should be < .5 ohms) Make sure the MEN connection is removed and attach lead to main earth connection point than test with other lead between | | | | | | | | | |
| 1 | The frame of each section | | | | | | < .1 Ω | | Pass BS |
| 2 | The doors | | | | | | < .1 Ω | | |
| 3 | All mounting bolts to all equipment | | | | | | < .1 Ω | | |
| 4 | All brackets | | | | | | < .1 Ω | | |
| 5 | All earth links | | | | | | < .1 Ω | | |
| 6 | All bolts & threads for the mounting of escutcheon | | | | | | < .1 Ω | | |
| 7 | All gland plates | | | | | | < .1 Ω | | |
| 8 | All cable trays | | | | | | < .1 Ω | | |
| 9 | All earth connection | | | | | | < .1 Ω | | |
| 10 | Earth secondary of transformers and power supplies | | | | | | < .1 Ω | | |
| 11 | Earth surge diverters | | | | | | NA | | |
| 12 | Current transformers | | | | | | NA | | |
| Insulation Test | | Hold Points | | Test Result | | By (Initials) | | | |
| 1 | Make sure all control fuses and earths are removed from all electronic equipment before this test is carried out and Set insulation tester (meggar) to 500 volts before proceeding | | | | | | Pass | | BS |
| | • Red – White | | NA | | | | Ω | | |
| | • Red – Blue | | NA | | | | Ω | | |
| | • Red – Earth | | | | 1200M | | Ω | | |
| | • Red – Neutral | | | | 1200M | | Ω | | |
| | • White – Blue | | NA | | | | Ω | | |
| | • White – Earth | | NA | | | | Ω | | |
| | • White – Neutral | | NA | | | | Ω | | |
| | • Blue – Earth | | NA | | | | Ω | | |
| | • Blue – Neutral | | NA | | | | Ω | | |
| | • Red – White | | | | | | Ω | | |
| | • Red – Blue | | | | | | Ω | | |
| | • White – Blue | | | | | | Ω | | |
| | • Red – White | | | | | | Ω | | |
| 2 | If all readings are clear the insulation tester is to be set at 1000 volts then proceed with the following | | NA | | | | | | BS |
| Remarks/Remedial Action Required: | | | | | | | | | |
| Remedial Actions Completed <input type="checkbox"/> Signature: Date: | | | | | | | | | |
| Approved By: Brendan Stringer | | Checked By: Ben George | | | | | | | |
| Signature: BS | | Signature: BS | | | | | | | |
| Electrical Licence No. 114766 | | Date: 24/9/10 | | | | | | | |

All the above signatories certify that the Electrical switchboard work listed has been checked and tested in accordance with the prescribed procedure and that such work complies in every respect with the requirements of the Electricity Act 2002, AS3000 2007 and AS3008.1 1998

| Switch Board and Control Panels Construction Check List (SIQE 502) | | | | |
|--|---|---------------|-------------|--------------|
| Item | Activity Description | Hold Points | Checked | By (Initial) |
| 2.5 KV Test This test is used to prove all busbar construction | | | | |
| 1 | Make sure all control fuses and earths are removed from all electronic equipment before this test is carried out | NA | () | BE |
| 2 | All the following tests must be set at a 1 minute time period, result should be 0 Amps | | () | |
| 3 | Test between: <ul style="list-style-type: none">• Red – White• Red – Blue• Red – Earth• Red – Neutral• White – Blue• White – Earth• White – Neutral• Blue – Earth• Blue – Neutral | Passed | Test Result | By (Initial) |
| | | () | 0 A | |
| | | () | 0 A | |
| | | () | 0 A | |
| | | () | 0 A | |
| | | () | 0 A | |
| | | () | 0 A | |
| | | () | 0 A | |
| | | () | 0 A | |
| | | () | 0 A | |
| Supply Authority section | | | | |
| 1 | Check supply authority main isolator lockable in the on position | NA | () | BE |
| 2 | Check all doors before the Ci's. Or meters are lockable | | () | |
| 3 | Check where the neutral link is located for the site connection if metres are remotely mounted | | () | |
| 4 | Check where the earth link is located for the site connection if meters are remotely mounted | | () | |
| 5 | Check double insulated cable for POT fuses are less than 800 mm | | () | |
| 6 | Check double insulated cable are taken on line side of CIs | | () | |
| 7 | Check metre wiring is in building wire and correct size | | () | |
| 8 | Check if Ci meter wiring is in steel conduit when closer than 100mm to other conductors | | () | |
| 9 | Check there is no equipment connected before on the line side of meters or CIs (i.e., surge diverters) | | () | |
| 10 | Check list may vary if switch board is going interstate. Alter where applicable | | () | |
| Remarks/Remedial Action Required: | | | | |
| Remedial Actions Completed <input type="checkbox"/> Signature: Date: | | | | |
| Approved By: Brendan Stringer | | | | |
| Signature:  | Checked By: Ben George | | | |
| Electrical Licence No. 114766 | Signature:  | Date: 24/9/10 | | |

All the above signatories certify that the Electrical switchboard work listed has been checked and tested in accordance with the prescribed procedure and that such work complies in every respect with the requirements of the Electricity Act 2002, AS3000 2007 and AS3008.1 1998

| Item | Activity Description | Hold Points | Checked | By (Initial) |
|---|---|--|--------------------------------------|----------------------|
| Functional Test | | | | |
| Prior to connection of supply all inspection and test check lists must be completed | | | | |
| 1 | Point to point test on all cables as per schematic and single line drgs. (Leave spot for drawing, No's and Rev No's | | (✓) | |
| 2 | Check all Cts are not open circuit | NA | (✓) | |
| Connect supply (personal protection equipment must be used) | | | | |
| 3 | Check polarity of connection <ul style="list-style-type: none">• Red - White• Red - Blue• Red - Earth• Red - Neutral• White - Blue• White - Earth• White - Neutral• Blue -Earth• Blue - Neutral | NA NA NA 240 240 NA NA NA NA | V V V V V V V V | |
| 4 | Correct voltage / current range on meter to the installation | NA | | |
| 5 | Check functional operation of switchboard following specific construction issue drawings (leave spot for drawing No's and Rev No's | | ✓ | |
| 6 | Check operation of all RCD's < .0.3s | | 285 | |
| Pre delivery check list | | | | |
| 1 | Check all punch list items are complete | F.A.T | () | PM |
| 2 | Check if Compliance label is mounted and correct | | () | |
| 3 | Check if heat shrinks is supplied when necessary | | () | |
| 4 | Check all load bolts are supplied | | () | |
| 5 | Check if m.e.n is mounted after testing | | () | |
| 7 | Photos have been taken of every section and given to manager | | () | |
| 8 | Test reports have been photo copied and placed in the client folder and SJ Electric folder | | () | |
| 9 | As built drawings received back from drafting office , verify Rev No. | | () | |
| 10 | Manuals placed in client folder | | () | |
| 11 | Switch Board wrapped with delivery details supplied | | () | |
| 12 | As built drawings placed in client folder. (latest revision () | Copy of red lined marked Drawing () | | |
| Remarks/Remedial Action Required: | | | | |
| Remedial Actions Completed <input type="checkbox"/> Signature: Date: | | | | |
| Approved By: Brendan Stringer | | Checked By: Ben George | | |
| Signature: <i>PS</i> | | Signature: <i>SG</i> | | Date: 24/9/10 |
| Electrical Licence No. 114766 | | | | |
| All the above signatories certify that the Electrical switchboard work listed has been checked and tested in accordance with the prescribed procedure and that such work complies in every respect with the requirements of the Electricity Act 2002, AS3000 2007 and AS3008.1 1998 | | | | |



ABN 86 673 835 011

Test copy
GT Electric
Brendan Stringer 114766
24109110

ROYSTON ST, BROOKFIELD

P0404

PRESSURE GAUGE SWITCHBOARD

ELECTRICAL DRAWINGS INDEX

| DWG N°. | TITLE | SHEET | REVISIONS |
|------------------|--|-------|-----------|
| 436/4/9-0788-001 | ELECTRICAL DRAWING INDEX | 01 | A |
| 436/4/9-0788-002 | POWER DISTRIBUTION SCHEMATIC DIAGRAM | 02 | A |
| 436/4/9-0788-003 | DIGITAL INPUTS AND OUTPUTS TERMINATION DIAGRAM | 03 | A |
| 436/4/9-0788-004 | ANALOG INPUTS AND OUTPUTS TERMINATION DIAGRAM | 04 | A |
| 436/4/9-0788-005 | SWITCHBOARD GENERAL ARRANGEMENT | 05 | A |
| 436/4/9-0788-006 | SWITCHBOARD CONNECTION DETAILS | 06 | A |
| 436/4/9-0788-007 | SWITCHBOARD EQUIPMENT LIST | 07 | A |
| 436/4/9-0788-008 | SWITCHBOARD CABLE SCHEDULE & ABEL SCHEDULE | 08 | A |
| 436/4/9-0788-009 | SWITCHBOARD SITE LAYOUT | 09 | A |
| 436/4/9-0788-010 | SPARE | | |

| DRAWING VARIABLE | |
|------------------------------|-------------------|
| VARIABLE / LAYER | VALUE / ON or OFF |
| Site ID (001) | P0404 |
| Site Name (002) | ROYSTON ST |
| Substation Name (003) | BROOKFIELD |
| PT Gauge No (004) | P0404 |
| PT Gauge No (005) | |
| Flowmeter No (006) | |
| Regulator No (007) | DR550 07A02-00 |
| Drainage No (008) | 436/4/9-0788- |
| Site Function (009) | PRESSURE GAUGE |
| Antenna Mast Height (100) | 4.0 |
| 11 Main RVV fitted | no |
| 121 Bypass RVV fitted | no |
| 21 Radio fitted | yes |
| 211 Side Antenna Mast fitted | yes |
| 212 Rear Antenna Mast fitted | no |
| 31 PSTN Modem fitted | no |
| 32 GSM Modem fitted | no |
| 41 Flowmeter fitted | no |
| 511 Pressure Gauge fitted | yes |
| 521 Pressure Gauge 2 fitted | no |
| 61 Solar Panel fitted | no |
| 71 RLU Modem fitted | no |
| 72 RLU Panel fitted | yes |
| 73 RLU Modem fitted | yes |

ELECTRICAL AS BUILT DETAILS


REV COMPANY
ELECTRICIAN
LICENCE No.
DATE: -

SHEET 01

FOR CONSTRUCTION

No Title
Drawing No. 436/4/9-0788-001
Revision 1
Date 14 July 2010 10:43:43 AM


DRAWN BY
K. WHITEGOWN
CHECKED BY
A. CHAVEZ-FLUJENCIA
DATE
14 JUL 2010
F.P.E.O. No.
DATE
CLIENT DELEGATE
SITE
P0404
ELECTRICAL INSTALLATION
TITLE
ELECTRICAL DRAWING
SHEET No.
436/4/9-0788-001
Last Saved By 04080 on Wednesday, 14 July 2010 10:43:43 AM

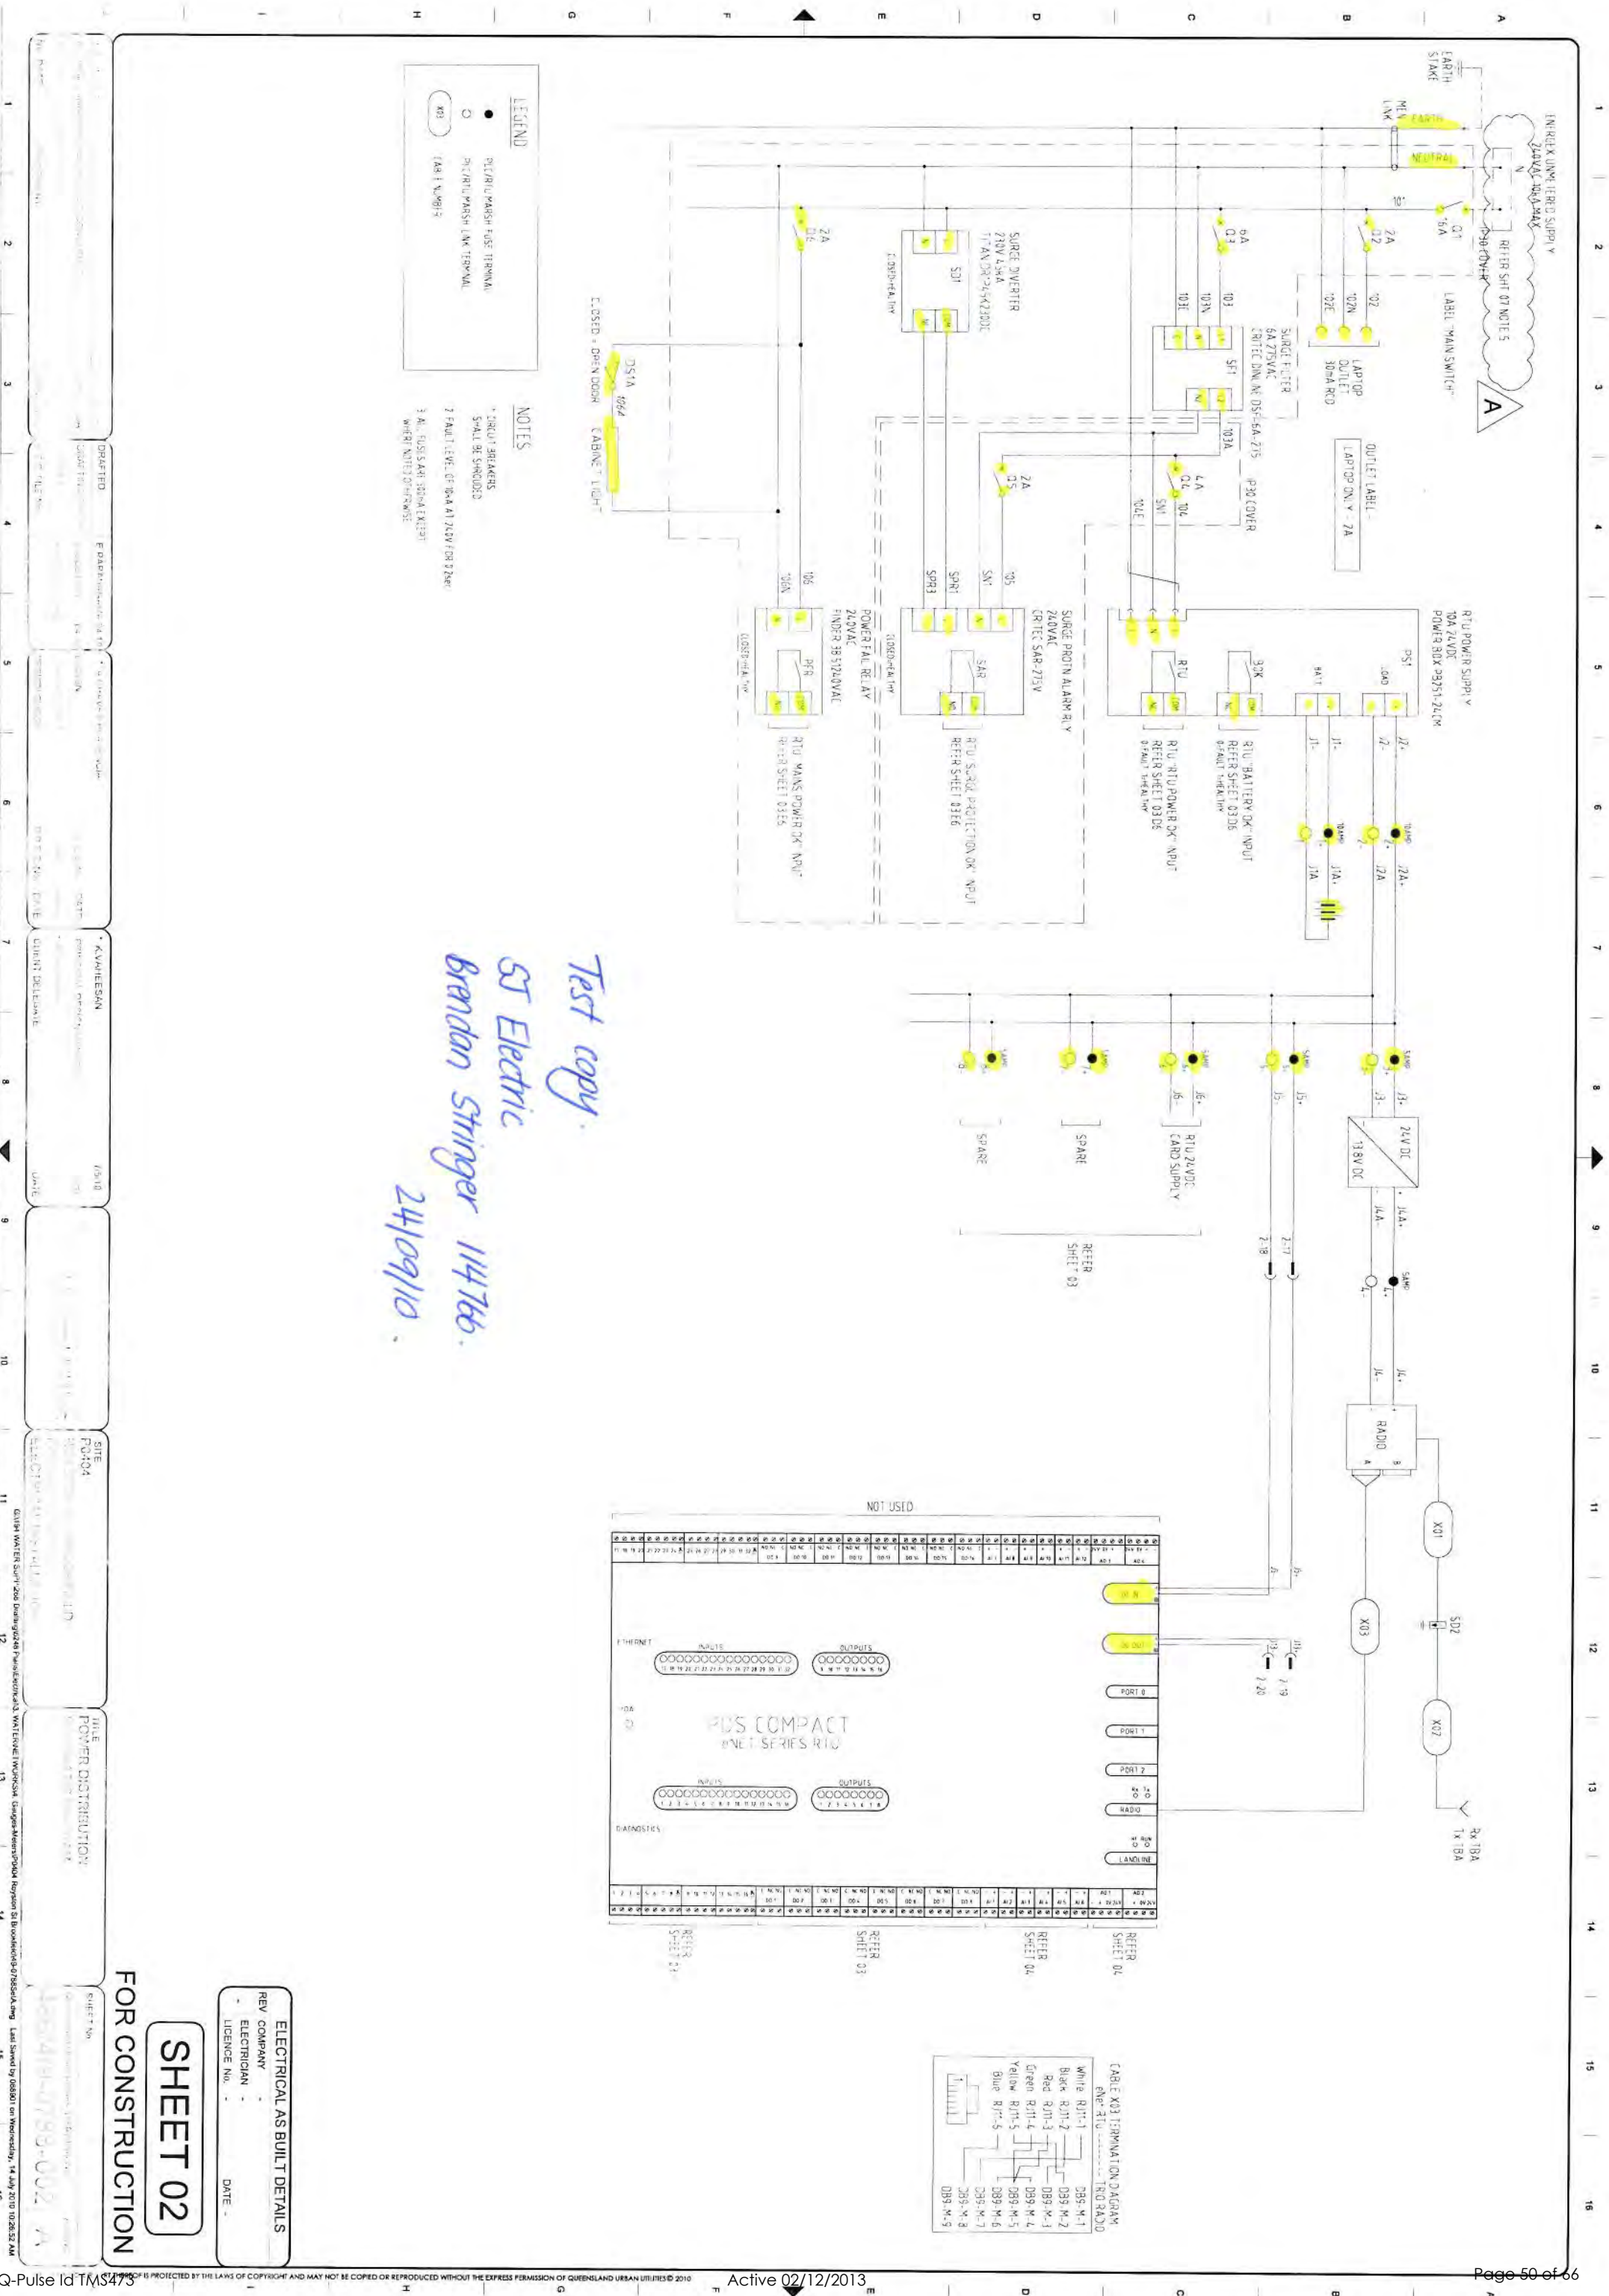

FOR CONSTRUCTION

SHEET 02

ELECTRICAL AS BUILT DETAILS
REV COMPANY
ELECTRICIAN
LICENCE NO.
DATE

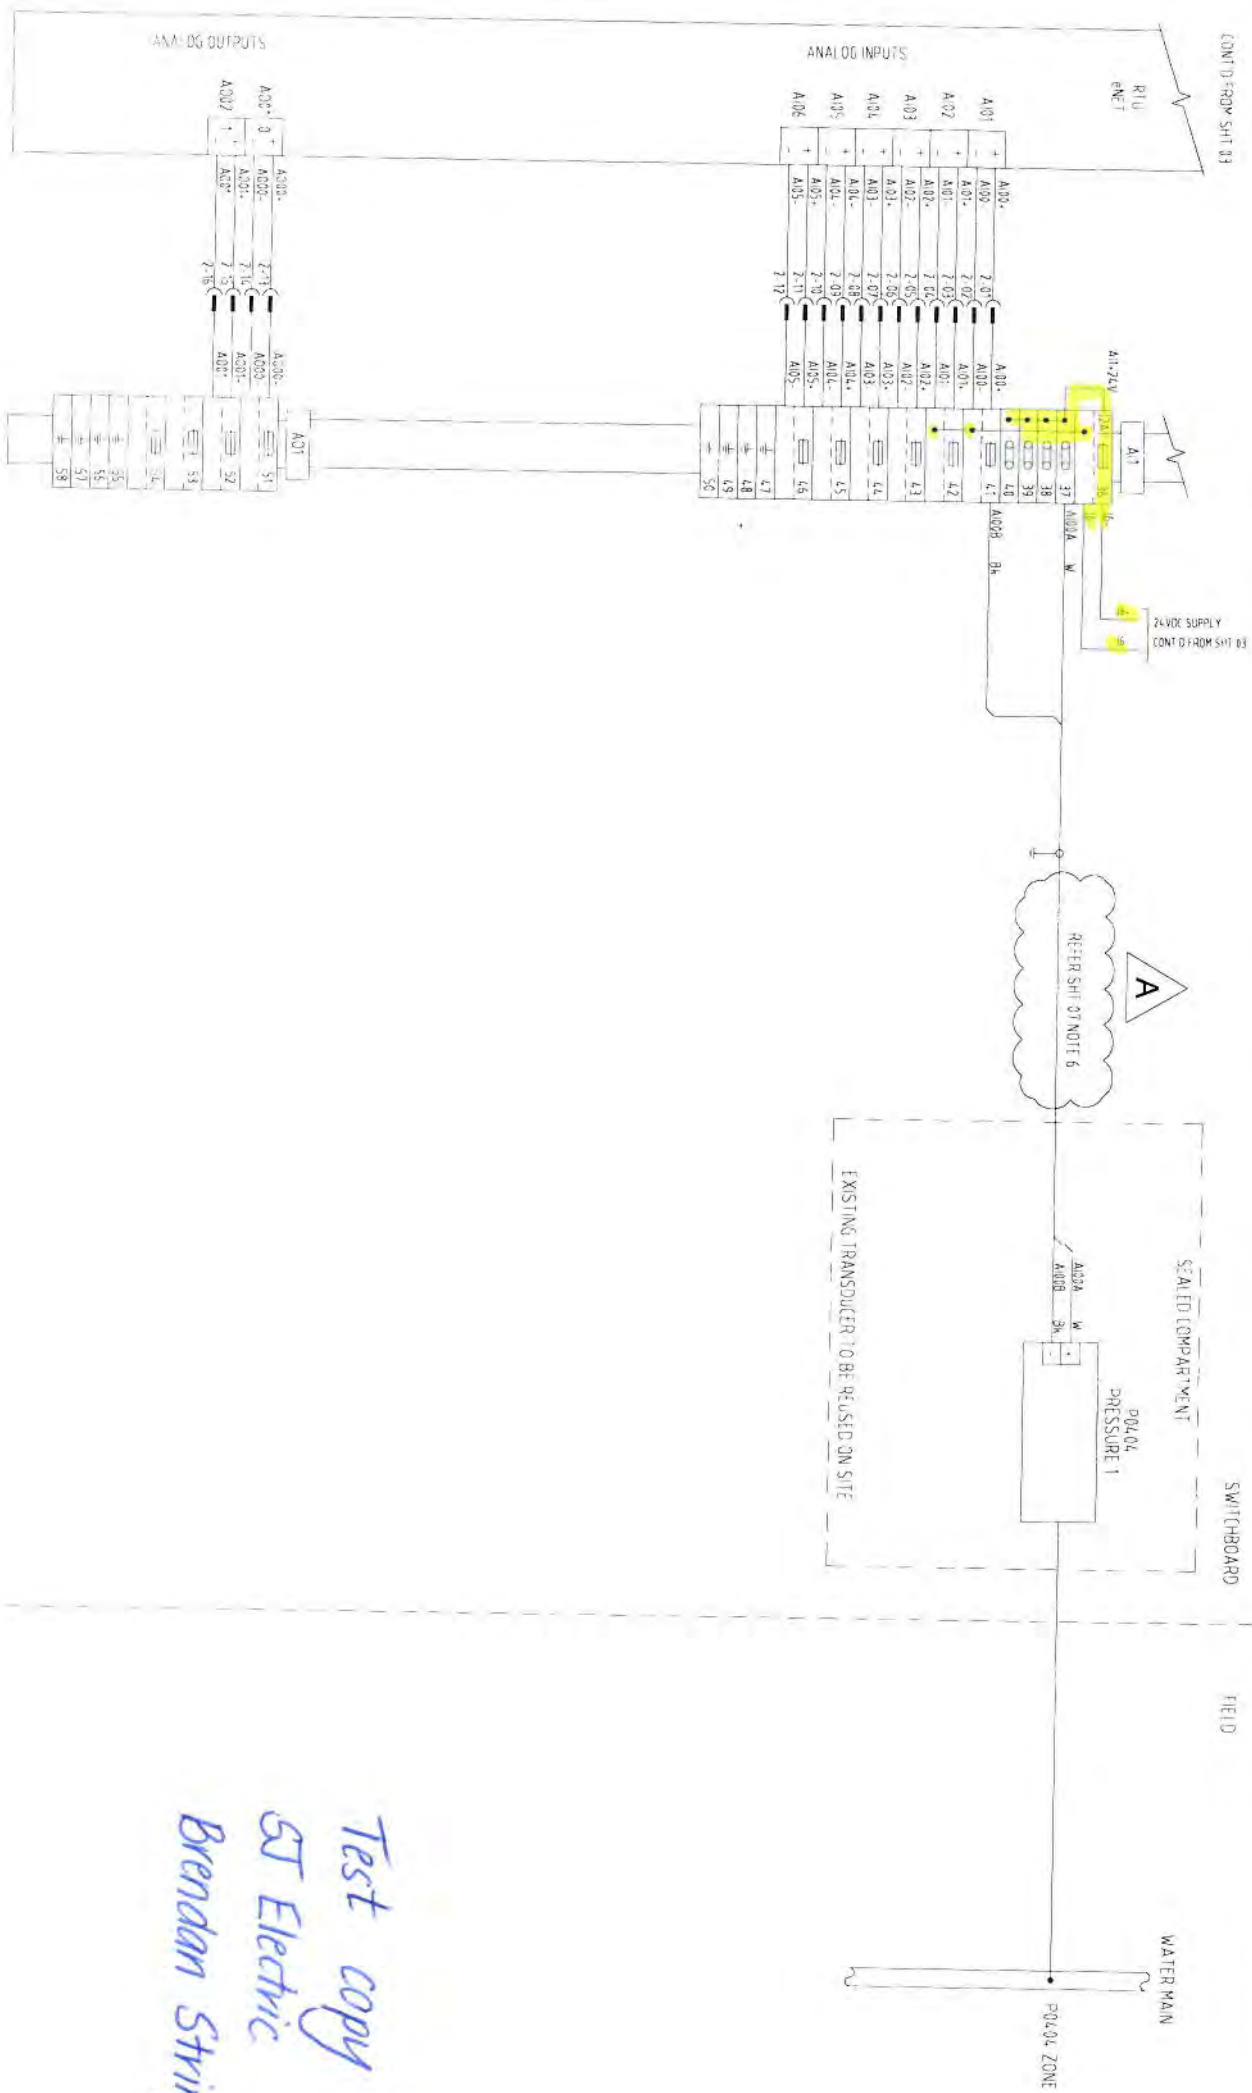

Test copy
ST Electric
Brendan Stringer 114766
24/09/10


NOTES

* ALL FUSES ARE 500mA EXCEPT WHERE NOTED OTHERWISE

| ELECTRICAL AS BUILT DETAILS | | | |
|-----------------------------|---------|-------------|------|
| REV | COMPANY | ELECTRICIAN | DATE |
| - | - | - | - |
| LICENCE No. | | | |

SHEET 04


FOR CONSTRUCTION

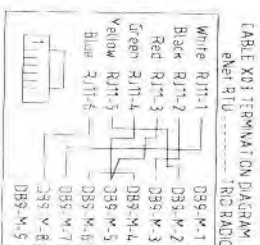

SHEET 02

FOR CONSTRUCTION

Q-Pulse Id TMS473

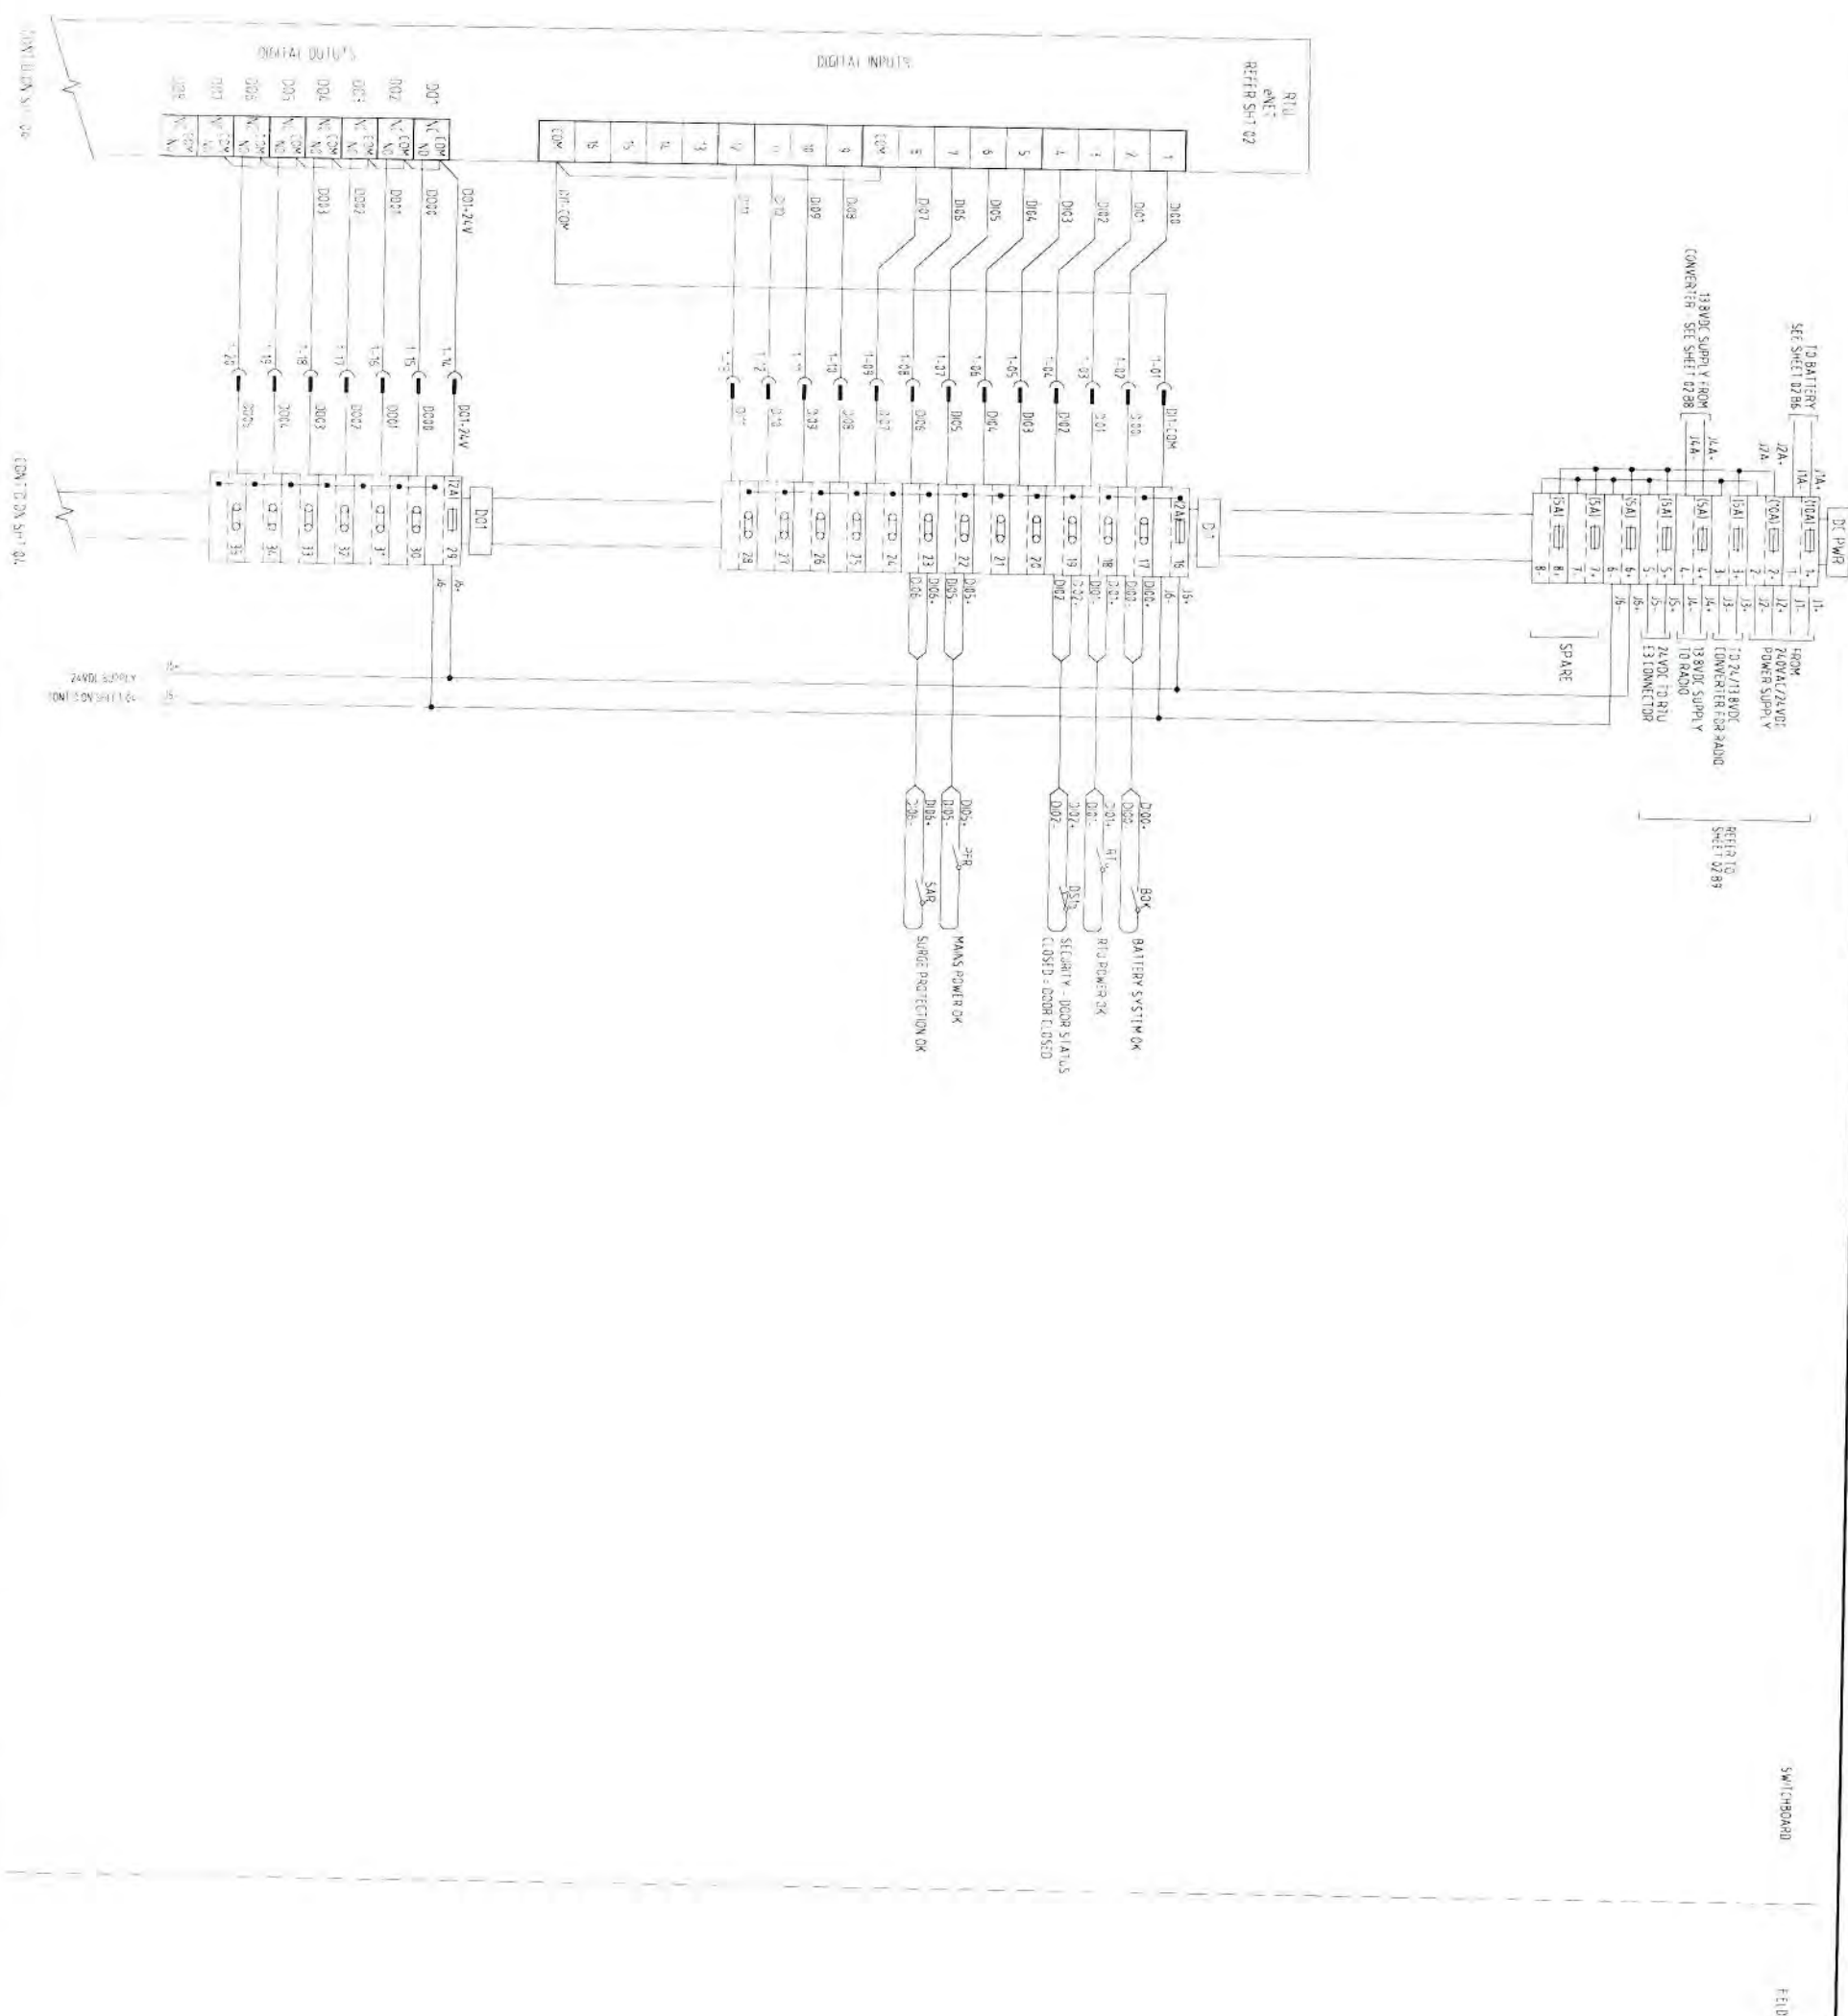

NOTES

1. ALL FUSES ARE 500MA EXCEPT WHERE NOTED OTHERWISE

ELECTRICAL AS BUILT DETAILS

| | | | |
|-------------|-------------|--------|-------------|
| REV | COMPANY | - | ST ELECTRIC |
| - | ELECTRICIAN | - | STRINGER |
| LICENCE No. | - | 114766 | DATE - 24-5 |

FOR CONSTRUCTION

[illegible]

WITHOUT THE EXPRESS

LAWS OF COPYRIGHT AND

PROJECTED R

S473

TN

e Id TMS


e lc

uls



uls

uls

PLAN VIEW

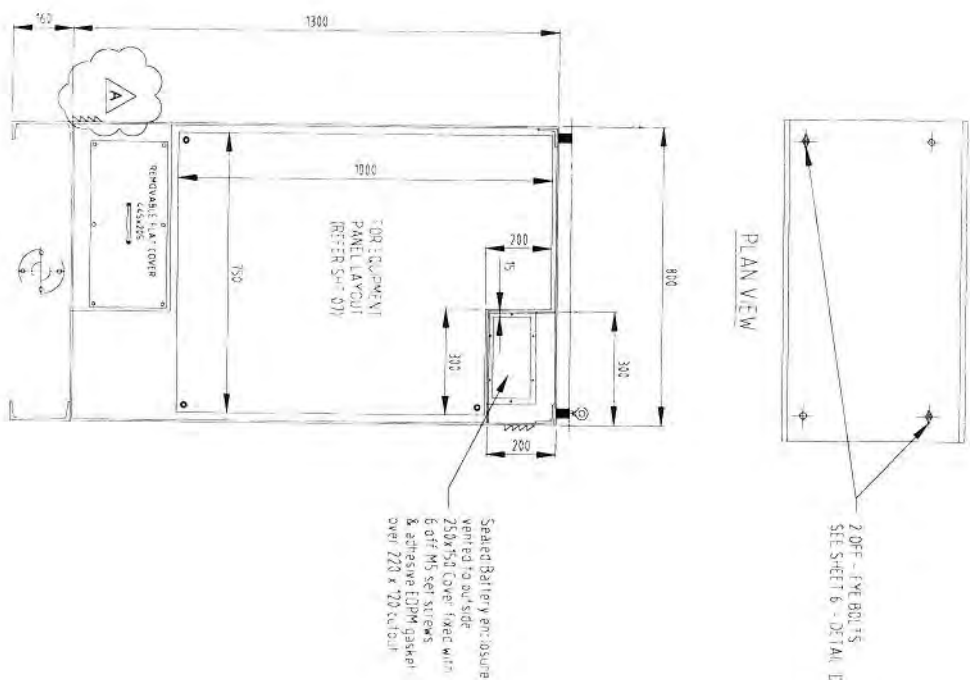


SECTION D-D

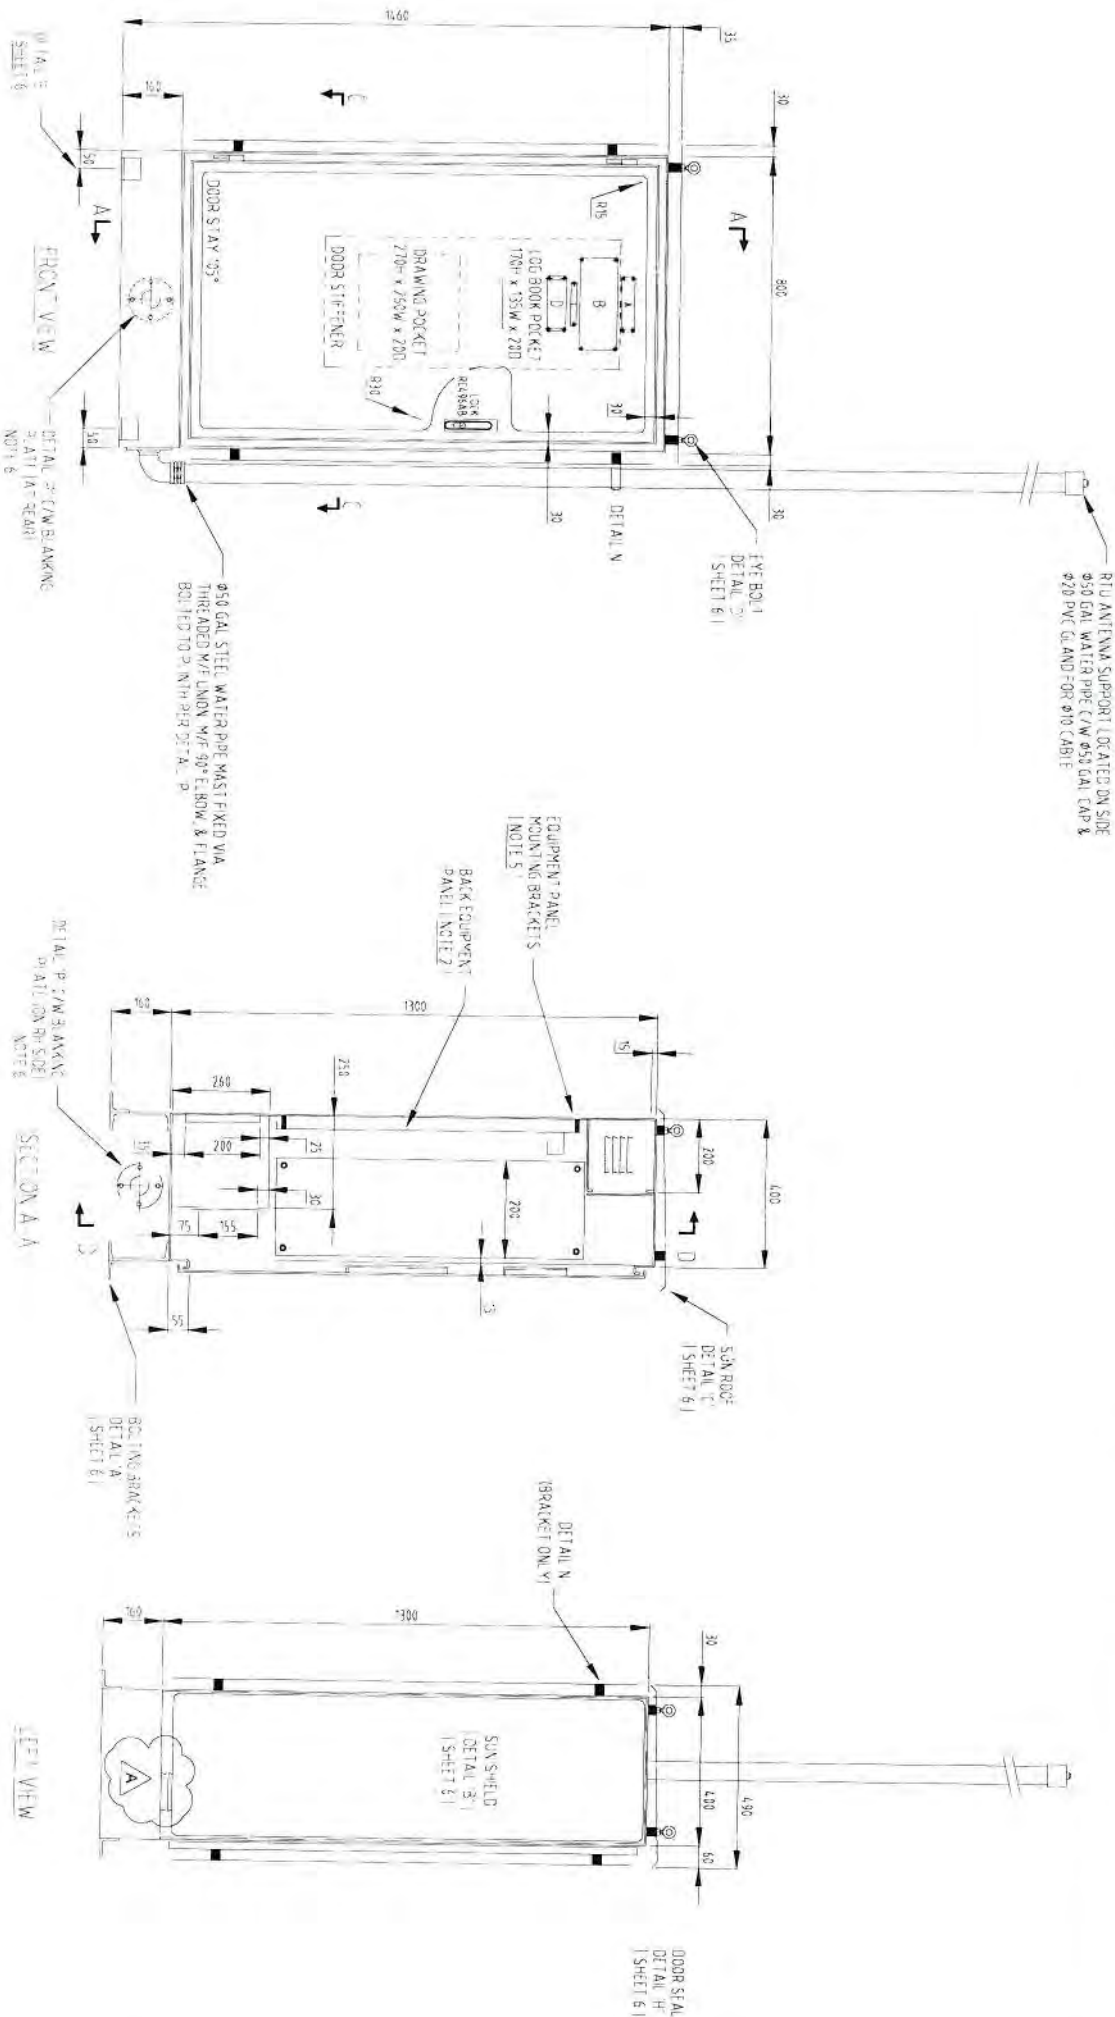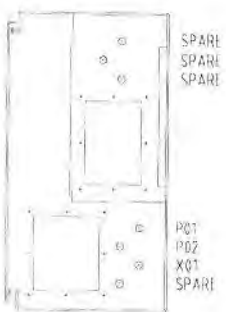


GENERAL ARRANGEMENT

SCALE 1/10 ON A SIZE PRINT

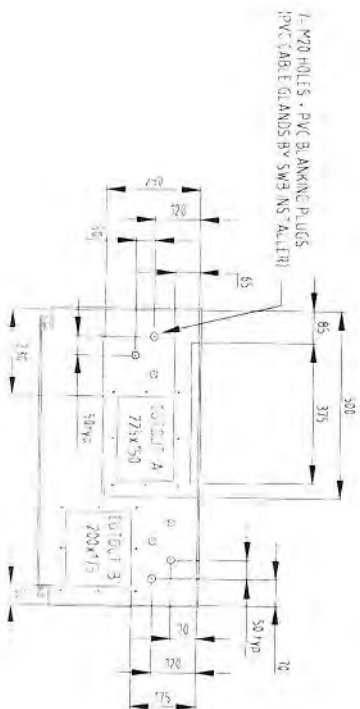

SECTION C-C

SEE DETAIL A

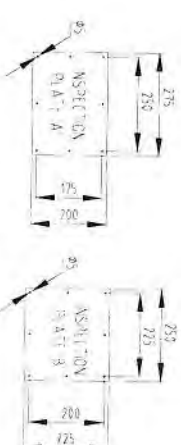

NOTES

1. REFER TO SHEET 06 FOR THE SWITCHBOARD CONSTRUCTION DETAILS
2. SIDE & BACK EQUIPMENT PANELS TO BE MOUNTED 40mm OFF THE SIDE & BACK WALLS AND OPEN AT BOTH THE TOP AND BOTTOM TO ALLOW FOR AIR FLOW
3. REFER TO SHEET 07 FOR THE EQUIPMENT PANEL LAYOUT DETAIL AND EQUIPMENT SCHEDULE
4. BACK & SIDE GEAR MOUNTING BRACKETS 16 OFF TOTAL (125 X 25 X 31TYP)
5. THIS DRAWING TO BE READ IN CONJUNCTION WITH SHEET 06 FOR DIMENSIONS
6. ANTENNA PANEL MOUNTING DETAILS - WHERE NO ANTENNA IS TO BE INSTALLED PROVIDE Ø20 BLANKING PLATES WITH GASKETS TO COVER SIDE AND REAR ANTENNA FLANGE DRILLING POSITIONS

SHEET 05

ELECTRICAL AS BUILT DETAILS
REV COMPANY - ST ELECTRIC
ELECTRICIAN - STRANDEE
LICENCE NO. - 114766 DATE - 24-9

FOR CONSTRUCTION

TITLE

SITE

7/2010

K. V. H. E. S. A. N.


E. P. A. R. A. N. A. G. A. M. A. 04.10

UNITS

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

IV. C.3

1. LABELS FITTED ADJACENT ASSOCIATED EQUIPMENT
2. LABELS OBSERVED FROM SWITCHBOARD WIRINGS ARE RELIABLE TO ADJACENT EQUIPMENT
3. INDICATED CONNECTIONS TO THE MAIN SUPPLY AND THE MAINS ARE IDENTICAL
4. USE OF MAINS AND MAINS TO THE MAINS ON OR OFF FOR PLANT
5. MAINS AND MAINS WIRING TO THE MAINS ARE IDENTICAL
6. FACTORY WIRING PERFORMS IDENTICAL WIRING TO MAINS AND MAINS

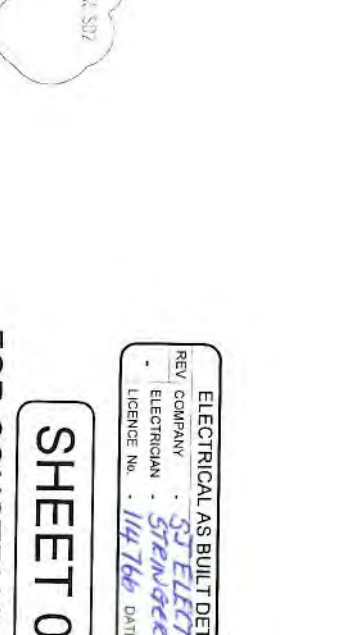

SHEET 07

| ELECTRICAL AS BUILT DETAILS | |
|-----------------------------|-------------|
| REV | COMPANY |
| - | ELECTRICIAN |
| 1 | LICENCE No. |

[illegible][illegible]


| REF | TEXT (QDET = / MAINTEN.) | TEXT (N° / TEXT LINE 2) |
|-----|----------------------------|---------------------------|
| 01 | 10m / 4m / W3W TRAF-Q, YTE | MAN SWITCH - / Q1 - 16A |
| 04 | 4m / W3W TRAF-Q, YTE | S01 - SURGE OVERTHER |
| 05 | 4m / W3W TRAF-Q, YTE | Q2 - APTOP CPO - 2A |
| 06 | 4m / W3W TRAF-Q, YTE | 2APTULAPTOP CPO |
| 07 | 4m / W3W TRAF-Q, YTE | Q3 - SURGE FILTER - 6A |
| 09 | 4m / W3W TRAF-Q, YTE | S01 - SURGE FILTER |
| 09 | 4m / W3W TRAF-Q, YTE | Q4 - 2LV PWR SUPPLY - 4A |
| 09 | 4m / W3W TRAF-Q, YTE | Q5 - SURGE ALM RLY - 2A |
| 11 | 4m / W3W TRAF-Q, YTE | SAR - SURGE ALM RLY |
| 12 | 4m / W3W TRAF-Q, YTE | Q6 - 2QWR FAIL RLY - 2A |
| 13 | 4m / W3W TRAF-Q, YTE | PRF - POWER FAIL RLY |
| 14 | 4m / W3W TRAF-Q, YTE | NEUTRAL |
| 15 | 4m / W3W TRAF-Q, YTE | EARTH |
| 16 | | |
| 19 | 4m / W3W TRAF-Q, YTE | P57 - 2LVDC/DC PWR SUPPLY |
| 20 | 4m / W3W TRAF-Q, YTE | 2LV18VDC CONVERTER |
| 21 | 4m / W3W TRAF-Q, YTE | 3A THERM COMPARTMENT |
| 22 | 4m / W3W TRAF-Q, YTE | R10 |
| 24 | | |
| 25 | | |
| 28 | | |
| 29 | | |
| 45 | | |

[illegible]

| Label | Text | Text Height | Paint Color Lettering | Dimensions | Qty |
|-------|--|-------------|-----------------------|------------|-----|
| A | POLE | 28mm | BLACK | 150x35 | 1 |
| B | WARNING: THIS SITE IS MONITORED BY THE CONTROL ROOM OPERATOR PLEASE INFORM THE OPERATOR BEFORE ISOLATING STATION | 8mm | BLACK | 250x100 | 1 |
| C | DAANGER ZIEV | 8mm | RED | 120x75 | 1 |
| D | REMAINDER THIS IS AN UNMETERED SUPPLY AND ANY ALTERATIONS TO THESE CIRCUITS MUST BE NOTIFIED TO SUPPLY AUTHORITY BEFORE DEPARTMENT | 3mm | BLACK | 100x100 | 1 |

SHEET 08

6.194 WATERS SUPPLY JOB Undergraduate Thesis MONITORING SURVEILLANCE SYSTEM FOR THE Koyunlu Dam, Turkey. Last saved by 080801 on Wednesday, 14 July 2010 10:28:52 AM

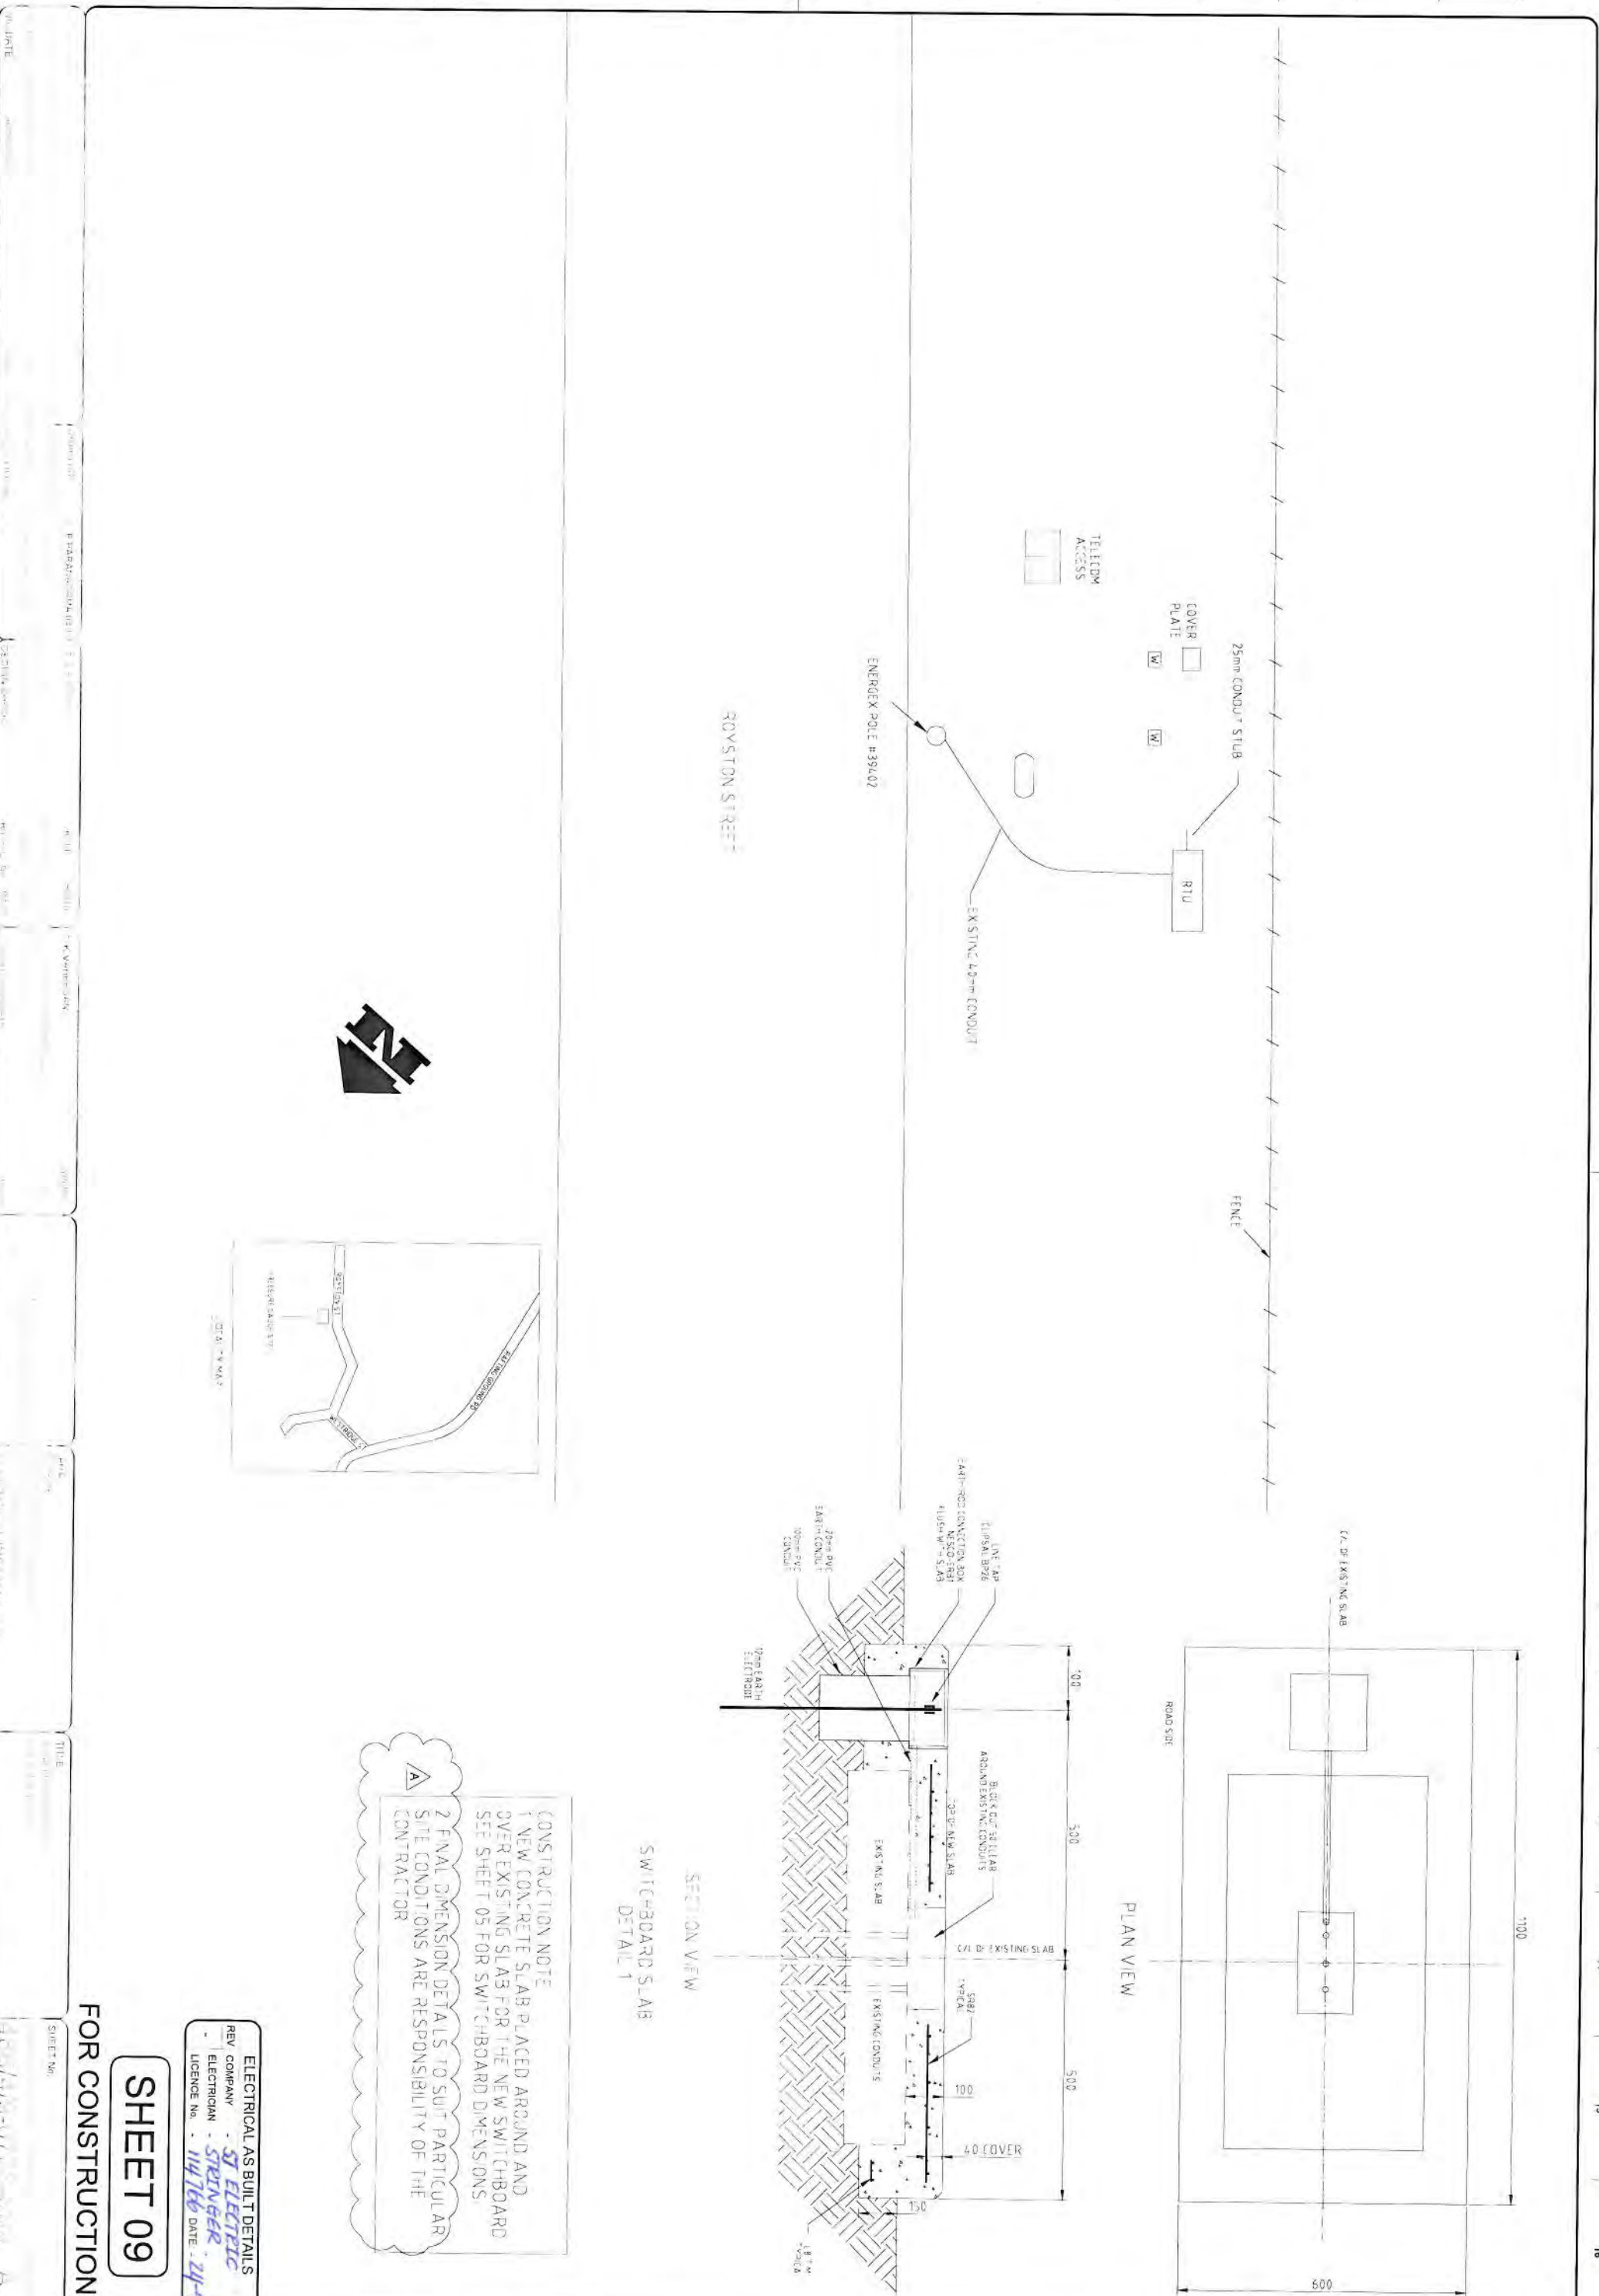

Point to point copy

ST Electric

Brendan Stringer 114766

BS

24/09/10



QUEENSLAND
Urban Utilities

ABN 86 673 835 011

P0404

ROYSTON ST, BROOKFIELD PRESSURE GAUGE SWITCHBOARD

ELECTRICAL DRAWINGS INDEX

| DWG N° | TITLE | SHEET | REVISIONS |
|------------------|--|-------|-----------|
| 485/L/9-0788-001 | ELECTRICAL DRAWING INDEX | 01 | A |
| 485/L/9-0788-002 | POWER DISTRIBUTION SCHEMATIC DIAGRAM | 02 | A |
| 485/L/9-0788-003 | DIGITAL INPUTS AND OUTPUTS TERMINATION DIAGRAM | 03 | A |
| 485/L/9-0788-004 | ANALOG INPUTS AND OUTPUTS TERMINATION DIAGRAM | 04 | A |
| 485/L/9-0788-005 | SWITCHBOARD GENERAL ARRANGEMENT | 05 | A |
| 485/L/9-0788-006 | SWITCHBOARD CONSTRUCTION DETAILS | 06 | A |
| 485/L/9-0788-007 | SWITCHBOARD EQUIPMENT LIST | 07 | A |
| 485/L/9-0788-008 | SWITCHBOARD LABEL SCHEDULE & LABEL SCHEDULE | 08 | A |
| 485/L/9-0788-009 | SWITCHBOARD SITE LAYOUT | 09 | A |
| 485/L/9-0788-010 | SPARE | | |



| DRAWING VARIABLE | |
|------------------------------|-------------------|
| VARIABLE / LAYER | VALUE / ON or OFF |
| STE ID: 101 | P0404 |
| Street Name: 102 | ROYSTON ST |
| Substation Name: 103 | BROOKFIELD |
| PS Gauge No: 104 | P0404 |
| PS Gauge No: 105 | |
| Transformer No: 106 | |
| Reduction No: 107 | DR000-07402-20 |
| Drawing No: 108 | 485/L/9-0788- |
| Site Function: 109 | PRESSURE GAUGE |
| Antenna Mast Height: 110 | 4.0 |
| 11 Man entry fitted | no |
| 12 1 Bypass entry fitted | no |
| 21 Radio fitted | yes |
| 211 Side Antenna Mast fitted | yes |
| 212 Rear Antenna Mast fitted | no |
| 31 PSTN Modem fitted | no |
| 32 GSM Modem fitted | no |
| 41 Flowmeter fitted | no |
| 511 Pressure Gauge fitted | yes |
| 521 Pressure Gauge 2 fitted | no |
| 61 Sample Pump fitted | no |
| 71 RTU - Modem fitted | no |
| 72 RTU - Eng fitted | yes |
| 73 RTU Display fitted | yes |

| | |
|-----------------------------|-------|
| ELECTRICAL AS BUILT DETAILS | |
| REV COMPANY | DATE: |
| ELECTRICIAN | |
| LICENCE No. | |

SHEET 01

FOR CONSTRUCTION

| | | | | | |
|---|--------------|------------------------------|------------------------------------|------------------------------|------------------------------|
| PROJECT: ROYSTON ST, BROOKFIELD | DRAWN: AND | DRAFTED: E. PARANAGAMA 04/10 | DESIGNED: A. CHAVEZ PLASENCIA | REVIEWED: K. VAIHEGAN | SHEET: 01 |
| DATE: 24/09/10 | SCALE: 1:100 | PROJECT NO: 485/L/9-0788-001 | CLIENT: URBAN UTILITIES | CLIENT DELEGATE: [Signature] | SITE: ROYSTON ST, BROOKFIELD |
| PROJECT DESCRIPTION: PRESSURE GAUGE ELECTRICAL INSTALLATION | | | TITLE: ELECTRICAL DRAWING INDEX | | |
| DRAWING NO: 485/L/9-0788-001 | | | SHEET NO: 01 | | |
| DATE: 24/09/10 | | | LAST SAVED: 04/09/2010 10:28:32 AM | | |

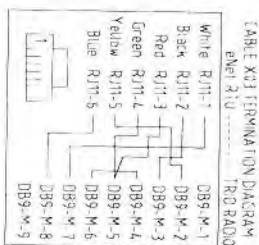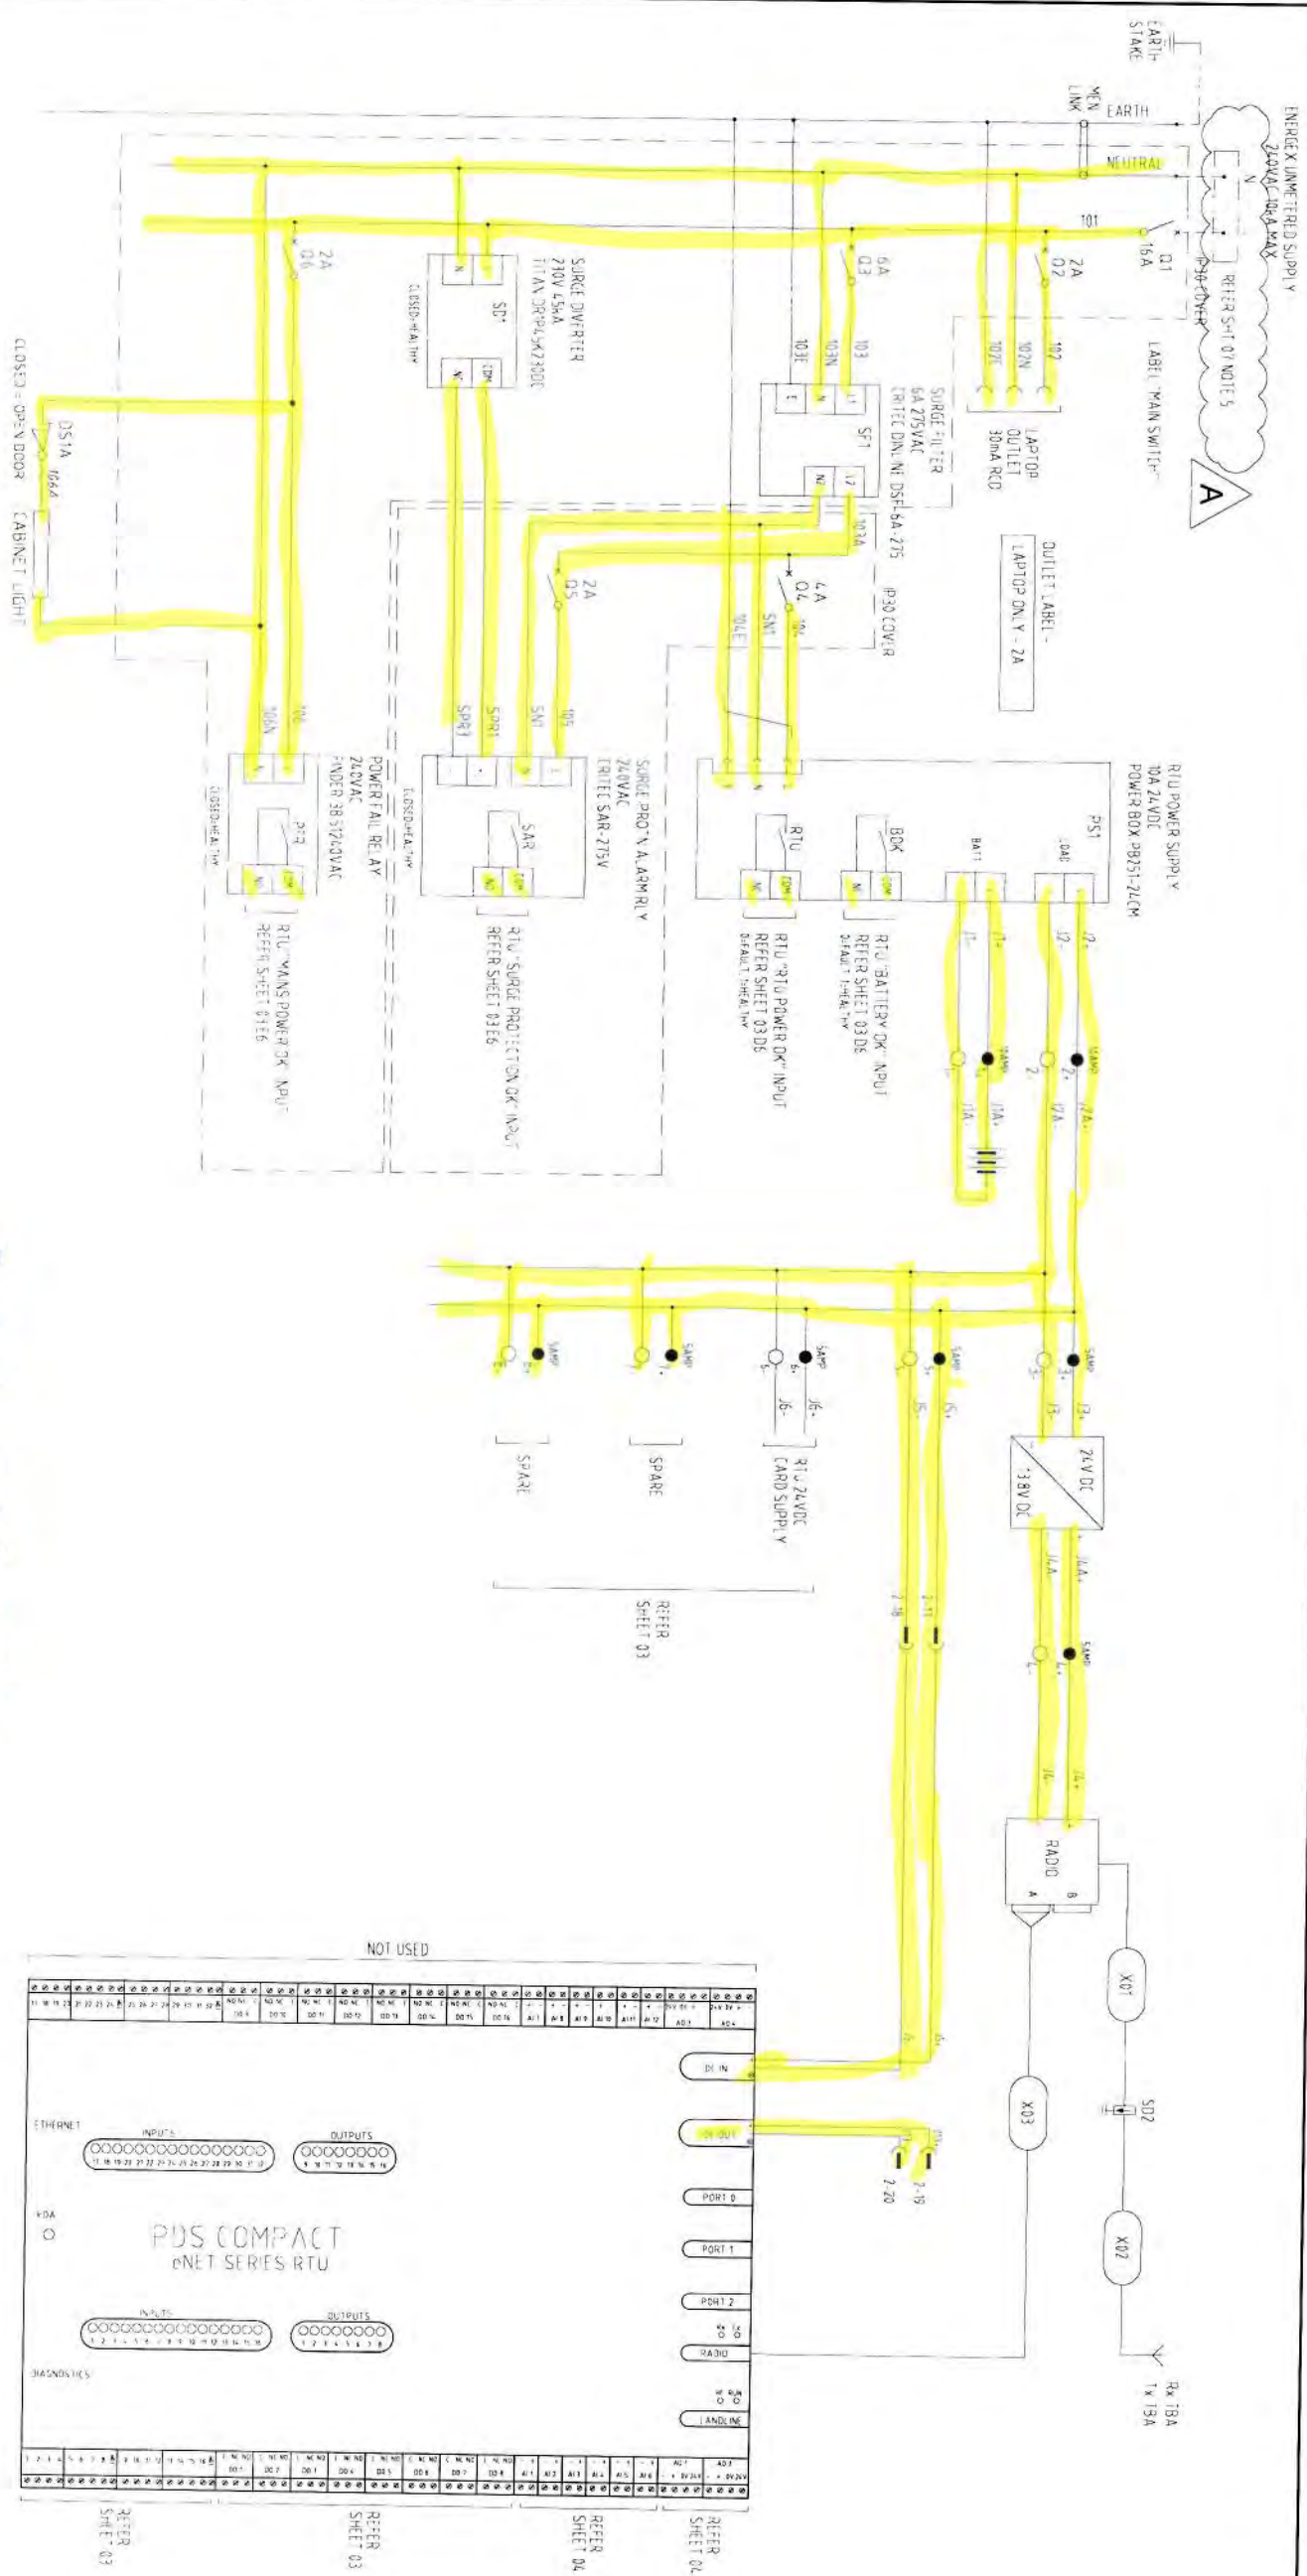

| ELECTRICAL AS BUILT DETAILS | | | |
|-----------------------------|-------------|---|---------|
| REV | COMPANY | | |
| - | ELECTRICIAN | - | |
| | LICENCE No. | - | DATE: - |

SHEET 02

FOR CONSTRUCTION

SHEET No. 486/4/0-0788-002 A
City and County of Los Angeles, California
AMEND




SHEET 03

SHEET No.

485/4/9-0788-003

15 16



ELECTRICALS BUILT DETAILS

| | | |
|-----|-------------|---|
| REV | COMPANY | - |
| - | ELECTRICIAN | - |
| - | LICENCE NO. | - |
| - | DATE | - |

FOR CONSTRUCTION

EXPERIA
The World's Office Solution
800-473-0788 • A

5. COMPLIANCE CERTIFCATES



Ref: Test Certificate P0404

TEST CERTIFICATE

SJ Electric (Qld) Pty. Ltd.
19 Elliot Street.
Albion Qld. 4010
R.E.C. 7623

Attention: Wendy Wong

Level 2 TC Beime Centre, 315 Brunswick Street Mall, Fortitude Valley Q 4006

Work performed for Brisbane Water at PO404 Royston Street Brookfield 4069 under contract
BW: 70103-048 (SJ Electric Job Number WT400106)

Installation Tested / Equipment Tested

- New PRV switchboard
- New main earth
- Earth bonding to main earth link and all switchboard components.

All supporting test sheets attached.

Test Date
3/11/10

For the electrical installation, this certificate certifies that the electrical installation to the extent it is affected by the electrical work has been tested to ensure it is electrically safe and is in accordance with the requirements of the wiring rules and the electrical safety regulation 2002. C.J. Holmes (endorsee to electrical contracting license 7623)

For the electrical equipment, this certificate certifies that the electrical equipment, to the extent it is affected by the electrical work, is electrically safe. C.J. Holmes (endorsee to electrical contracting license 7623)

Signed.

A handwritten signature in black ink, appearing to be 'CJH', is written over the 'Signed.' text.